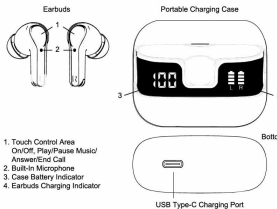


Date: 08 06 2026
Product: EP-0744 IM

Size: 222.75(W) x 105(H)mm

ZEEVA
INT LTD

FRONT SIDE

	Product Overview  Package Contents 1(One) Pair Earbuds 1(One) Portable Charging Case 1(One) USB Type-C Charging Cable 1(One) Instruction Manual Specifications Driver Diameter: 13 mm Impedance: 32 Ohms Frequency Response: 20 Hz - 20 kHz Sensitivity: 98 dB +/- 3 dB Power Supply: Li-Ion Battery 3.7V 30 mAh Per Earbud Charging Case Battery Capacity: 500 mAh USB Type-C Charging Cable Length: 11.81in. (30cm) USB Type-C Charging Cable Rating: Max. 5VDC, 5W Bluetooth Range: 32 Feet Bluetooth Version: 5.4 Total Playtime: 24 Hours Charging Time: <2 Hours CAUTION: FOR YOUR SAFETY , the charging cable included with this item is intended for use with this product only.	Power On/Off Power On Press and hold the touch control area of earbuds for 3 seconds and the LED will flash. Power Off Press and hold the touch control area of earbuds for 5 seconds and the LED will be off. Pair the wireless earbuds with your mobile device 1. Keep the distance between the earbuds and mobile device within 32.8 feet. 2. De-activate the Bluetooth function on your mobile device. 3. Put the earbuds back to charging case before use. 4. Take both earbuds out from charging case and wait for 3 to 5 seconds for auto pairing. 5. Activate the Bluetooth function on your mobile device and select "EP-0744 TWS" from the list shown. *Attention: If the auto pairing is not successful, manual pairing between earbuds is essential by following below procedures: 1. Make sure the earbuds are charged. 2. De-activate the Bluetooth function on your mobile device. (If you had been paired the earbuds to some other mobile device(s) nearby, please sure to de-activate those device(s) too). 3. Power on both earbuds simultaneously by press and hold the button for 3 seconds and wait for 3 to 5 seconds for auto pairing. (Keep the Bluetooth function off on your mobile device before this operation.) 4. Activate the Bluetooth function on your mobile device and select "EP-0744 TWS" from the list shown. Reconnect the wireless earbuds to your mobile device When powered on, the wireless earbuds will automatically connect with the last successfully paired device. Disconnect the wireless earbuds from your mobile device Power off the wireless earbuds; or Switch off the Bluetooth on your mobile phone; or Leave the earbuds 60 ft away from your mobile phone or further.
--	---	---

BACK SIDE

Answer / Reject a call When receive a call, press the touch control area (on either earbud) to accept the call, or answer the call normally via your mobile phone. Press and hold the touch control area 2 seconds to reject it. End a call To end the call, just press the touch control area at any side of earbud with beep sound to end it. Functions Pause / Play Music: Press on Left or Right touch control area. Go back to previous song: Double press on Left side touch control area. Advance to next song: Double press on Right side touch control area. Voice Assistant: Press and hold on Left or Right touch control area for 2 seconds. Charging your earbuds 1. Open the charging case cover. 2. Insert the earbuds into the charging case. 3. The earbuds will start the charge automatically. 4. Earbuds Charging Indicator will be flashing when charging. 5. Once fully charged, the Earbuds Charging Indicator will be off. Recharge Charging Case A. For your safety, please always use appropriate 5V output charger/adaptor to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product. 1. Use the USB Type-C charging cable provided with the packaging. 2. Connect the USB Type-C plug to USB Type-C charging port on the charging case, then connect the USB plug to a wall adapter to begin charging. 3. The last digit of the Case Battery Indicator will be flashing during charging. 4. Once fully charged, the Case Battery Indicator will stop flashing. 5. The Earbuds Charging Indicator will be flashing during the earbuds are charging and will be off after fully charged. NOTE: • You must select a qualified charger from a regular manufacturer. • You must charge the charging case and earbuds if it has been not used for more than 6 months. 	FAQ If the wireless earbuds cannot be paired with your device, please try the following: Ensure that your earbuds are in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated. If the wireless earbuds will not turn on: Make sure the earbuds are fully charged. Make sure the protective stickers are removed from the earbuds. Can I change the battery for the earbuds and the charging case? The wireless earbuds and the charging case use a built-in non-detachable battery which cannot be removed. If the charging case cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works. A. Safety instructions for the lithium battery and charging the product -The input voltage to the product is 5VDC, 1A. -In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/adaptor for charging the product. -Only charge the product at ambient temperatures between 10°C/ 50°F and 40°C/ 104°F. -Do not heat above 70°C/158°F, eg. Do not expose to sunlight or throw into fire. -Switch off the product after use. -Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. -In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.	FCC Statement This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.  FCC ID: 2ADMS-EP-0744-L FCC ID: 2ADMS-EP-0744-R Keep all relevant information for future reference ITEM# EP-0744 Distributed by 1616 Holdings, Inc. 1711 Market Street, Suite 200 Philadelphia, PA 19106 Made in China
---	--	--