 
 
 
 
 
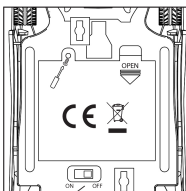 
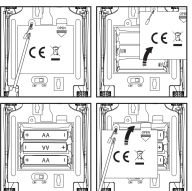 
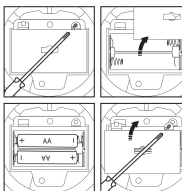 
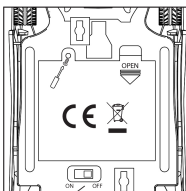 
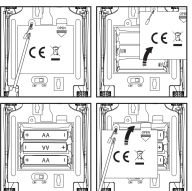 
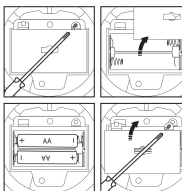 
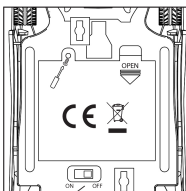 
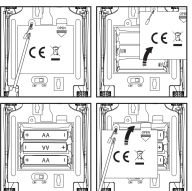 
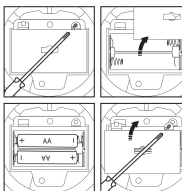 


AGES 8+ THUNDER REMOTE CONTROL RACECAR Instruction Manual Thank you for purchasing the Thunder Remote Control Racecar. This manual provides more information about the RC Car, please read the instructions before using.  Thunder Remote Control Racecar Remote Controller Instruction Manual Product Overview  Thunder Remote Control Racecar Package Contents Includes: 1(One) Thunder Remote Control Racecar 7.97in. x 3.36in. x 2.36in. (20cm x 8.6cm x 6cm). 1(One) Wheel Controller 4.25in. x 1.3in. x 0.8in. (10.8cm x 3.3cm x 2.5cm). 1(One) Instruction Manual Specifications Thunder Remote Control Racecar Power supply: 3 x "AA" 1.5V Batteries (alkaline type preferred, not included) Remote Controller Power supply: 2 x "AA" 1.5V Batteries (alkaline type preferred, not included) Frequency: 27 MHz (Blue) 40 MHz (Red) 49 MHz (Green) Remote Controller  Forward / Backward Button Left / Right Button Standard Control Note: To avoid losing control, always pay attention when controlling the Remote Control Car.  Forward Button Control Thunder Remote Control Racecar to move forward  Backward Button Control Thunder Remote Control Racecar to move backward Standard Control  Left Button Control Thunder Remote Control Racecar to turn left  Right Button Control Thunder Remote Control Racecar to turn right Racing With Friend  BLUE: 27 MHz  RED: 40 MHz  GREEN: 49 MHz Please purchase other car with different frequency to race <tr><td> Power On/Off  Power On/Off Slide the ON/OFF Switch to ON to turn on the Thunder Remote Control Racecar. Slide the ON/OFF Switch to OFF to turn off the Thunder Remote Control Racecar. </td><td> Batteries Installation For Remote Control Car  To install batteries into the Thunder Remote Control Racecar, unscrew the screw on the battery box cover to open the cover. Insert 3 x "AA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw. Notice: When inserting the batteries, you must insert according to the correct polarity. The Thunder Remote Control Racecar won't function if batteries are reversed. </td><td> Batteries Installation For Remote Controller  To install batteries into the Remote Controller, unscrew the screw on the battery box cover to open the cover. Insert 2 x "AA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw. Notice: When inserting the batteries, you must insert according to the correct polarity. The Thunder Remote Control Racecar won't function if batteries are reversed. </td><td> Performance Tips 1. Do not drive the Thunder Remote Control Racecar on grass, sand or go through. 2. Please drive the Thunder Remote Control Racecar on dry or wet weather. 3. Do not drive the Thunder Remote Control Racecar into any sharp object. 4. Keep light, car antennas sitting along from Thunder Remote Control Racecar. Care and Maintenance Always use dry and soft cloth to clean this product. Avoid this product from being exposed to sunlight or heat. Avoid performing these tests in water, otherwise, the electronic parts may be damaged. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition. IMPORTANT: BATTERY INFORMATION For AA Batteries 1. WARNING: TO AVOID BATTERY LEAKAGE To be sure to insert the batteries correctly, and always follow the top/guide and battery manufacturer's instructions. 2. Do not mix old and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel cadmium) batteries. 3. Always remove weak or used batteries from the product. 4. Remove the battery if the product is left unused for a long period of time. </td><td> Warning The product is suitable to be used by people who has operating experience in remote toy or aged no less than 8 years old. Please do not put the product in your mouth to prevent choking hazard of small parts. Please do not put the finger into available interstices. Please do not play the product in a crowd way with no warning, leading to being hit. Please store the smaller sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents. Avoid placing the batteries in places in high temperatures and avoid exposure to heat. When using children are operating the product, it shall be ensured that the kids are getting and making sure the product control is within the viewing range of the controller or operator so that it makes the control of the toy more convenient, and when the product is not used, please avoid it in the power supply of the toy, and remove the batteries from the product. Please note that we don't have any responsibility for any wrong operation as this may result in serious injury or loss of property, and we cannot control the operating process during the time when the user operation or use the product. Once this product is sold, we won't be responsible for any safety responsibility during the time for user operation or use outside the product. FCC Statement This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) the device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: - Restart or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio TV technician for help. FCC warning statement: This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. FCC ID: 27 MHz: DABMS ET-0040V8-01 40 MHz: DABMS ET-0040V8-02 49 MHz: DABMS ET-0040V8-03 Distributed by: 1018 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made in Shanghai, China Keep All Relevant Information for Future Reference Item# ET-0040-V8 </td></tr>	Power On/Off  Power On/Off Slide the ON/OFF Switch to ON to turn on the Thunder Remote Control Racecar. Slide the ON/OFF Switch to OFF to turn off the Thunder Remote Control Racecar.	Batteries Installation For Remote Control Car  To install batteries into the Thunder Remote Control Racecar, unscrew the screw on the battery box cover to open the cover. Insert 3 x "AA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw. Notice: When inserting the batteries, you must insert according to the correct polarity. The Thunder Remote Control Racecar won't function if batteries are reversed.	Batteries Installation For Remote Controller  To install batteries into the Remote Controller, unscrew the screw on the battery box cover to open the cover. Insert 2 x "AA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw. Notice: When inserting the batteries, you must insert according to the correct polarity. The Thunder Remote Control Racecar won't function if batteries are reversed.	Performance Tips 1. Do not drive the Thunder Remote Control Racecar on grass, sand or go through. 2. Please drive the Thunder Remote Control Racecar on dry or wet weather. 3. Do not drive the Thunder Remote Control Racecar into any sharp object. 4. Keep light, car antennas sitting along from Thunder Remote Control Racecar. Care and Maintenance Always use dry and soft cloth to clean this product. Avoid this product from being exposed to sunlight or heat. Avoid performing these tests in water, otherwise, the electronic parts may be damaged. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition. IMPORTANT: BATTERY INFORMATION For AA Batteries 1. WARNING: TO AVOID BATTERY LEAKAGE To be sure to insert the batteries correctly, and always follow the top/guide and battery manufacturer's instructions. 2. Do not mix old and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel cadmium) batteries. 3. Always remove weak or used batteries from the product. 4. Remove the battery if the product is left unused for a long period of time.	Warning The product is suitable to be used by people who has operating experience in remote toy or aged no less than 8 years old. Please do not put the product in your mouth to prevent choking hazard of small parts. Please do not put the finger into available interstices. Please do not play the product in a crowd way with no warning, leading to being hit. Please store the smaller sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents. Avoid placing the batteries in places in high temperatures and avoid exposure to heat. When using children are operating the product, it shall be ensured that the kids are getting and making sure the product control is within the viewing range of the controller or operator so that it makes the control of the toy more convenient, and when the product is not used, please avoid it in the power supply of the toy, and remove the batteries from the product. Please note that we don't have any responsibility for any wrong operation as this may result in serious injury or loss of property, and we cannot control the operating process during the time when the user operation or use the product. Once this product is sold, we won't be responsible for any safety responsibility during the time for user operation or use outside the product. FCC Statement This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) the device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: - Restart or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio TV technician for help. FCC warning statement: This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. FCC ID: 27 MHz: DABMS ET-0040V8-01 40 MHz: DABMS ET-0040V8-02 49 MHz: DABMS ET-0040V8-03 Distributed by: 1018 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made in Shanghai, China Keep All Relevant Information for Future Reference Item# ET-0040-V8
Power On/Off  Power On/Off Slide the ON/OFF Switch to ON to turn on the Thunder Remote Control Racecar. Slide the ON/OFF Switch to OFF to turn off the Thunder Remote Control Racecar.	Batteries Installation For Remote Control Car  To install batteries into the Thunder Remote Control Racecar, unscrew the screw on the battery box cover to open the cover. Insert 3 x "AA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw. Notice: When inserting the batteries, you must insert according to the correct polarity. The Thunder Remote Control Racecar won't function if batteries are reversed.	Batteries Installation For Remote Controller  To install batteries into the Remote Controller, unscrew the screw on the battery box cover to open the cover. Insert 2 x "AA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw. Notice: When inserting the batteries, you must insert according to the correct polarity. The Thunder Remote Control Racecar won't function if batteries are reversed.	Performance Tips 1. Do not drive the Thunder Remote Control Racecar on grass, sand or go through. 2. Please drive the Thunder Remote Control Racecar on dry or wet weather. 3. Do not drive the Thunder Remote Control Racecar into any sharp object. 4. Keep light, car antennas sitting along from Thunder Remote Control Racecar. Care and Maintenance Always use dry and soft cloth to clean this product. Avoid this product from being exposed to sunlight or heat. Avoid performing these tests in water, otherwise, the electronic parts may be damaged. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition. IMPORTANT: BATTERY INFORMATION For AA Batteries 1. WARNING: TO AVOID BATTERY LEAKAGE To be sure to insert the batteries correctly, and always follow the top/guide and battery manufacturer's instructions. 2. Do not mix old and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel cadmium) batteries. 3. Always remove weak or used batteries from the product. 4. Remove the battery if the product is left unused for a long period of time.	Warning The product is suitable to be used by people who has operating experience in remote toy or aged no less than 8 years old. Please do not put the product in your mouth to prevent choking hazard of small parts. Please do not put the finger into available interstices. Please do not play the product in a crowd way with no warning, leading to being hit. Please store the smaller sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents. Avoid placing the batteries in places in high temperatures and avoid exposure to heat. When using children are operating the product, it shall be ensured that the kids are getting and making sure the product control is within the viewing range of the controller or operator so that it makes the control of the toy more convenient, and when the product is not used, please avoid it in the power supply of the toy, and remove the batteries from the product. Please note that we don't have any responsibility for any wrong operation as this may result in serious injury or loss of property, and we cannot control the operating process during the time when the user operation or use the product. Once this product is sold, we won't be responsible for any safety responsibility during the time for user operation or use outside the product. FCC Statement This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) the device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: - Restart or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio TV technician for help. FCC warning statement: This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. FCC ID: 27 MHz: DABMS ET-0040V8-01 40 MHz: DABMS ET-0040V8-02 49 MHz: DABMS ET-0040V8-03 Distributed by: 1018 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made in Shanghai, China Keep All Relevant Information for Future Reference Item# ET-0040-V8	