

ET-0835 Toy Story Rex_IM_V2

Size : 420 x 110 mm

雙面印刷

14MAY24

Disney · PIXAR TOY STORY AGES 8+ REX Remote Control Figure Instruction Manual Thank you for purchasing the Rex Remote Control Figure. This manual provides more information about this product, please read the instructions before using.	Product Overview Rex Remote Control Figure Rex Tail Remote Control Instruction Manual	Package Contents 1(One) Rex Remote Control Figure 6.3in. x 8.7in. x 13in. (15.9cm x 22cm x 33cm) . SOME ASSEMBLY REQUIRED 1(One) Remote Control 8.3in. x 2.2in. x 1.4in. (21cm x 5.6cm x 3.5cm) 1(One) Instruction Manual Specifications Frequency: 49 MHz FCC ID: 2ADMS-ET-0835-49 Rex Remote Control Figure: Requires 3(Three) x AA 1.5V Alkaline Batteries (Not Included) Remote Control: Requires 2(Two) x AAA 1.5V Alkaline Batteries (Not Included) Remote Controller	Rex Tail Installation Insert the Rex Tail into the back hole of the Rex Remote Control Figure according to the tail direction on the image Top of the Tail Bottom of the Tail Spin the Rex Tail clockwise and lock the Rex Tail on the Rex Remote Control Figure	Standard Control Note: To avoid losing control, always pay attention when controlling the Rex Remote Control Figure. Move Forward Control Rex Remote Control Figure to move forward Move Backward Control Rex Remote Control Figure to move backward	Power On/Off OFF ON Power On/Off Slide the ON/OFF Switch to ON to turn on the Rex Remote Control Figure. Slide the ON/OFF Switch to OFF to turn off the Rex Remote Control Figure.
Batteries Installation For Rex Remote Control Figure Notice: When inserting the batteries, you must insert according to the correct polarity, the Rex Remote Control Figure won't function if batteries are reversed.	Batteries Installation For Remote Controller Notice: When inserting the batteries, you must insert according to the correct polarity, the Remote Controller won't function if batteries are reversed.	Performance Tips Care and Maintenance	IMPORTANT: BATTERY INFORMATION For AA Batteries ⚠WARNING: TO AVOID BATTERY LEAKAGE 1) Be sure to insert the batteries correctly, and always follow the toy/game and battery manufacturers' instructions. 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. 3) Always remove weak or dead batteries from the product. 4) Remove the battery if the product is left unused for a long period of time. For AAA Batteries ⚠WARNING: TO AVOID BATTERY LEAKAGE 1) The batteries used with this product are small parts and should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone American Association of Poison Control Centers (1-800-222-1222). 2) Always purchase the correct size and grade of battery most suitable for intended use. 3) Do not mix old and new batteries, alkaline, standard (Carbon - Zinc) or rechargeable (Nickel-cadmium) batteries. 4) Clean the battery contacts and those of the device prior to battery installation. 5) Ensure the batteries are installed correctly with the regard to polarity (+ and -). 6) Always remove batteries if consumed or if product is to be left unused for a long time.	Warning Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.	FCC Statement RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. FCC Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made In Shantou, China