

ET-0851 REMOTE CONTROL DOUBLE SHOT DUAL FUNCTION SHOOTING VEHICLE INSTRUCTION MANUAL

7 MAR 2024

Size : 560 x 110 mm

AGES 14+ REMOTE CONTROL DOUBLE SHOT DUAL FUNCTION SHOOTING VEHICLE Instruction Manual Thank you for purchasing the Remote Control Double Shotdual Function Shooting Vehicle. This manual provides more information about this RC Vehicle, please read the instructions before using. ⚠WARNING: DO NOT AIM AT EYES OR FACE.	Product Overview Remote Control Vehicle Remote Controller Dart Blaster Water Blaster 20 x Ammunition Clip 24 x Suction Dart Instruction Manual Water Dropper	Package Contents INCLUDES: 1 (One) RC Double Shot Dual Function Shooting Vehicle 8.38in. x 9.45in. x 6.1in. (21.3cm x 24cm x 15.5cm). SOME ASSEMBLY REQUIRED. 1 (One) Remote Controller 5.24in. x 3.58in. x 2.08in. (13.3cm x 9.1cm x 5.3cm) 1 (One) Water Dropper 1.77in. x 3.74in. x 1.14in. (4.5cm x 9.5cm x 2.9cm) 1 (One) Instruction Manual 24 (Twenty Four) Suction Darts 0.43in. x 1.97in. x 0.43in. each (1.1cm x 5cm x 1.1cm each) Specifications Power supply: Double Shot Dual Function Shooting Vehicle: 5 (Five) AA 1.5V Alkaline Batteries (Not Included). Remote Controller: 2 (Two) AA 1.5V Alkaline Batteries (Not Included). Frequency: 2.4 GHz Remote Controller Forward / Backward Control Pad Bullet Fired Button Left / Right Control Pad Lever Up Button Lever Down Button	Standard Control Note: To avoid losing control, always pay attention when controlling the Remote Control Vehicle. Forward Push the up arrow on control pad to move vehicle forward Backward Push the down arrow on control pad to move vehicle backward	Standard Control Turn Left Push the left or right arrow on control pad to move vehicle turn in left or right direction Turn Right	Standard Control Lever Up Front Wheels Press the lever up button to make the Remote Control Vehicle front wheels lever up. Lever Down Front Wheels Press the lever down button to make the Remote Control Vehicle front wheels lever down.	Standard Control Dart Blast Fired (Dart Blaster Mode) Short press the bullet fired button to shoot, long press the button for continuous shooting. Water Blast Fired (Water Blaster Mode) Short press the bullet fired button to shoot, long press the button for continuous shooting.	Power On/Off Remote Control Vehicle: Power On / Off Switch Slide the ON/OFF Switch to ON to turn on the Remote Control Vehicle. Slide the ON/OFF Switch to OFF to turn off the Remote Control Vehicle. Remote Controller: The Remote Controller will be turned on automatically when the batteries have installed. **Remove batteries if product is not being used.
Batteries Installation For Remote Control Vehicle To install batteries into the Remote Control Vehicle, unscrew the screw on the battery box cover to open the cover. Insert 5 x AA 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace battery box cover and tighten the screw. For Remote Controller To install batteries into the Remote Controller, unscrew the screw on the battery box cover to open the cover. Insert 2 x AA 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on diagram. Replace battery box cover and tighten the screw. (Notice: When inserting the batteries, you must insert according to the correct polarity, the Remote Control Vehicle and the Remote Controller won't function if batteries are reversed.)	Dart Bullets Installation to the Blaster	Dart Blaster Installation	Dart Bullets Installation to the Blaster (Pay attention to not fill the bottle when adding water, and do not spill water on the body to prevent circuit board short circuit.)	Dart Blaster Installation	Performance Tips 1. Do not drive the Remote Control Vehicle on grass, sand or go through water. 2. Do not drive the Remote Control Vehicle in windy or rainy weather. 3. Do not drive the Remote Control Vehicle into any sharp object. 4. Keep fingers, hair and loose clothing away from Remote Control Vehicle.	IMPORTANT: BATTERY INFORMATION For AA Batteries ⚠WARNING: TO AVOID BATTERY LEAKAGE 1) Be sure to insert the batteries correctly, and always follow the toy/game and battery manufacturers' instructions. 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. 3) Always remove weak or dead batteries from the product. 4) Remove the battery if the product is is left unused for a long period of time. Care and Maintenance Always use dry and soft cloth to clean this product. Avoid this product from being exposed to sunlight or heat. Avoid immersing these toys in water, otherwise, the electronic parts may be damaged. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition.	FCC Statement This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/ TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. FCC ID: 2ADM5-ET-0851A Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made In Shantou, China Keep All Relevant Information for Future Reference Item# ET-0851A