

 
AGES 8+

CRITTER CRAWLERS

REMOTE CONTROL WALL CLIMBING SPIDER



Instruction Manual

Thank you for purchasing the Remote Control Wall Climbing Spider. This manual provides more information about this Remote Control Wall Climbing Spider, please read the instructions before using.

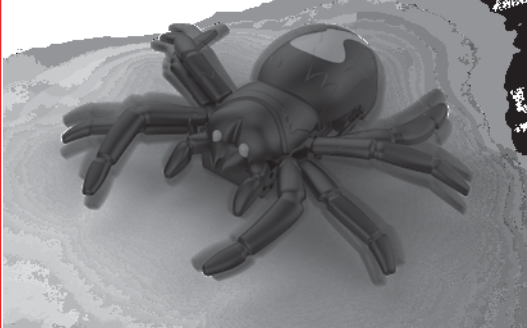


Product Overview

  Wall Climbing Spider

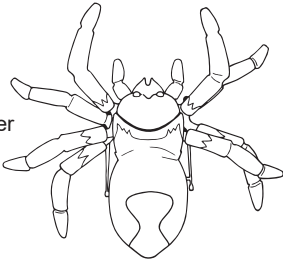

Remote Controller

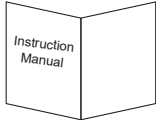 

Instruction Manual

 
Package Contents

- 1(One) Remote Control Wall Climbing Spider
- 1(One) Remote Controller
- 1(One) Instruction Manual

Specifications


Frequency: 40 MHz
Power Supply:
Remote Control Wall Climbing Spider Power Supply:
Built-in Rechargeable Li-ion Battery (Li-ion 3.7V / 500 mAh)
USB TYPE-C CHARGING CABLE NOT INCLUDED
Remote Controller:
Requires 2 (Two) x AAA 1.5V Alkaline Batteries (Not Included)

Remote Controller

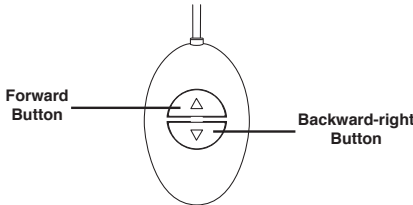


Standard Control

 Note: To avoid losing control, always pay attention when controlling the Remote Control Wall Climbing Lizard.

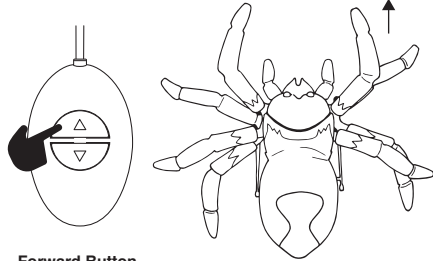

Forward Button

 
Control Wall Climber Remote Control Wall Climbing Spider to move forward

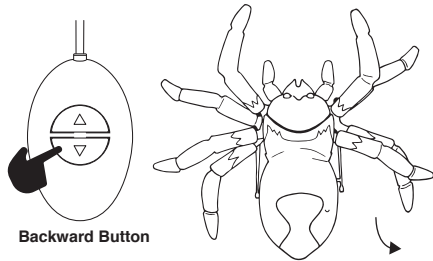

Backward Button

Control Wall Climber Remote Control Wall Climbing Spider to move backward-right

 Power On/Off

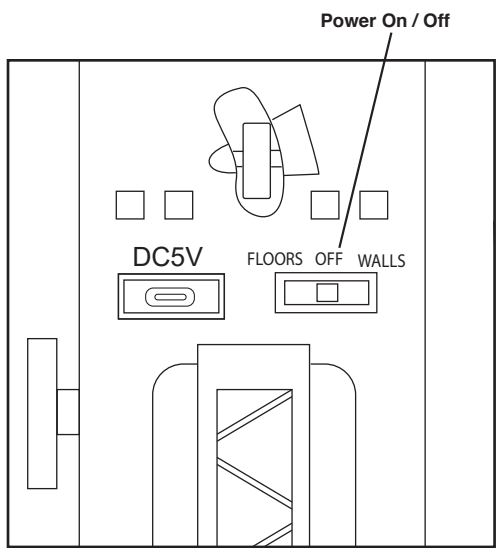


Power On/Off

Slide the FLOORS/OFF/WALLS Switch to "FLOORS" to turn on the Wall Climber Remote Control Wall Climbing Spider for normal running.

Slide the FLOORS/OFF/WALLS Switch to "WALLS" to turn on the Wall Climber Remote Control Wall Climbing Spider for wall climbing.

Slide the FLOORS/OFF/WALLS Switch to "OFF" to turn off the Remote Control Wall Climbing Spider.

 Charging the Remote Control Wall Climbing Spider

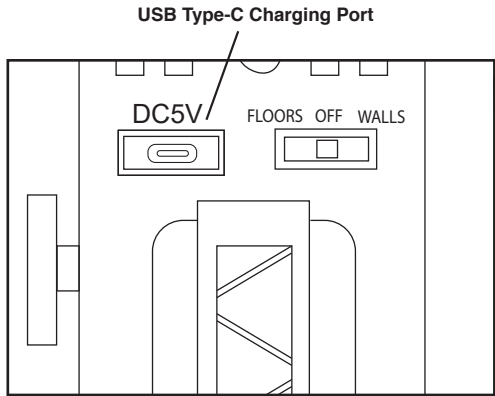

⚠ For your safety, please always use appropriate 5V input charger/Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product.

 
1. Use a USB Type-C charging cable. (Not Included)
2. Connect the USB Type-C plug to USB Type-C charging port on the Remote Control Wall Spider, then connect the USB plug to a USB port on a computer or wall adapter to begin charging.
3. The LED Indicator will turn red while charging and will turn off once fully charged.

NOTE:

- You must select a qualified charger from a regular manufacturer.
- You must charge the Remote Control Wall Climbing Spider if it has been not used for more than 6 months.



Batteries Installation For Remote Controller

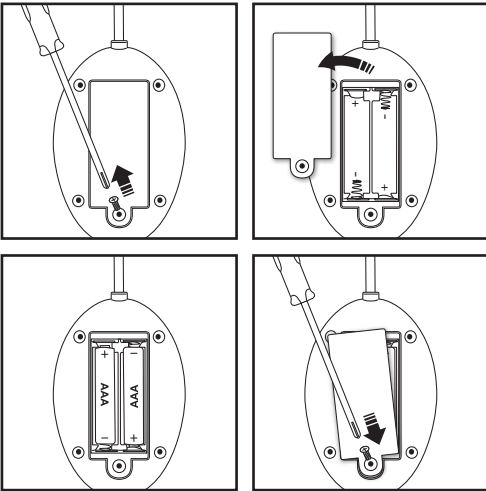

To install batteries into the Remote Controller, unscrew the screw on the battery box cover to open the cover. Insert 2(Two) X AAA 1.5V Alkaline Batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw.

Notice:

When inserting the batteries, you must insert according to the correct polarity, the Remote Control won't function if batteries are reversed.

Performance Tips

1. Do not drive the Remote Control Wall Climbing Spider on grass, sand or go through water.
2. Do not drive the Remote Control Wall Climbing Spider in windy or rainy weather.
3. Do not drive the Remote Control Wall Climbing Spider into any sharp object.
4. Keep fingers, hair and loose clothing away from Remote Control Wall Climbing Spider.

Care and Maintenance

Always use dry and soft cloth to clean this product.

Avoid this product from being exposed to sunlight or heat.

Avoid immersing these toys in water, otherwise, the electronic parts may be damaged.

Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition.

IMPORTANT: BATTERY INFORMATION

For AAA Batteries

⚠ WARNING: TO AVOID BATTERY LEAKAGE

- 1) The batteries used with this product are small parts and should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone American Association of Poison Control Centers (1-800-222-1222).
- 2) Always purchase the correct size and grade of battery most suitable for intended use.
- 3) Do not mix old and new batteries, alkaline, standard (Carbon - Zinc) or rechargeable (Nickel-cadmium) batteries.
- 4) Clean the battery contacts and those of the device prior to battery installation.
- 5) Ensure the batteries are installed correctly with the regard to polarity (+ and -).
- 6) Always remove batteries if consumed or if product is to be left unused for a long time.

⚠ Li-ion battery charging warning statement:

The input to the USB Charging Adapter is 5V 1A.
In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product. Only charge the product at ambient temperatures between 10 deg °C/ 50 deg °F and 40 deg °C/104 deg °F. Do not heat above 70 deg °C/158 deg °F, eg. Do not expose to sunlight or throw into fire. Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.

Warning

This product is suitable to be used by people who has operating experience in remote toy or aged no less than 8 years old.

Please do not put the product in your mouth to prevent choking hazard of small parts.

Please do not put the finger into available interspaces.

Please do not play the product in a brutal way such as throwing, crashing or twisting it.

Please store the smaller-sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents.

Avoid placing the batteries in places in high temperatures and avoid exposure to heat.

When young children are operating the product, it shall be ensured that the adults are guiding and making sure the product control is within the viewing range of the controller (or instructor) so that it makes the control of the toy more convenient.

When the product is not in use, please switch off the power supplies of the toy, and remove the batteries from the product.

Please note that we won't take any responsibility for any wrong operation as this may result in severe injury or loss of property, and we cannot control the operating process during the time when the user assembles or uses this product.

Once this product is sold, we won't be responsible for any safety responsibility during the time the user operates or uses controls this products.

FCC Statement

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/ TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Item# ET-0917

Distributed by 1616 Holdings, Inc.
701 Market Street, Suite 200
Philadelphia, PA 19106

Made in Shenzhen, China

Keep All Relevant Information for Future Reference