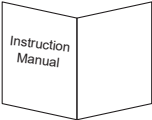 
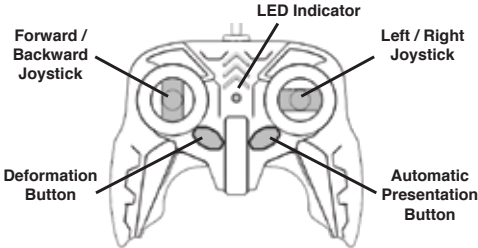 
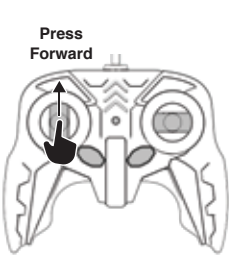 
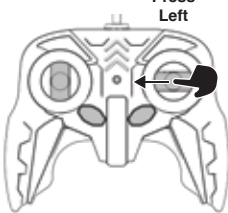 
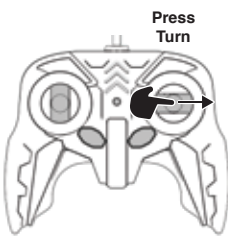 
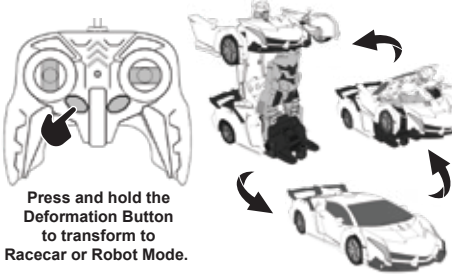 
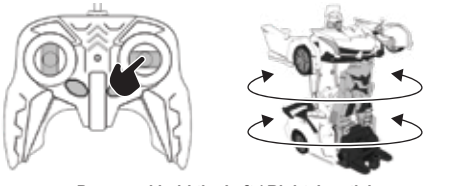 
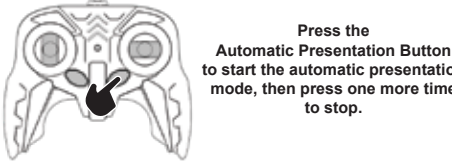 
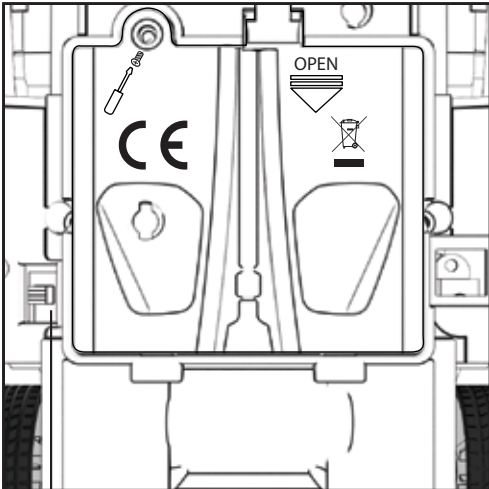 
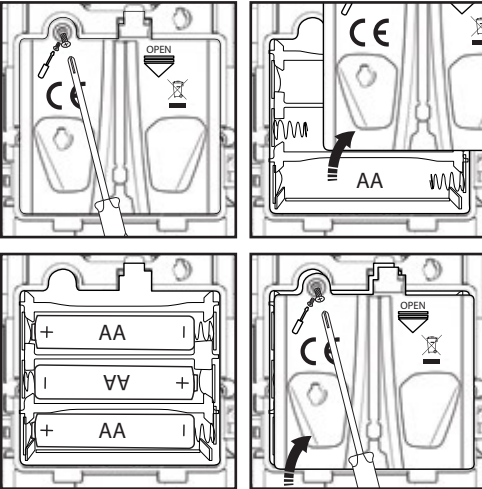 
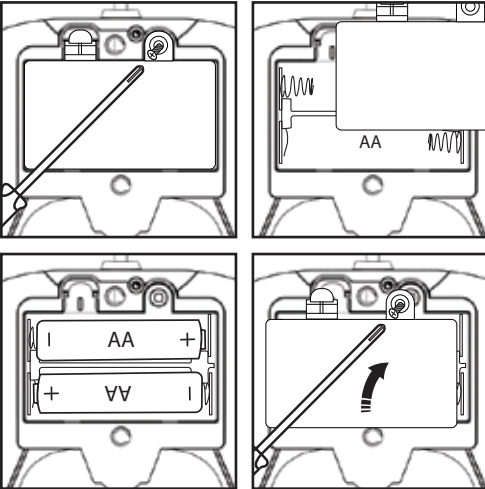 


AGES 8+ EVOLUTION REMOTE CONTROL ROBOCAR Instruction Manual Thank you for purchasing the Evolution Remote Control Robocar. This manual provides more information about this RC toy, please read the instructions before using. 	Product Overview  Evolution Remote Control Robocar  Remote Controller  Instruction Manual	Package Contents Includes: 1(One) Evolution Remote Control Robocar 1(One) Remote Controller 1(One) Instruction Manual Specifications Power Supply: Evolution Remote Control Robocar: Requires 3 (Three) x AA 1.5V Alkaline Batteries (Not Included). Remote Controller: Requires 2 (Two) x AA 1.5V Alkaline Batteries (Not Included). Frequency: 27 MHz (Blue) 40 MHz (Brown) 49 MHz (Red) Remote Controller  Forward / Backward Joystick LED Indicator Left / Right Joystick Deformation Button Automatic Presentation Button	Standard Control Note: To avoid losing control, always pay attention when controlling the Evolution Remote Control Robocar.  Press Forward  Press the joystick forward to move the car forward  Press Backward  Press the joystick backward to move the car backward	Standard Control  Press Left  Press the joystick leftward to move the car left turn  Press Turn  Press the joystick rightward to move the car right turn	Standard Control  Press and hold the Deformation Button to transform to Racecar or Robot Mode.  Press and hold the Left / Right Joystick to make the Robot / Car turn around.  Press the Automatic Presentation Button to start the automatic presentation mode, then press one more time to stop.
Power On/Off  Power On/Off Slide the ON/OFF Switch to ON to turn on the Evolution Remote Control Robocar. Slide the ON/OFF Switch to OFF to turn off the Evolution Remote Control Robocar.	Batteries Installation For Remote Control Car  To install batteries into the Evolution Remote Control Robocar, unscrew the screw on the battery box cover to open the cover. Insert 3 x AA 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw. Notice: When inserting the batteries, you must insert according to the correct polarity, the Evolution Remote Control Robocar won't function if batteries are reversed.	Batteries Installation For Remote Controller  To install batteries into the Remote Controller, unscrew the screw on the battery box cover to open the cover. Insert 2 x AA 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram. Replace the battery box cover and tighten the screw. Notice: When inserting the batteries, you must insert according to the correct polarity, the Remote Controller won't function if batteries are reversed.	Performance Tips 1. Do not drive the Evolution Remote Control Robocar on grass, sand or go through water. 2. Do not drive the Evolution Remote Control Robocar in windy or rainy weather. 3. Do not drive the Evolution Remote Control Robocar into any sharp object. 4. Keep fingers, hair and loose clothing away from Evolution Remote Control Robocar. Care and Maintenance Always use dry and soft cloth to clean this product. Avoid this product from being exposed to sunlight or heat. Avoid immersing these toys in water, otherwise, the electronic parts may be damaged. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition. IMPORTANT: BATTERY INFORMATION For AA Batteries ⚠ WARNING: TO AVOID BATTERY LEAKAGE 1) Be sure to insert the batteries correctly, and always follow the toy/game and battery manufacturers' instructions. 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. 3) Always remove weak or dead batteries from the product. 4) Remove the battery if the product is left unused for a long period of time.	Warning This product is suitable to be used by people who has operating experience in remote toy or aged no less than 8 years old. Please do not put the product in your mouth to prevent choking hazard of small parts. Please do not put the finger into available interspaces. Please do not play the product in a brutal way such as throwing, crashing or twisting it. Please store the smaller-sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents. Avoid placing the batteries in places in high temperatures and avoid exposure to heat. When young children are operating the product, it shall be ensured that the adults are guiding and making sure the product control is within the viewing range of the controller (or instructor) so that it makes the control of the toy more convenient. When the product is not in use, please switch off the power supplies of the toy, and remove the batteries from the product. Please note that we won't take any responsibility for any wrong operation as this may result in severe injury or loss of property, and we cannot control the operating process during the time when the user assembles or uses this product. Once this product is sold, we won't be responsible for any safety responsibility during the time the user operates or uses controls this products.	FCC Statement This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/ TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. FCC FCC ID: 2ADM5-ET-0970-27 (27 Mhz) FCC ID: 2ADM5-ET-0970-40 (40 Mhz) FCC ID: 2ADM5-ET-0970-49 (49 Mhz) Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made In Shantou, China Keep All Relevant Information for Future Reference Item# ET-0970