


Date: 2 JUN 2026
Product: KS-1002 IM

SKU:

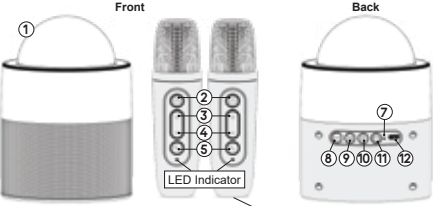

SP-0226 IM
Size: 387(w) x 100(h) mm

  KARAOKE MACHINE with 2 MINI WIRELESS MICROPHONES Instruction Manual Thank you for purchasing the Karaoke Machine. This manual provides more information about this product, please read the instructions before using. 	Product Overview Front Back  2 x Mini Wireless Microphones  Bottom of the Microphone  USB Type-C Charging Cable  INSTRUCTION MANUAL 1. Disco LED 2. Power Button (Microphone) 3. Volume Up/Next Song Button (Microphone) 4. Volume Down/Previous Song Button (Microphone) 5. Voice Change Button (Microphone) 6. USB Type-C Charging Port (Microphone) 7. LED Indicator 8. Volume Down/Previous Song Button 9. FM Radio/Bluetooth/Karaoke Mode Button 10. Volume Up/Next Song Button 11. Power/Play/Pause Button 12. USB Type-C Charging Port Package Contents 1(One) Karaoke Machine 2(Two) Wireless Microphones 1(One) USB Type-C Charging Cable 1(One) Instruction Manual	Power On/Off (Karaoke Machine) Power on: Press and hold 3 second on the Power Button. Power off: Press and hold 3 second on the Power Button. Note: Always power off the machine when not in use. Pair Karaoke Machine with your mobile device 1. Keep the distance between your Karaoke Machine and mobile phone (or other devices) within 32.8 Feet. 2. Power on the Karaoke Machine. 3. Activate the Bluetooth function on your phone within range and select "KS-1002" from the list shown. 4. You will hear a beep sound when pairing is successful. Reconnect Karaoke Machine to your mobile device When powered on, the Karaoke Machine will automatically connect with the last successfully paired device. Charging your Karaoke Machine / Wireless Microphone  For your safety, please always use appropriate 5V output charger/ Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product. 1. Use the USB Type-C charging cable provided with this product. 2. Connect the USB Type-C plug to USB Type-C charging port on the machine/wireless microphone, then connect the USB plug to wall adapter to begin charging. 3. The LED Indicator will turn red while charging and will turn off once fully charged. NOTE: • You must select a qualified charger from a regular manufacturer. • You must charge the machine if it has been not used for more than 6 months.  USB PlugUSB Type-C Charging Plug  CAUTION: FOR YOUR SAFETY, the charging cable included with this item is intended for use with this product only.	Bluetooth Speaker Mode (Karaoke Machine) Play/Pause: Short press the "Power" Button once. Next Track: Long press the "+" Button Previous Track: Long press the "-" Button Volume Up: Short press the "+" Button Volume Down: Short press the "-" Button FM Radio Mode (Karaoke Machine) Note: Please plug in USB Type-C cable as FM antenna before switch to FM Radio Mode. Switch to FM Radio Mode: Short press the "M" Button once. Press again the "M" Button again will back to Bluetooth Speaker mode. Auto Scan: Double press the Power Button. Next Channel: Long press the "+" Button Previous Channel: Long press the "-" Button Volume Up: Short press the "+" Button Volume Down: Short press the "-" Button Mute/Unmute: Short press the Power Button Microphone Operation Power on: Press and hold 3 second on the Power Button. Power off: Press and hold 3 second on the Power Button. Note: Always power off the microphone when not in use. Mute/Unmute: Short press the Power Button. Microphone Volume Up: Short press the "+" Button. Microphone Volume Down: Short press the "-" Button. Next Track: Long press the "+" Button Previous Track: Long press the "-" Button Echo Increase: Double press the "+" Button. Echo Decrease: Double press the "-" Button. Voice Change: Short press the Voice Change Button. Karaoke Mode(Accompaniment Mode) On/Off: Long Press the Voice Change Button.	Technical specification Driver Diameter: 52 mm Impedance: 4 Ohms Power Supply: Li-Ion Battery 3.7V 600 mAh (Speaker) Li-Ion Battery 3.7V 200 mAh (Microphone) Playtime: 1-2 Hours Charging Time: 1.5-2 Hours Bluetooth Range: 32 Feet Bluetooth Version: 5.3 FM Radio Mode, Speaker Mode, Karaoke Mode Color Changing LED Light with Disco Effect USB Type-C Charging Cable Length: 11.8in. (30cm) USB Type-C Charging Cable Rating Max. 5VDC, 5W FAQ ♦ If the Karaoke Machine cannot be paired with your device, please try the following: Ensure that your speaker is in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated. ♦ If the Karaoke Machine cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works.  Safety instructions for the lithium battery and charging the product -The input voltage to the product is 5VDC, 1A. -In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/adapter for charging the product. -Only charge the product at ambient temperatures between 10°C/50°F and 40°C/104 °F. - Do not heat above 70°C/158°F, eg. Do not expose to sunlight or throw into fire. -Switch off the product after use. -Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. -In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.	FCC STATEMENT This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/ TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.  FCC ID: 2ADM5-KS-1002-MIC FCC ID: 2ADM5-KS-1002-SPK ITEM# KS-1002 Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made in China Keep All Relevant Information For Future Reference
---	---	--	--	---	---

Approval:

Date: