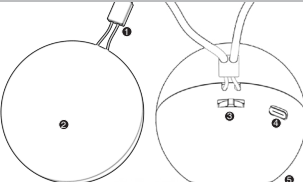 
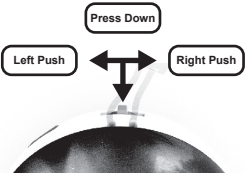 
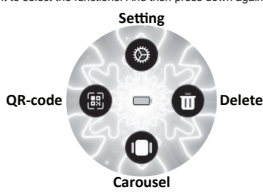 
 
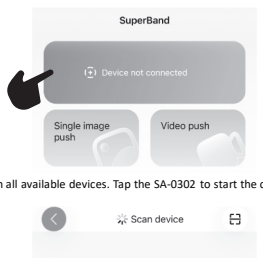 
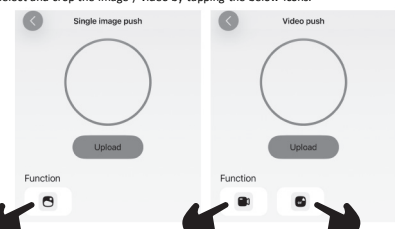 
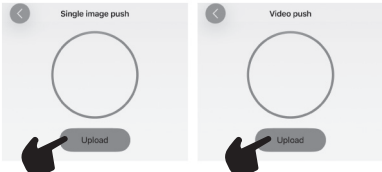 


Size: 315.5(W) x 89.2(H)mm

FRONT SIDE

digital photo ornament acrylic orb with wireless image and video customization INSTRUCTION MANUAL Thank you for purchasing the digital photo ornament. This manual provides more information about this product, please read the instructions before using.  	Product Overview  1. strap 2. screen covered with acrylic 3. control button 4. charging port 5. flat standing base Package Contents 1(One) Digital Photo Ornament 1(One) USB Type-C Charging Cable 1(One) Strap 1(One) Instruction Manual Specifications Playtime: 2-2.5 hours Battery Capacity: 300 mAh Charging Time: 1.5-2 hours Supported Formats: JPG, PNG, GIF, MP4, AVI Input: 5VDC, 1A USB Type-C Charging Cable Length: 7.87in. (20cm) Bluetooth Version: 6.0 USB Type-C Charging Cable Rating Max. 5VDC, 5W CAUTION: FOR YOUR SAFETY, the charging cable included with this item is intended for use with this product only Button Operations  Press Down Left Push Right Push Push left or right to select. Press down once to confirm. Press down twice quickly to cancel.	Power On/Off Power On Press and hold the control button for 2 seconds to turn on the device. Power Off Press and hold the control button for 2 seconds to show the Shutdown menu. Select and confirm to power off. Force Restart Press and hold down for 10 seconds to force restart the device. Operations Press down once to enter the main menu. Push left or right to select the functions. And then press down again to confirm.  Setting Delete QR-code Carousel Setting General • Language settings Switch between Chinese, English and Français. • QR code QR-code for the APP's download link. • About Device's information. • Shutdown Select and confirm to power off the device. • Restore the factory setting Select and confirm to clear all data and restore the factory settings.	Display and Brightness • Press down once to select the brightness setting. • Push left or right to select the dimming icon, and then press down to adjust the brightness. Press down twice quickly to exit the setting. • Push right to select Always-on display, and then press down to toggle on or off. • When Always-on display is off, the Screen off time can be adjusted.  Charging is Operable • Press down to toggle on/off. When it is turned on, the device can be operated during charging. Dial Time • Press down to toggle the Clock display on or off. The clock will be synchronized with the smartphone via the APP automatically. QR-code QR-code for the APP's download link.  Carousel Press down to toggle the carousel on or off. When the carousel is on, the delay time between each photo or video can be adjusted. 	Delete Select and confirm to delete the currently displayed photo or video.  APP operation Download and install the APP from the following QR-code:  And start the SuperBand App on the smartphone. 
--	---	---	---	---

BACK SIDE

Connect the device 1. Turn On Bluetooth function on the mobile phone. 2. Turn On the device. 3. Tap the + icon on the screen.  4. It will search all available devices. Tap the SA-0302 to start the connection.  5. When connected successfully, the APP will display the model number with connected information. 	Upload photos or Videos to the device 1. Tap "Single image push" or "Video push".  2. Select and crop the image / video by tapping the below icons.  3. Once selected, tap "UPLOAD" to transfer to the device.  Note: If need to delete any image / video, please use the Delete function on the device.	Recharge the device For your safety, please always use appropriate 5V output charger/Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product. 1. Use the USB Type-C charging cable provided with the packaging. 2. Connect the USB Type-C plug to USB Type-C charging port on the product, then connect the USB plug to a wall adapter to begin charging. 3. The charging status will be shown on the screen. When product is off:  When product is on:  NOTE: • You must select a qualified charger from a regular manufacturer. • You must charge the product if it has been not used for more than 6 months.  FAQ If the product will not turn on: Make sure the product is fully charged. If the product cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works.	⚠ Safety instructions for the lithium battery and charging the product -The input voltage to the product is 5VDC 1A. -In order to charge the product in safe manner and reliable conditions, please only use a certified and compatible charger/adapter to charge this product. -Only charge the product at ambient temperatures between 10°C/ 50°F and 40°C/104°F. -Do not heat above 70°C/158°F, eg. Do not expose to sunlight or throw into fire. -Switch off the product after use. -Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. -In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.	FCC Statement This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/ TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners. FC FCC ID: 2ADM5-SA-0302 Keep all relevant information for future reference ITEM# SA-0302 Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made in China
--	--	--	---	---