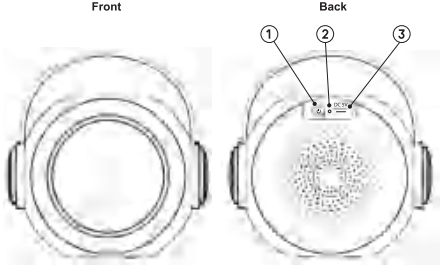


书纸材质 双面印刷

上机印刷时拍照确认

SP-0233 IM
Size: 322.5(w) x 100(h) mm

 COLORWAVE LED WIRELESS SPEAKER Instruction Manual Thank you for purchasing the Colorwave LED Wireless Speaker. This manual provides more information about this wireless speaker, please read the instructions before using. 	Product Overview Front Back  1. Power On/Off Button 2. LED Indicator 3. USB Type-C Charging Port Package Contents 1(One) Colorwave LED Wireless Speaker 5.16in. x 5.24in. x 3.46in. (13.1cm x 13.3cm x 8.8cm) 1(One) USB Type-C Charging Cable 19.69in. (50cm) 1(One) Instruction Manual Power On/Off Power on: Press and hold 2 second on the Power Button. Power off: Press and hold 2 second on the Power Button. Pause: Short press on the Power Button. Play: Short press on the Power Button. Light On: Double press on the Power Button. Light Off: Double press on the Power Button. Note: Always power off the speaker when not in use.
---	---