

书纸材质说明书

SP-0270 Speaker Manual

Size: H: 200mm x W: 258mm

June 16 26

 PULSEBOX LED WIRELESS SPEAKER Instruction Manual Thank you for purchasing the Wireless Speaker. This manual provides more information about the Wireless Speaker, please read the instructions before using.	Product Overview  - Volume + / Next Song - Volume - / Previous Song - Play / Pause - Power On / Off - USB Type-C Charging Port - LED Indicator	Package Contents 1) 1x Wireless Speaker 1) 1x USB Type-C Charging Cable 1) 1x Instruction Manual Technical Specification Driver Diameter: 165 mm Impedance: 4 Ohms Power Supply: Li-Ion Battery 3.7V 2000 mAh Input: 5VDC 1A Playtime: 3-4 Hours Charging Time: 4 Hours Bluetooth Range: 32.8 Feet Bluetooth Version: 5.1 USB Type-C Charging Cable Length: 19.7 in. (50cm) USB Type-C Charging Cable Rating Max: 5VDC 5A Power On/Off Power on Press and hold the On/Off button for 3 seconds. Power off Press and hold the On/Off button for 3 seconds. Pair Wireless Speaker with your mobile device 1. Keep the distance between your Wireless Speaker and mobile phone (or other devices) within 32.8 Feet. 2. Power on the Wireless Speaker. 3. Activate the Bluetooth function on your phone within range and select "SP-0205" from the list shown. 4. You will hear a prompt sound when pairing is successful. Reconnect Wireless Speaker to your mobile device When powered on, the Wireless Speaker will automatically connect with the last successfully paired device.	Bluetooth® Speaker Mode Play/Pause: Short press the Play / Pause Button once. Next Track: Short press the "+" Button Previous Track: Short press the "-" Button Volume Up: Long press the "+" Button Volume Down: Long press the "-" Button FM Radio Mode NOTE: Plug in the USB Type-C Charging Cable can enhance the FM sensitivity. Switch to FM Radio Mode: Short press the On / Off Button once. Short press the On / Off button will back to Bluetooth Speaker mode. Auto Scan: Long press the Play / Pause Button. Next Channel: Short press the "+" Button Previous Channel: Short press the "-" Button Volume Up: Long press the "+" Button Volume Down: Long press the "-" Button Mute/Unmute: Short press the Play / Pause Button True Wireless Stereo (TWS) Mode NOTE: Please purchase two pieces of PULSEBOX Wireless Speakers to perform TWS Mode. TWS mode is not supported in FM Radio mode. 1. Turn on both wireless speakers. 2. Disconnect both wireless speakers from any Bluetooth device. 3. Keep both wireless speakers side by side. 4. Press and hold 2 seconds on the Play / Pause Button on ONE of the wireless speakers. And then it will have an alert sound. 5. The wireless speaker will connect with the other wireless speaker in few seconds. When successfully connected, both wireless speakers will have another alert sound. 6. Now you can follow the "Pair Wireless speaker with your mobile device" to pair with the mobile device. 7. To disable the TWS mode, power off and on both wireless speakers. Or, press and hold 2 seconds on the Play / Pause Button on ONE of the wireless speakers. They will have an alert sound and then disconnected.
LED On/Off Double press the On/Off Button to turn on or off the LED. Charging your Wireless speaker ⚠ For your safety, please always use appropriate 5V output charger/Adapter to charge the product. DO NOT USE Cheap Charging USB Adapter to charge the product, as it might damage the product. 1. Use the USB Type-C charging cable provided with this wireless speaker. 2. Connect the USB Type-C plug to USB Type-C charging port on the speaker, then connect the USB Type-C wall adapter to begin charging. 3. The LED indicator will turn red while charging and will turn off once fully charged. NOTE • Please fully charge the product before use. • You must select a qualified charger from a regular manufacturer. • You must charge the Wireless speaker if it has not been used for more than 6 months.  CAUTION: FOR YOUR SAFETY, the charging cable included with this item is intended for use with this product only.	⚠ Safety instructions for the lithium battery and charging the product The input voltage to the product is 5VDC, 1A. In order to charge the product in a safe manner and reliable conditions, please only adopt certified appropriate charger/adapter for charging the product. Only charge the product at ambient temperature between 10°C 50°C and 40°C 104°C. Do not heat above 70°C 158°F. Do not expose to sunlight or throw into fire. Switch of the product after use. ⚠ Please note that we won't take any responsibility for any wrong operation (e.g. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. ⚠ Extreme cases, abuse or misuse of Lithium battery can lead to explosion, heat generation, fire development or smoke development.	FCC STATEMENT This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the rules for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. FCC WARNING STATEMENT This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any one of such marks: © 2016 Holdings Inc. or, under license. Other trademarks and trade names are those of their respective owners.	Item SP-0270 Copyright © 2016 Holdings Inc. 1010 Valley Drive, Suite 200 Plymouth, PA 15067 Keep All Relevant Information For Future Reference FCC ID: 2ADMS5-SP-0270
FAQ • If the Wireless Speaker cannot be paired with your device, please try the following: Ensure that your speaker is in pairing mode or reconnection mode. Ensure that the Bluetooth function of your mobile device is activated. • If the Wireless Speaker cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works.			