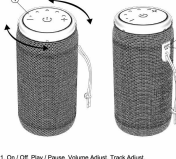


Date: 27 05 2026 Product: SP-0296 IM	SKU:	ZEEVA INT LTD
---	------	-------------------------

SP-0296 IM
Size: 387(w) x 100(h) mm

 RÖTATE Wireless Speaker Thank you for purchasing the Rötate Wireless Speaker. This manual provides more information about this wireless speaker, please read the instructions before using.	 Bluetooth  1. On / Off Play / Pause, Volume Adjust, Track Adjust, Channel Adjust Knob 2. USB Type-C Charging Port 3. LED Indicator 4. Rope	Pair Wireless speaker with your mobile device 1. Keep the distance between your wireless speaker and mobile phone (or other devices) within 32.8 Feet. 2. Power on the wireless speaker. 3. Activate the Bluetooth function on your phone within range and select "SP-0296 IM" from the list above. 4. You will hear a beep sound when pairing is successful. Reconnect Wireless speaker to your mobile device When powered on, the wireless speaker will automatically connect with the last successfully paired device. Charging your Wireless speaker ⚠. For your safety, please always use appropriate TV output charger! Adapter to charge the product, DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product. 1. Use the USB Type-C charging cable provided with the wireless speaker. 2. Connect the USB Type-C plug to USB Type-C charging port on the speaker. Then connect the USB plug to wall adapter to begin charging. 3. The LED indicator will turn red while charging and will turn off once fully charged. NOTE: • Please fully charge the product before use. • You must select a qualified charger from a regular manufacturer. • Do not charge the Wireless speaker if it has been not used for more than 6 months.  USB Plug USB Type-C Charging Plug ⚠. CAUTION: DO NOT USE the charging cable included with this item as a cord for use with this product only.	Bluetooth Speaker Mode Play/Pause: Short press the On / Off Knob twice. Next Track: Short press the On / Off Knob twice. Previous Track: Short press the On / Off Knob three. Volume Up: Rotate clockwise the On / Off Knob. Volume Down: Rotate counterclockwise the On / Off Knob. FM Radio Mode NOTE: Plug in the USB Type-C Charging Cable will improve the FM Radio's sensitivity. Switch to FM Radio Mode: Short press the On / Off Knob 4 times. Short press the On / Off Knob 4 times again will back to Bluetooth Speaker mode. Auto-Scan: Press and hold 2 seconds on the On / Off Knob. Next Channel: Short press the On / Off Knob twice. Previous Channel: Short press the On / Off Knob three. Volume Up: Rotate clockwise the On / Off Knob. Volume Down: Rotate counterclockwise the On / Off Knob. Main/Intro: Short press the On / Off Knob. True Wireless Stereo (TWS) Mode NOTE: Please purchase two pieces of Rötate Wireless Speakers to perform TWS Mode. TWS mode is not supported in FM Radio mode. 1. Turn On both wireless speakers. 2. Disconnect both wireless speakers from any Bluetooth device. 3. Keep both wireless speakers side by side. 4. Press and hold 2 seconds on the On / Off Knob on ONE of the wireless speakers. And then it will have an alert sound. 5. The wireless speaker will connect with the other wireless speaker in few seconds. When successfully connected, the wireless speakers will have another alert sound. 6. Now you can follow the "Pair Wireless speaker with your mobile device" to pair with the mobile device. 7. To disable the TWS mode, open an alert sound on ONE of the wireless speakers. Or, press and hold 2 seconds on the On / Off Knob on ONE of the wireless speakers. They will have an alert sound and then disconnected.	Technical specification Driver Diameter: 52 mm Impedance: 4 Ohms Power Supply: Li-ion Battery 3.7V 600 mAh Playtime: 1.5-2 Hours Charging Time: 1.5-2 Hours Bluetooth Range: 32 Feet Bluetooth Version: 4.0 FM Radio Mode Charging Method: USB Type-C Charging USB Type-C Charging Cable Length: 11.8 in. (30 cm) USB Type-C Charging Cable Rating Max. 5VDC, 5W. FAQ • If the Wireless speaker cannot be paired with your device, please try the following: Ensure that your speaker is in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated. • If the Wireless speaker cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works. ⚠. Safety instructions for the lithium battery and charging the product The input voltage to the product is DC 5V / 5A. In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/adaptor for charging the product. Only charge the product at ambient temperatures between 10°C/50°F and 40°C/104°F. Do not fast above 70°C/158°F, eg. Do not expose to sunlight or throw into fire. Switch off the product after use. Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. ⚠. extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.	FCC STATEMENT This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the receiver off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. The Bluetooth® word mark and logo are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners. FCC FCC ID: 2ADAMS-SP-0296 ITEM# SP-0296 Distributed by 1616 Holdings, Inc. 1616 Market Street, Suite 200 Philadelphia, PA 19106 Made in China Keep All Relevant Information For Future Reference

Approval:	Date:
-----------	-------