

ADVENTURER DRONE

 
Instruction Manual

Thank you for purchasing the adventurer drone.
This manual provides more information about this drone,
please read the instructions before using.




Product Overview


Front

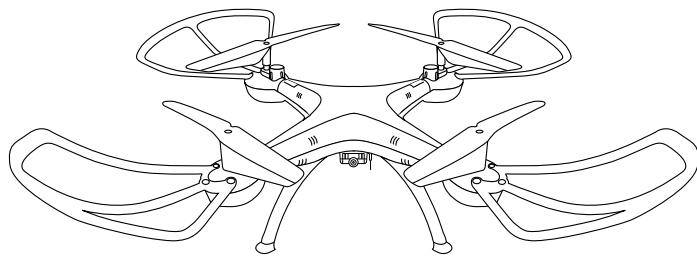


Back

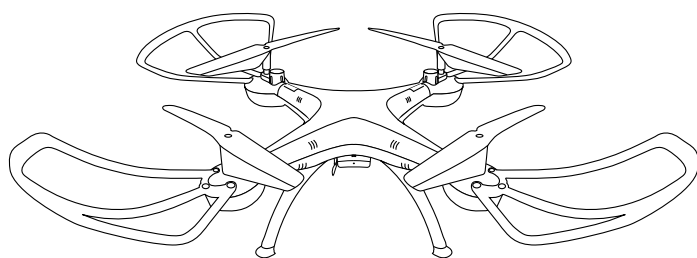 


Package Contents

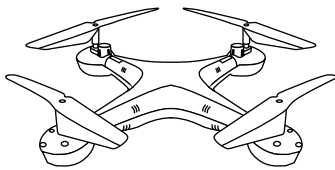 


ADVENTURER Drone x 1

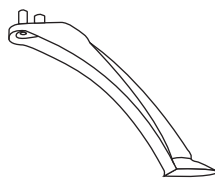 


Landing Gear x 4

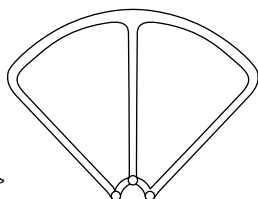 


Propeller Guard x 4

 

USB Charger x 1

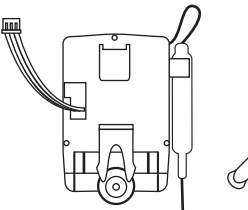 


Camera x 1

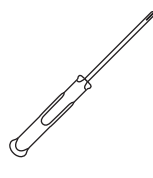 

Screwdriver x 1



 Screw x 6

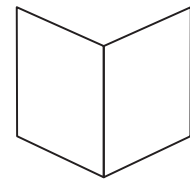

Instruction Manual x 1

Specification

Drone power supply: Rechargeable 380 mAh Li-ion Battery 3.7V
Charging time: Approx. 1 hour
Play time: 6-7 minutes
Control distance: Within 130 Feet

Smartphone App Download




Method 1: Scan the QR Code for quick download
Method 2: Search "WIFI ADVENTURER" in the Apple app store
or Google Play

As the app download limitations are not the same in all the countries.
Please noted that the method of download maybe different,
but you can try all the three methods provided for you above.


Compatible With: iOS & Android

 Remote Control App

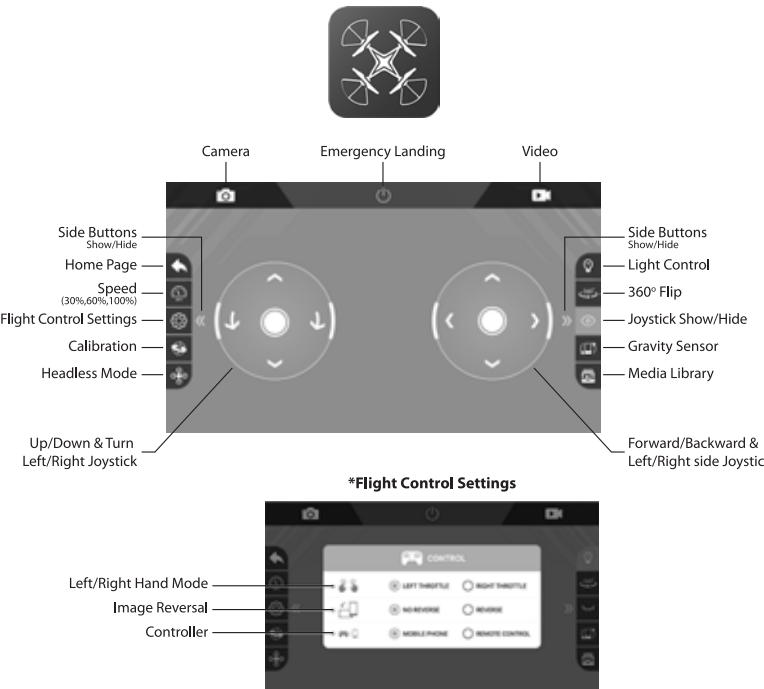


Operation Method

 
Note: To avoid losing control, always pay attention when controlling the drone.

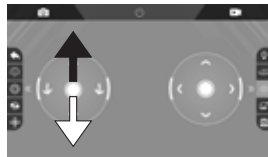


Up/Down joystick

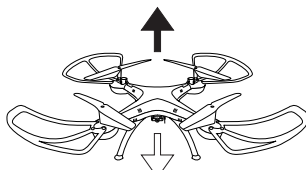 

Control drone up and down

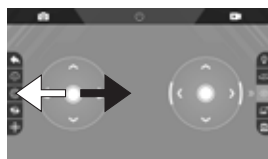 


Turn Left/Right joystick

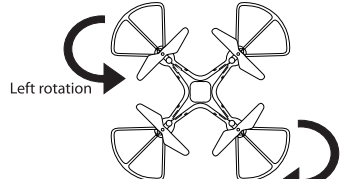 

Control drone left or right rotation



 
Forward/Backward joystick

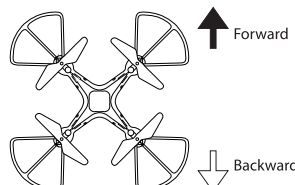

Control drone forward and backward movement



 Left/Right side joystick

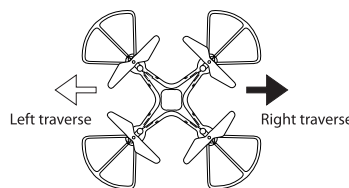

Control drone left or right lateral movement

 
Follow below Instructions to perform some 360-degree rolling action. In order to perform rolling action, ensure to maintain the height of drone.

Press the 360-degree button from the app first and then select rolling direction mentioned below.


Left side tumbling
Click the "Forward/Backward & Left/Right side joystick" toward the left quickly from the app and then click the joystick back to the middle.




Right side tumbling
Click the "Forward/Backward & Left/Right side joystick" toward the right quickly from the app and then click the joystick back to the middle.

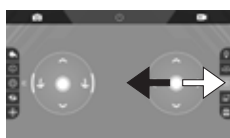




 
Front rolling
Click the "Forward/Backward & Left/Right side joystick" toward the front quickly from the app and then click the joystick back to the middle.

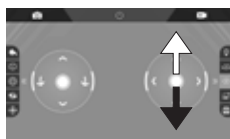

 Backflip
Click the "Forward/Backward & Left/Right side joystick" toward the back quickly from the app and then click the joystick back to the middle.

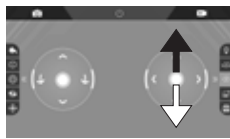

Drone Battery Charging

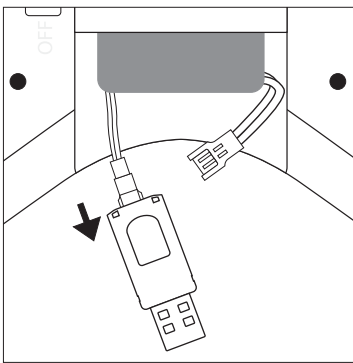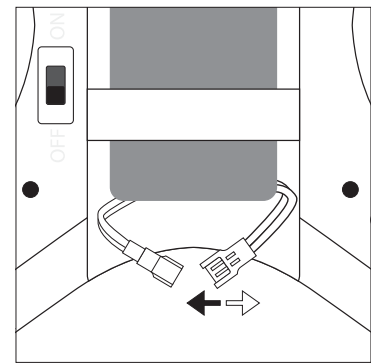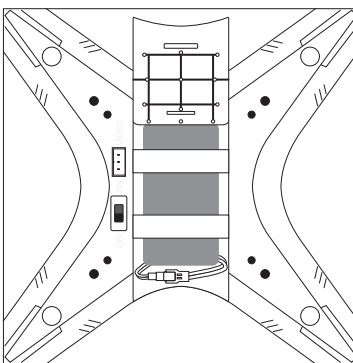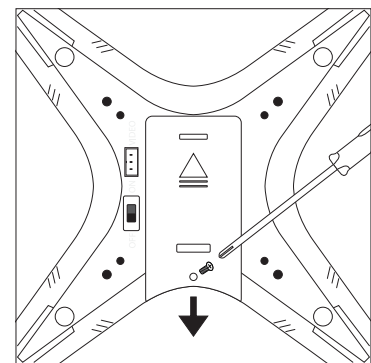    

To recharge the battery of the drone. Unscrew the screw on the battery box to open the cover.
Disconnect the rechargeable Li-ion battery from the drone. Connect and plug into the socket of USB
charger for battery charging. It should be placed as show on the diagram. In the process of the battery
charging, the indicator light turns on in red; after full charging, the indicator light will turn off.

Notice

Please read this instruction manual carefully before operating the product.

Please do not operate the product in the gale.

The flying ground should be the local field and legal for remote control flying. Please do not
operate the product in forbidden zone or around people or animals.

Keep the aircraft a certain distance (at least 2-3 meters) from others when playing together.

Care and Maintenance

Always use dry and soft cloth to clean this product.

Avoid this product from being exposed to sunlight or heat.

Avoid immersing these toys in water, otherwise, the electronic parts may be damaged.

Check regularly and inspect the plug and other accessories. If any damages are discovered,
please stop using immediately, until it is completely repaired in good working condition.

Important: Battery Information

⚠ Li-ion battery charging warning statement:

 
The input to the drone is 5V 1A.

In order to charge the drone in a safe manner and reliable conditions, please only adopt
battery pack or USB ports from laptop or computer for charging this product.

Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher
than 5V) as this may result in severe injury or loss of property, and we cannot control the
operating process during the time the user using this product.

Power On/Off

Slide the ON/OFF Switch to ON to turn on the ADVENTURER Drone.
Slide the ON/OFF Switch to OFF to turn off the ADVENTURER Drone.

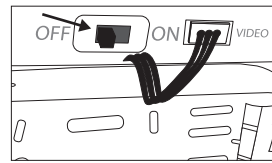

Connect the Drone

Step 1:
Turn the drone power on, and place the drone on a flat location. The indicator will start to flash.

Step 2:
Activate the Wifi function on your phone within range and select "WIFI DRONE_XXXX" from the list shown.

Step 3:
Open the ADVENTURER Drone control app, press start button, it will automatically connect to the drone.



Camera Photo / Video Instructions

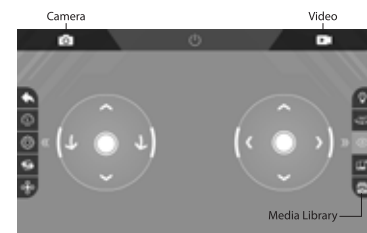 


Photo:
Press the Camera button from the app to take a
photo. The photo will automatically saved to the app
Media Library (e.g. /storage/emulated/0/DCIM/Camera)
and your phone album.

Video:
Press the Video button from the app to start
recording video. Press again to stop recording. The
video will automatically saved to the app Media
Library (e.g. /storage/emulated/0/DCIM/Camera) and your
phone album.

* Due to different smartphone & OS, the way to export the photo or video may be different.
* Export the photo and video to computer based on your usual method.

Warning

This product is suitable to be used by people who has operating experience in flying model or
aged no less than 14 years old.

This product is not a toy but a precise equipment integrating mechanics and electronics with
expertise of aerodynamics and high-frequency transmitting. It requires correct assembly and
debug so as to prevent the accident from happening. The user should operate or control it in a
safe way.

Please do not put the product in your mouth to prevent choking hazard of small parts.

Please do not put the finger into available interspaces.

Please do not play the product in a brutal way such as throwing, crashing or twisting it.

Please store the smaller-sized product accessories in places that are out of reach of children, in
order to avoid the occurrence of accidents.

The product is very powerful. When flying for the first time, observe carefully. The joystick must
be slowly pushed in order to prevent the product from ascending too quickly and result in
unnecessary collision and damages.

When the flight has ended, the power supply of the remote control should be switched off and
also switch off the power supply of the product.

Avoid placing the batteries in places in high temperatures and avoid exposure to heat.

When young children are operating the product, it shall be ensured that the adults are guiding
and making sure the product control is within the viewing range of the controller (or
instructor) so that it makes the control of the drone more convenient.

When the product is not in use, please switch off the power supplies of both the aircraft and the
remote control, and remove the batteries from the remote control.

Please note that we won't take any responsibility for any wrong operation as this may result in
severe injury or loss of property, and we cannot control the operating process during the time
when the user assembles or uses this product.

Once this product is sold, we won't be responsible for any safety responsibility during the time
the user operates or uses controls this products.

 
Drone Accessories Assembly

Propeller Guard:
Insert four propeller guard into the holes of the drone, and use the screwdriver to lock four screws lightly.


Landing Gear:
Insert the four landing gear into the landing gear holes at the bottom of the drone.

Camera:
Insert camera stuck on fuselage buckle at the bottom of the drone, and plug the wire to the video section.


Propeller Guard:

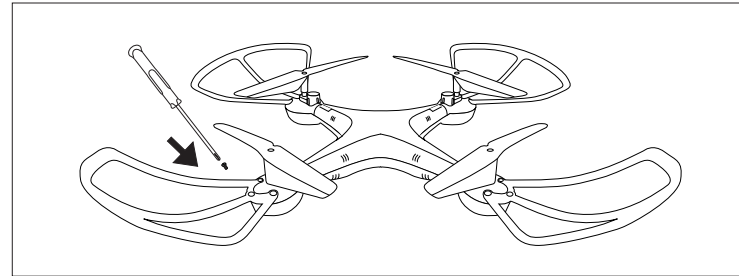

Landing Gear:

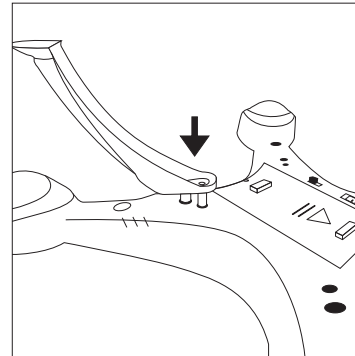 

Camera:

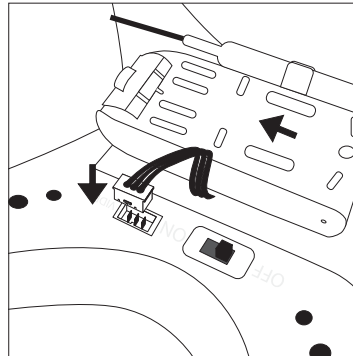 

FCC Statement

This device complies with the part 15 of the FCC rules. Operation is subject to the following two
conditions: (1) this device may not cause harmful interference, and (2) this device must accept any
interference received, including interference that may cause undesired operation.
Caution: changes or modifications not expressly approved by the party responsible for
compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital
device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable
protection against harmful interference in a residential installation. This equipment generates,
uses and can radiate radio frequency energy and, if not installed and used in accordance with
instructions may cause harmful interference to radio or television reception, which can be
determined by turning the equipment off and on. The user is encouraged to try to correct the
interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which
the receiver is connected.
• Consult the dealer or experienced radio/ TV technician for help.

RF Warning Statement:
The device has been evaluated to meet general RF exposure requirement.
This equipment should be installed and operated with minimum distance 20cm between the radiator
& your body.

FCC ID: 2ADM5-TL0021

Made Exclusively for Five Below
Distributed by Zeeva International Limited
Suite 1006C-8, 10th Floor, Exchange Tower,
33 Wang Chiu Road, Kowloon Bay,
Hong Kong, China



Keep All Relevant Information for Future Reference

