

Content

Content.....	1
1 Introduction.....	2
1.1 Acknowledgment.....	2
1.2 Announcements.....	2
1.3 Safety Instruction.....	2
1.4 Abbreviation/Terminology.....	3
2 MID Introduction.....	4
2.1 MID Operation and Preparation.....	4
2.2 MID Status and Reminder.....	4
3 Quick Start Guide.....	5
3.1 Keys Function.....	5
3.2 Start up and Shutdown.....	5
3.3 Open and Close of the Screen.....	5
3.4 Usage of Touch Screen.....	6
3.5 Home Page.....	7
3.6 USB Connection.....	9
4 Basic Setting.....	10
4.1 Wireless and Internet.....	10
4.2 Data Usage.....	12
4.3 Display.....	13
4.4 Language and Input Method.....	14
4.5 Backup and Reset.....	16
5 Multi-Media.....	17
5.1 Music.....	17
5.2 Video.....	18
5.3 Photo Gallery.....	19
5.4 Camera.....	20
6 Internet.....	20
6.1 Browser.....	20
7 Other Application Procedures.....	22
7.1 Clock.....	22
7.2 Calculator.....	22
8 Troubles Shooting.....	23
9 FCC statement.....	24

1 Introduction

1.1 Acknowledgment

Thanks for your purchase of our product. The product is designed with various functions. It is easy to achieve wireless communication and internet, you have access to surf the internet anytime and anywhere; There are many sensors which offer you brand-new operation and entertainment; besides, it has camera shooting, which leads electronic consumption to enter into a fresh palm internet entertainment time.

The manual systemically introduces the functions, use techniques and announcements, please read this manual carefully before your operation.

1.2 Announcements

Preventive maintainance

- Please always keep the MID dry. To avoid the device short trouble, corrosion fault and electric short, please prevent the device, battery and charger from water and moisture, and don't operate the device or charger by wet hand.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger from violent shock or shake.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger of all over heating or too cold circumstance
- Never shock, throw, prod the MID, or drop, extrude, bend the MID.
- Never disassemble the device and accessories arbitrarily, otherwise the device and accessories are not in our company warranty scope.

1.3 Safety Instruction

Before the operation of the MID, please read this chapter and teach your kids about these information. For further details, please refer to the safety instructions and announcement.

- Never use the MID when driving car, in order to ensure safe driving.
- In the medical area, please abide by related rules and regulations. Please shut down the MID when it is near to the medical area.

- To avoid the wireless signal to interrupt the plane- controlled signal, please shut down the MID or using airplane mode when you are boarding a flight,
- To avoid electronic equipment failure, please shut down the MID in the vicinage of high-accuracy electronic equipments.
- Please don't disassemble the MID and accessories. Only authorized agent has access to service the MID.
- Please keep the MID far away from magnetic equipments, the radiation of MID may erase the data stored in the magnetic equipments.
- Never use the MID in the vicinage of high temperature, inflammable gas (gas station).
- Protect the MID and accessories from kids reach scope, and avoid the kids to use the MID without parents' supervision.
- Please comply with related rules and regulations, and respect others' privacy and legal rights while using the MID.
- Please strictly adhere to related instructions in the manual when using USB cable to ensure the safety of the MID or PC.
- Never use the MID in bathroom or other humid environment, and please protect the MID from liquid wash or wet.

1.4 Abbreviation/Terminology

Abbreviation/Terminology	Full Name	Description
MID	Internet Device	Internet Terminal
WIFI	Wireless Fidelity	Base on IEEE 802.11b standard wireless LAN
T F	Trans-flash	Alternative name Micro SD, super miniature memory card

2 MID Introduction

2.1 MID Operation and Preparation

Battery Charging

If this navigator is first used, please use AV adaptor to fully charge it.

1. Apply the power adaptor to charge for MID.

2.2MID Status and Reminder

Reminder icons

When some remind message appears in your reminder window, please click column and slip the screen to open the reminder list. Choose the menu you need, and confirm the information. Then you can close the reminder window through clicking the column to slide up. Please refer to below status icons:

	USB connected		USB debugging connected
	Return button		Downloading
	Setting button & Display recently-used application		Home button
	Current electric volume.		WIFI connected, internet is available

3 Quick Start Guide

3.1 Keys Function

Keys Function Description:

Power button	Short press to sleep/wake up, long press to startup and shutdown.
Volume + (up)	increase the volume
Volume - (down)	decrease the volume
HOME button (home) 	Click it in any interface will return to main interface.
Back button (back) 	click it in any interface will return to previous menu
Menu button 	This button will display in menu interface.
Setting button 	Can set the system and other menus & display recently browsed history

3.2 Start up and Shutdown

Start up

Long press **POWER key for three seconds**, you can enter into start up picture. The system enters into screen lock status, please unlock it.

Shutdown

1. Long press POWER, it will pop up shutdown window.
2. Shutdown window contains mute mode, airplane mode, silent mode three options.
3. Click Shutdown is the last step.

3.3 Open and Close of the Screen

Screen will be closed on its own when no operation happens.

1. Screen will be closed on its own if no operation happens for some time to save battery power
2. When screen is open, press POWER key, the screen will be closed immediately.

Open the screen when it is closed.

If the screen is closed, short press POWER to open the screen. The screen will be locked open it, it will show the picture as below picture, left slide to unlock and enter into camera, right slide the unlock icon to unlock the screen.



Picture 3.1

3.4 Usage of Touch Screen

MID operating methods

There are below methods to view the main screen, menu and application procedure in your MID.

Click

When you want to use the screen keyboard typing or choose application in the main interface, you only need to touch it by your finger.

Press on

If you want to open some item(text box or the link in the web page), or shortcut and main procedure move, you can press on this item.

Quickly slide or slide

Quickly slide or slide indicates make quick vertical or horizontal movement by finger.

Pull

Before you pull, you need to hold the it with strength until you pull it into the position you want.


Rotate

For most pictures, you only need to rotate the MID side wise to change the screen direction from

horizontal to vertical. For instance, when you are typing words, and watching movies.

3.5 Home Page

Main interface as below picture 3.2, long press the blank and it will popup windows to set wallpaper, folder, widgets, and shortcut.

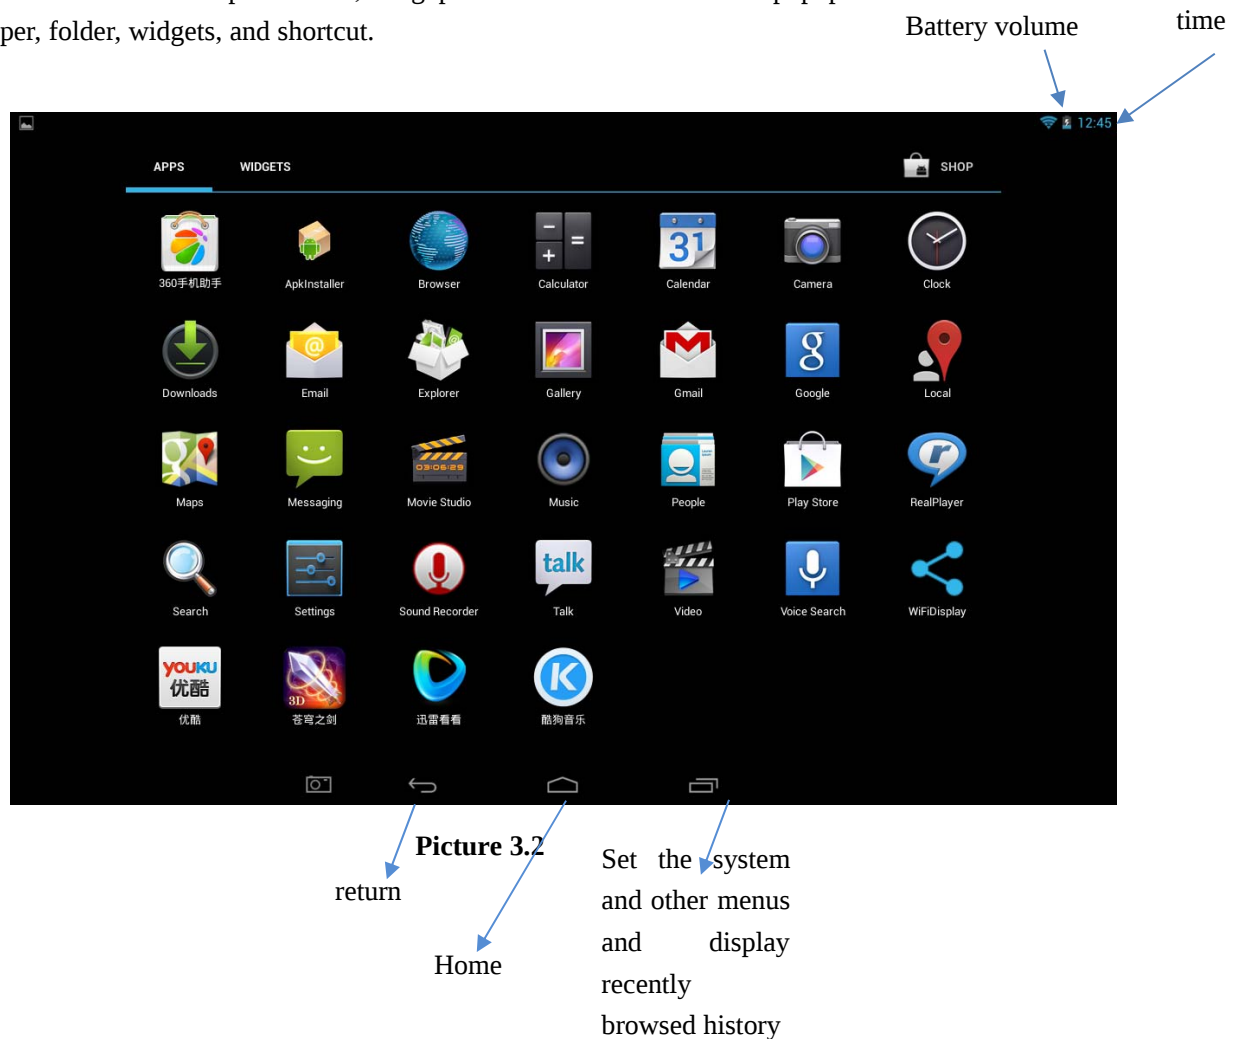


The shortcut icons management in desktop application.


Create folder icon in desktop

1. Drag the icons need to be put together on one icon(can also overlay several icons)as Picture 3.3.
2. Then click the overlaid icons, the applications can be folded, as Picture 3.4

Click the unnamed folder in the black box, it will popup the hidden keyboard, the folder name can be renamed (this is similar with Apple IOS system), the icons position can be changed through long press.

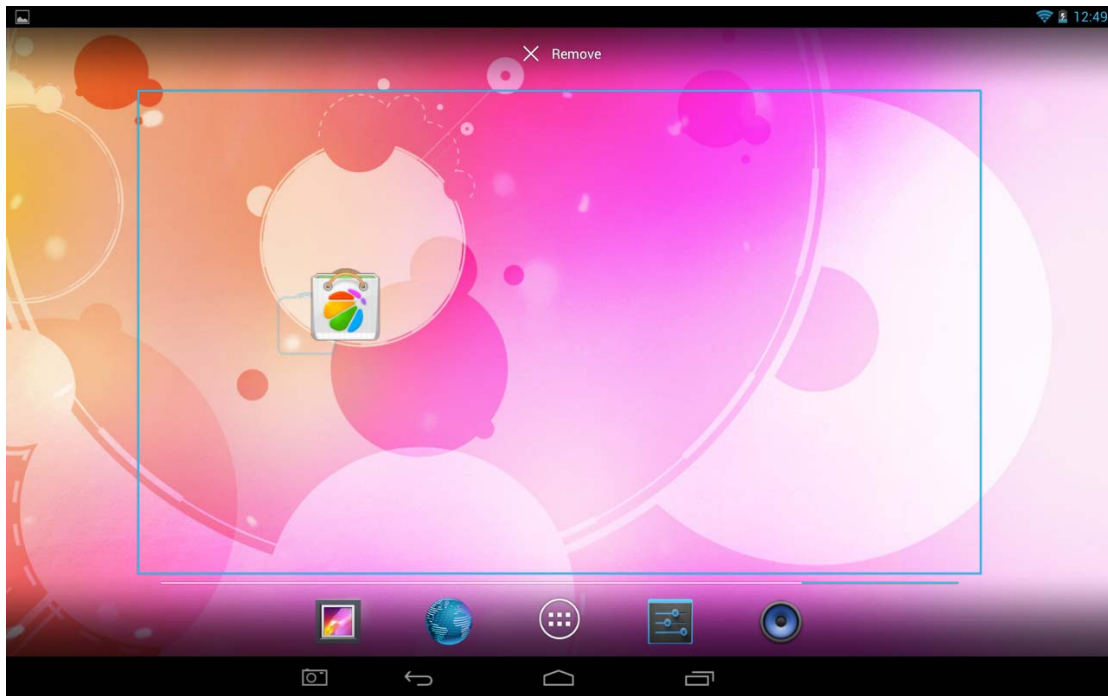


Picture 3.3

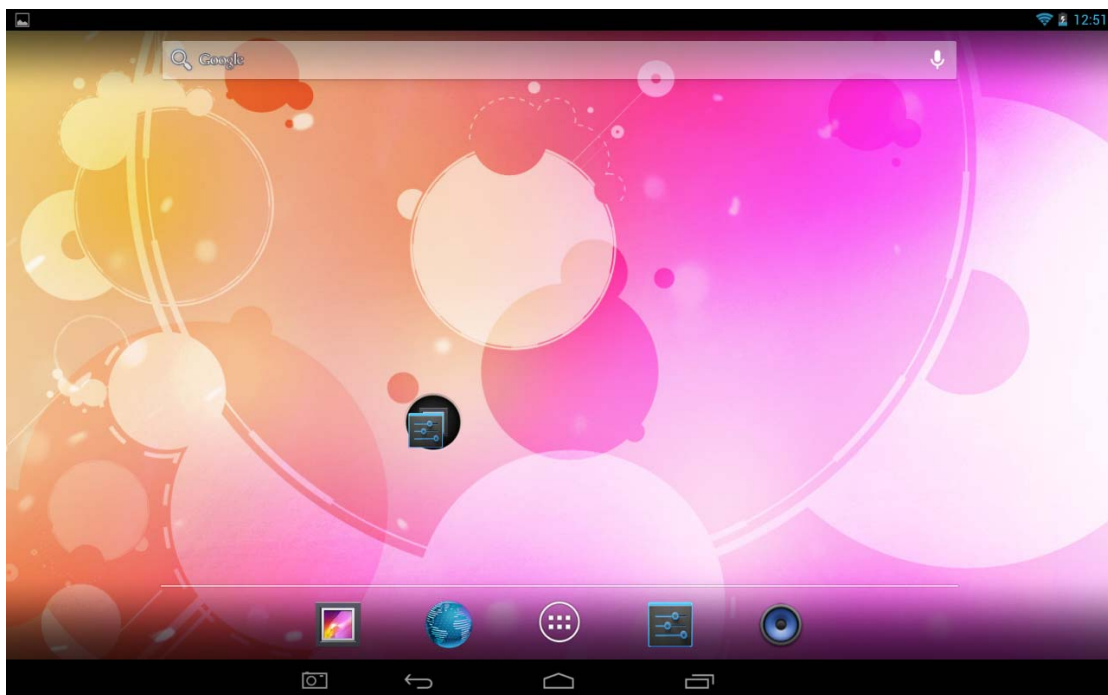

Picture 3.4

Remove the icons in desktop

 1. Long press the icons need to be remove, then on the right above of the screen, it

will appear  icons.

2. Drag the icon to the above of the remove icon, till the icon become red, then move your finger to delete the icon.

Change the wallpaper of desktop


1. In home page, long press any blank space in main screen, it will popup a window to change the wallpaper.
2. Click the gallery or wallpaper gallery to select the wallpaper.

3.6 USB Connection

MID storage configuration

Before transmitting documents, you have to conduct storage configuration for your MID:

1. Connect the MID and computer by USB cable, the reminder column will show the remind information.
2. Open the reminder board; please view the MID status and reminder to learn how to open the board.
3. In the reminder board, click the “USB Connected”, it will as below Picture 3.5, then click “open USB storage configuration”.
4. Now the USB is connected successfully.

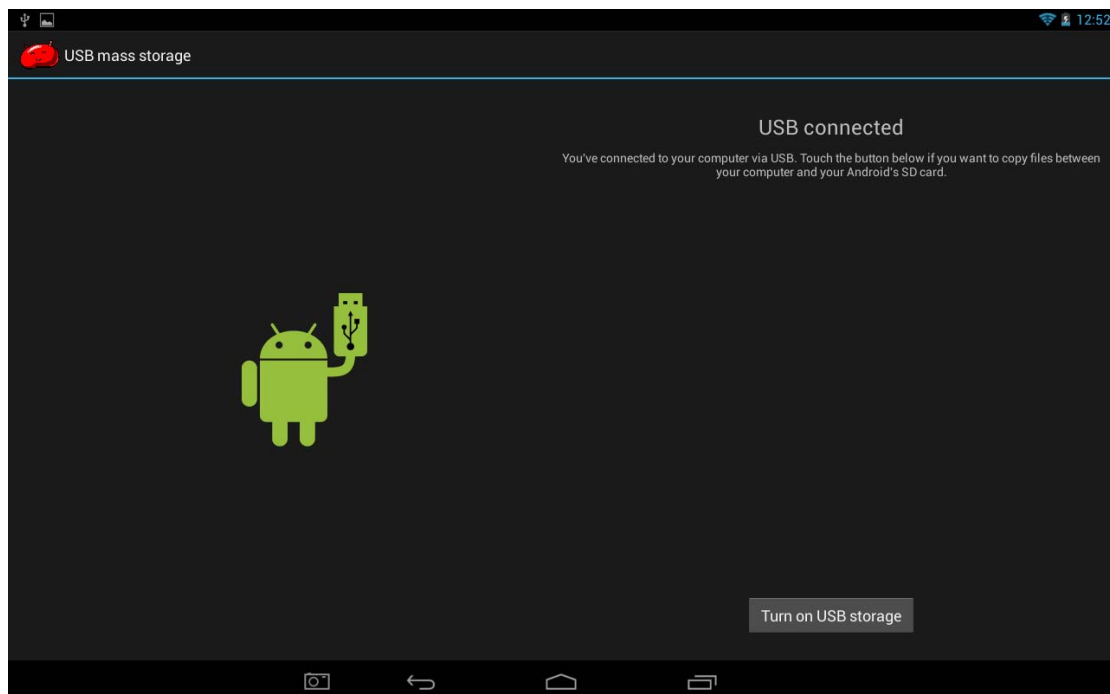

Picture 3.5

Copy the document into memory card

1. Connect the MID to computer with USB cable.

2. As MID storage configuration, it is connected with computer successfully.
3. Open the “My computer” in your computer, check the items in “removable disc”.
4. Copy the documents you need into “removable disc”.
5. After copying finishes, click “shutdown the USB storage configuration” to uninstall.


Notice: When the MID is connected with USB cable, and you open the USB storage configuration, you can't view the memory card through the MID. Only after you detach the USB cable, you can view the memory card in the MID.

4 Basic Setting

4.1 Wireless and Internet

1. Connect Wi-Fi


- 1) In the main menu or interface, choose **setting** application procedure.
- 2) Click WLAN, open wifi, MID will automatically search the available Wifi wireless internet. As Picture 4.1
- 3) Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click connect.

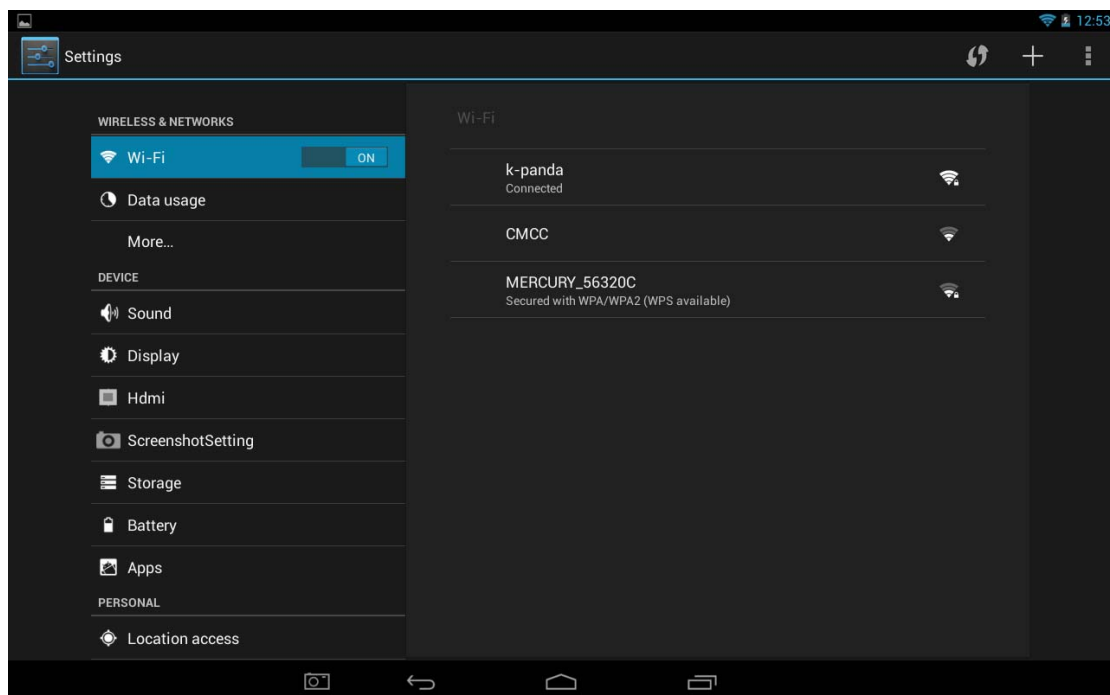

Picture 4.1


2. Add Network

- 1) Click **ADD NETWORK** icon in right top, as Picture 4.2

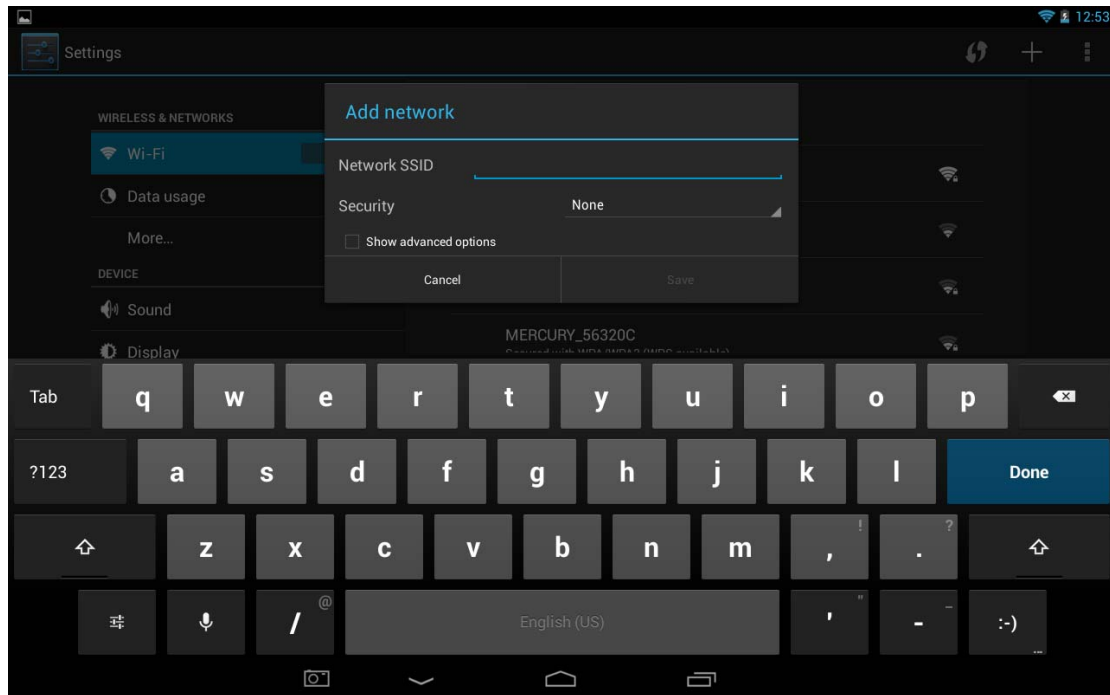


Picture 4.2

- 2) Input network SSID, the wireless network name, click save.
- 3) Click user name already saved, click connect to use network, as Picture 4.3

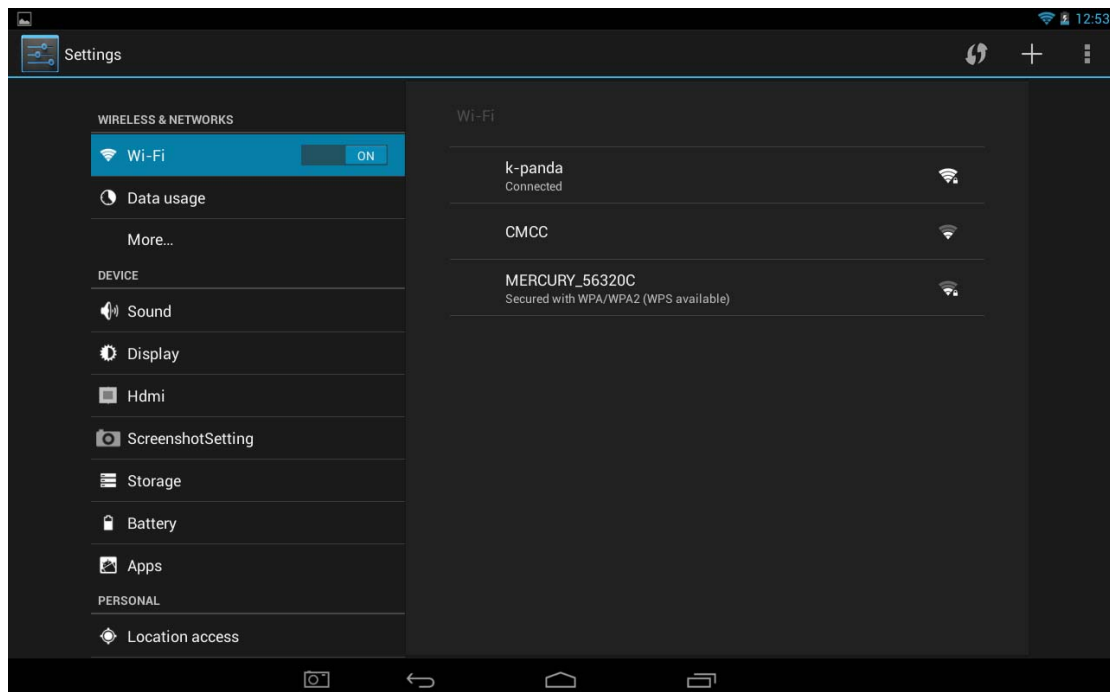

Picture 4.3


4.2 Data Usage

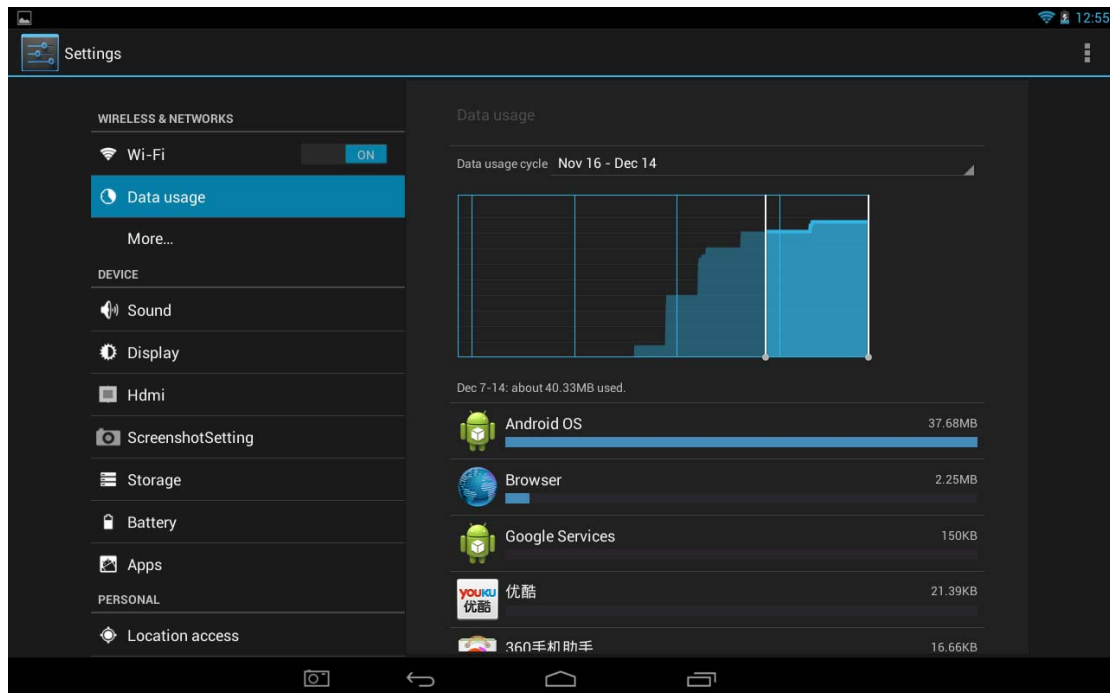

Picture 4.4

Check WIFI data usage

Click  icon in right top of Picture 4.4 click **Data Usage**, as Picture 4.5

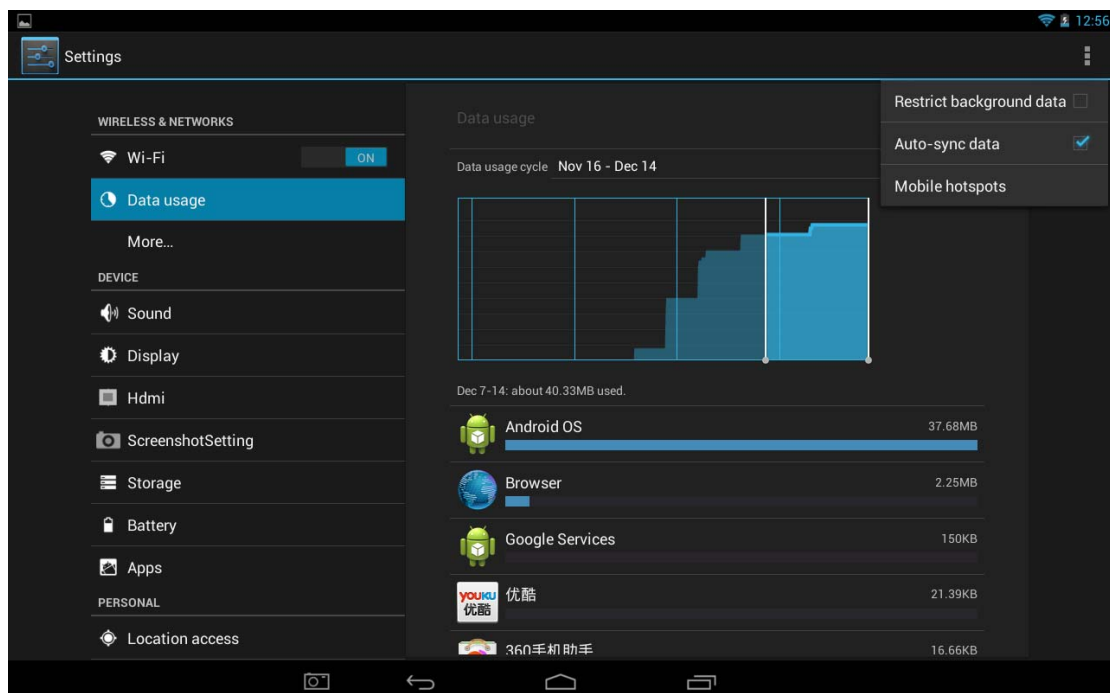


Picture 4.5

4.3 Display

Adjust the screen brightness

1. Click **Setting** application procedure.
2. Click **display**, choose brightness,
3. Drag the portlito to adjust the brightness volume.As Picture 4.6

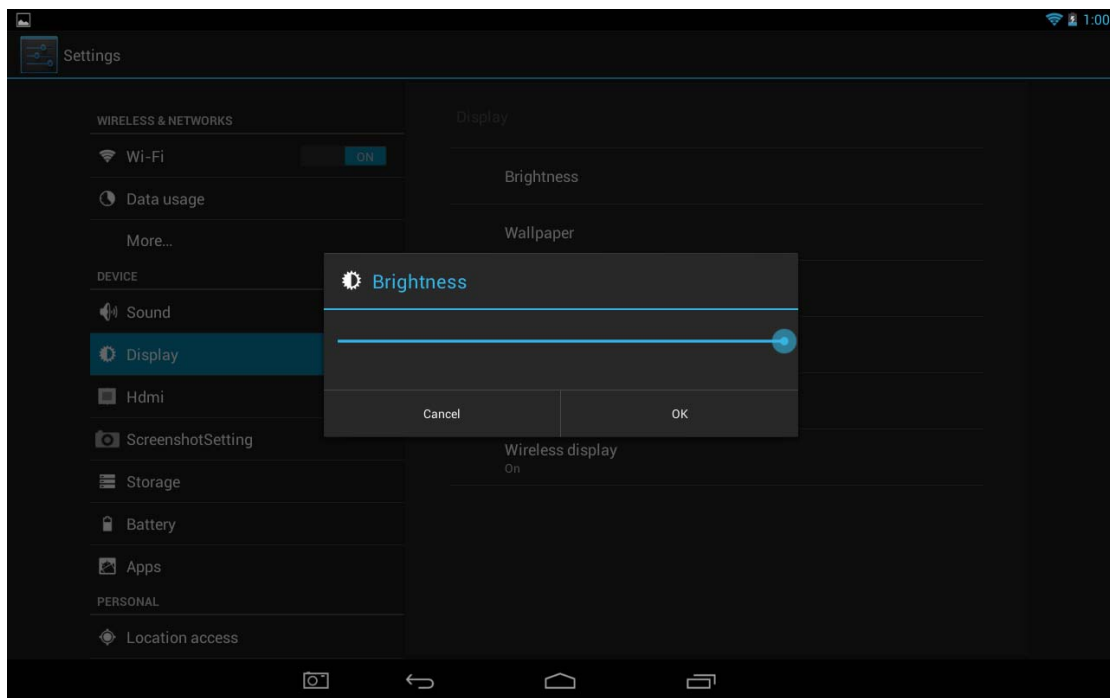


Picture 4.6

4. Click OK after brightness is adjusted.

Wall paper


1. Click **setting** application.
2. Click **display**, click **wallpaper**.
3. You can choose different wallpapers as you like—live wallpapers---gallery(user defined)---wallpapers (system defect)---video wallpaper, as **Picture 4.7**

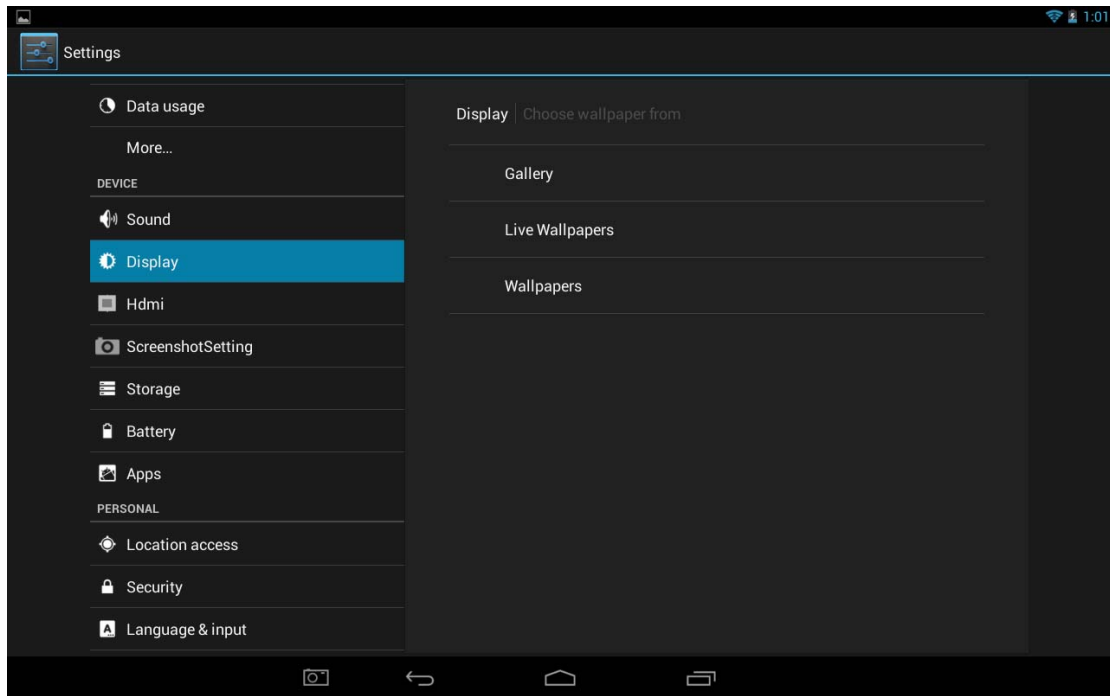

Picture 4.7


4.4 Language and Input Method

Click setting, select language and input method, choose language to switch language, as picture 4.8

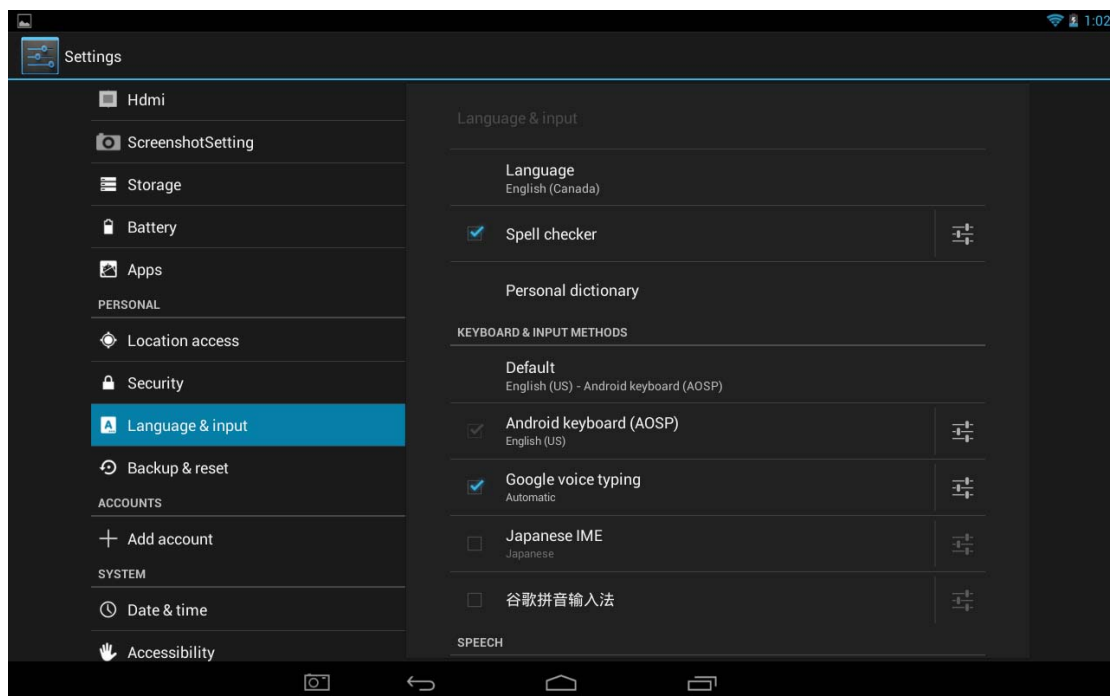


Picture 4.8

Click **setting**, choose **language and input**, choose **Android keyboard setting**, click input language, as Picture 4.9

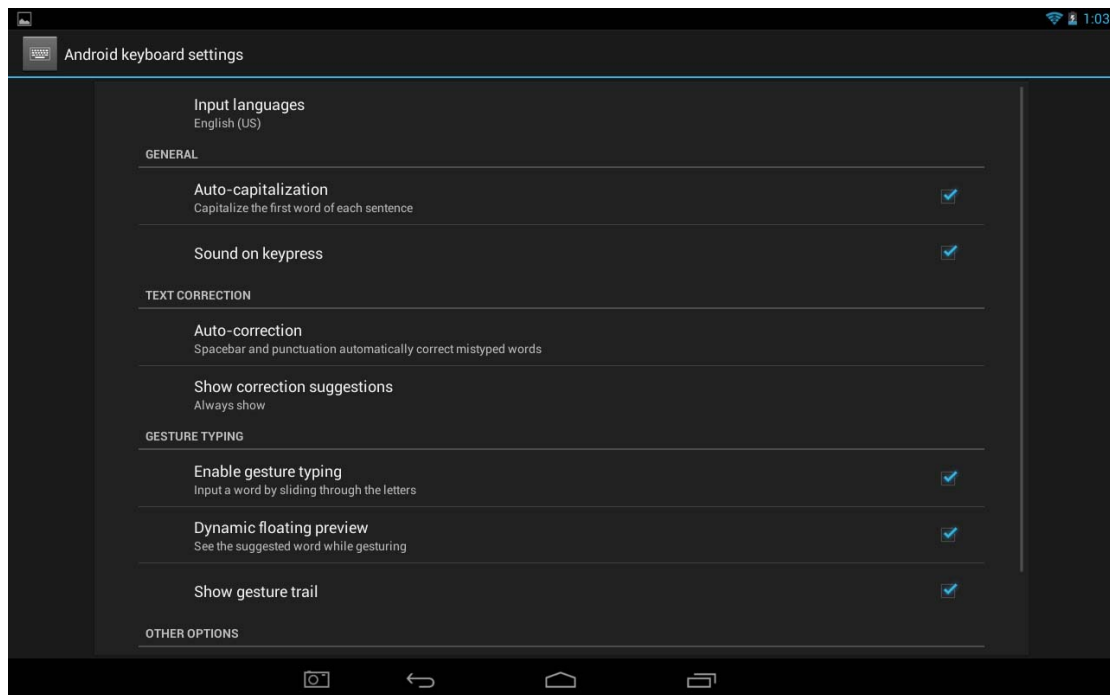


Picture 4.9

Choose the language you want to change in the language list, as Picture 5.0

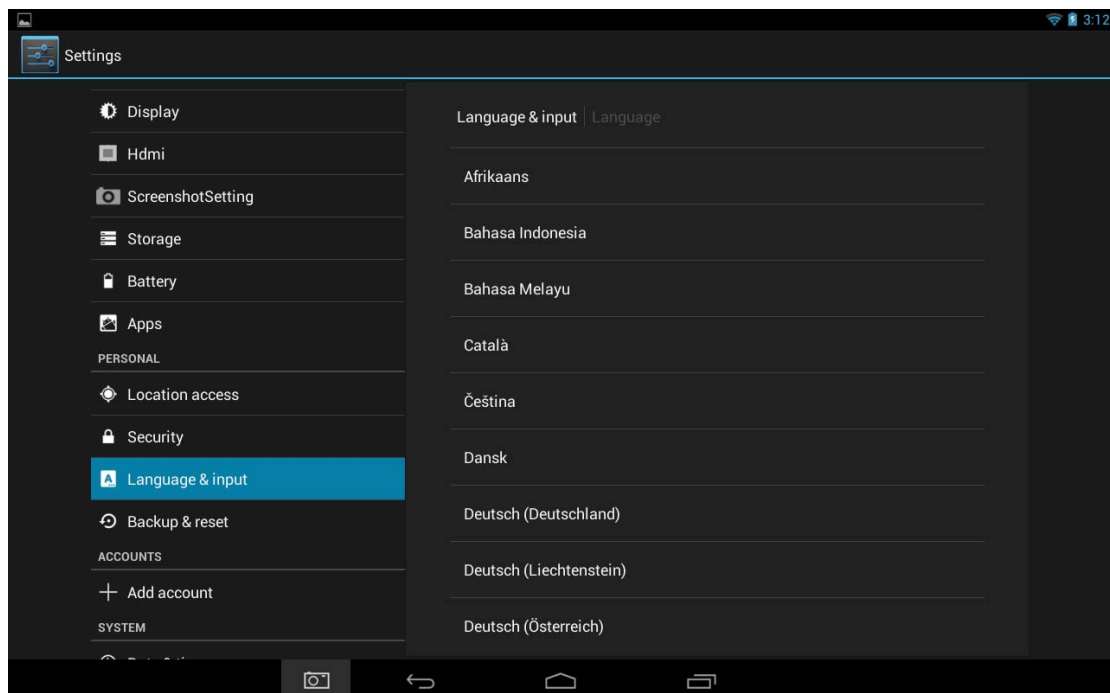

Picture 5.0

Return to **language and input method**, click **default**, as Picture 5.1, select input method you want to use

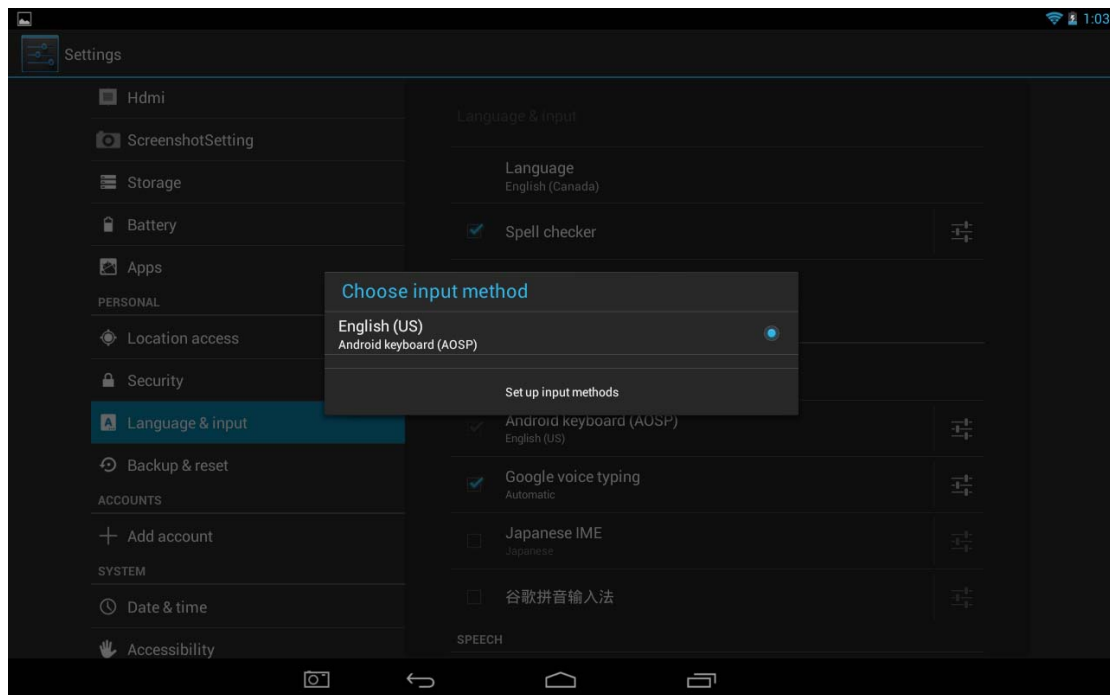


Picture 5.1

4.5 Backup and Reset

Connect WIFI and login your google account, choose **backup my data**, system will backup your data into google server.

If you need to recovery factory reset, please click reset, as Picture 5.2, if you need to formulate NAND, please click reset tablet.

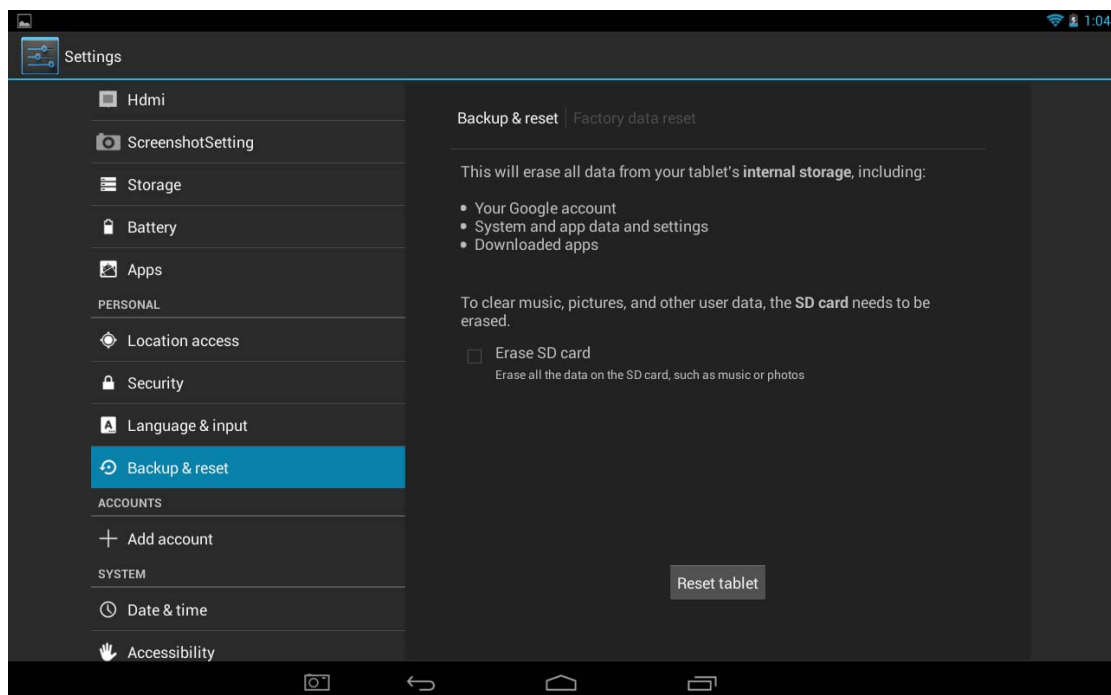


Picture 5.2


5 Multi-Media

5.1 Music

Enter into music player: in menu or desktop click music  icon to enter into music player, click the music you want to play, as Picture 5.3

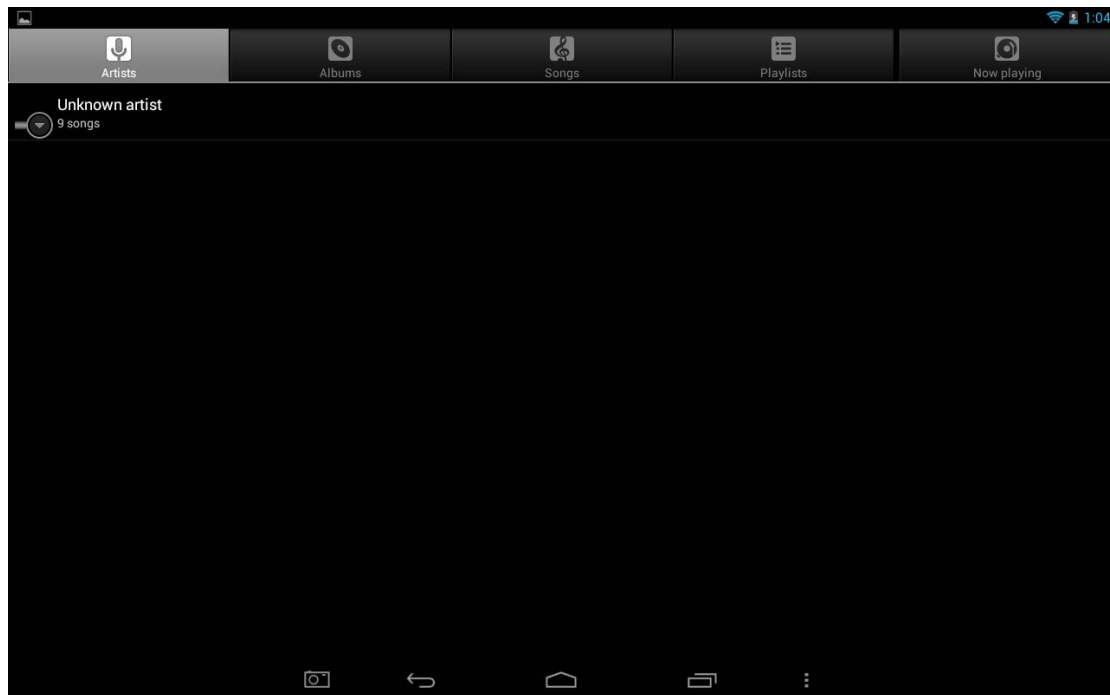

Picture 5.3

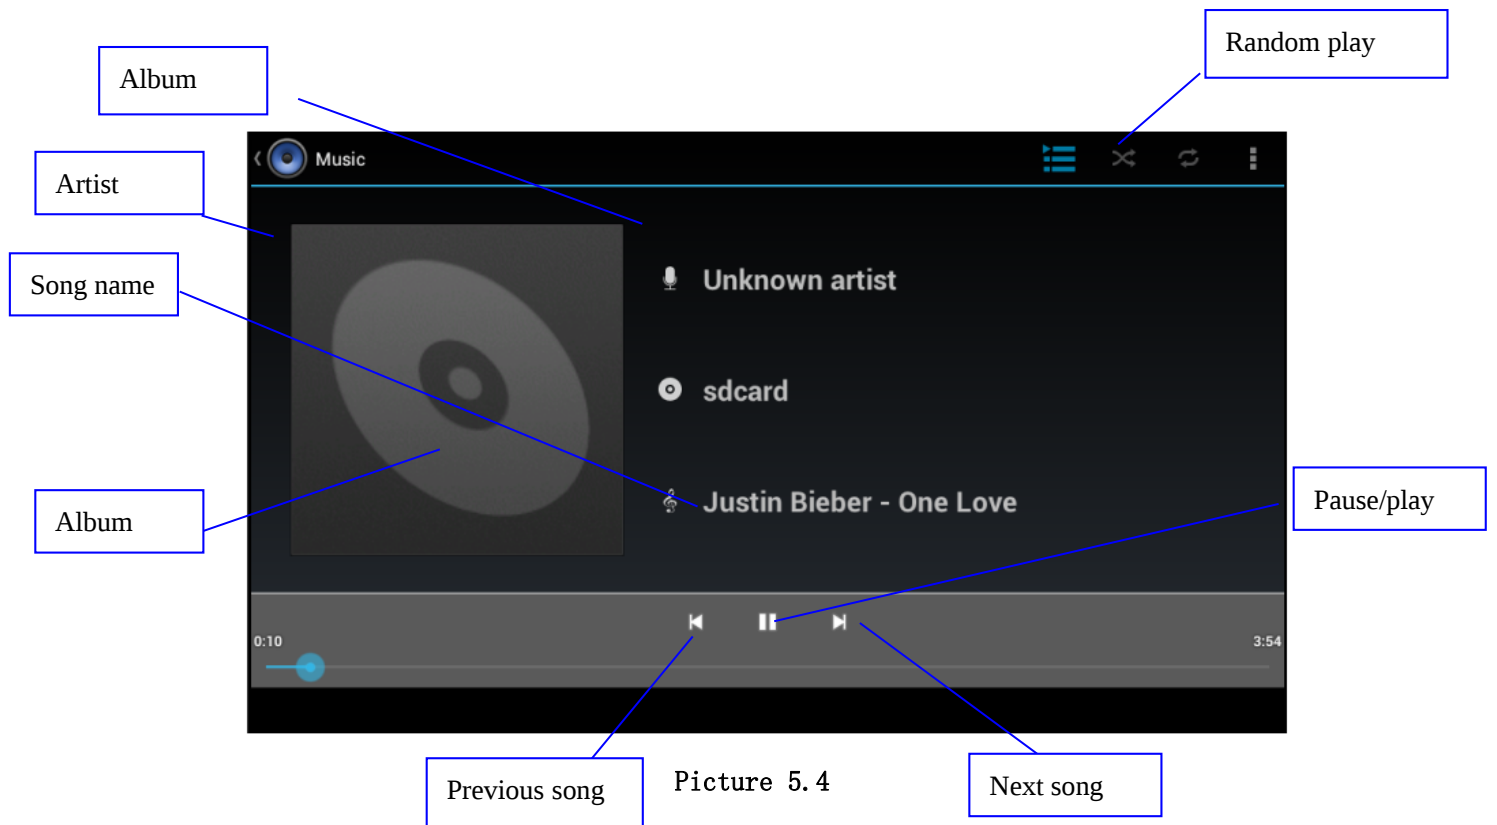

Picture 5.4


- Drag the progress bar to adjust play progress.
- Operation of music player button as Picture 5.4

5.2 Video

- Enter video player: choose  application in main menu, choose the video you want to play as Picture 5.5
- Operation of video player button as Picture 5.6



Picture 5.5

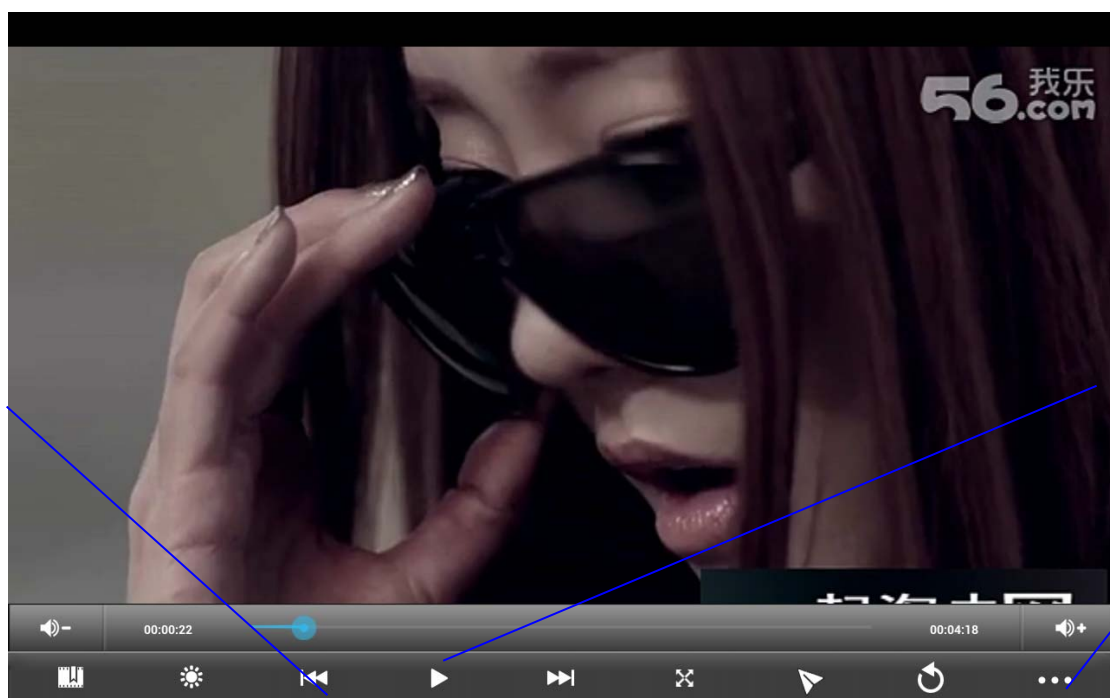

Picture 5.6


5.3 Photo Gallery

Photo gallery application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

5.4 Camera

In the main interface or desktop, click camera application procedure , enter into camera

- Operation of camera ,Switch camera: choose **Menu** key, click **switch front/back camera**, as Picture 5.7

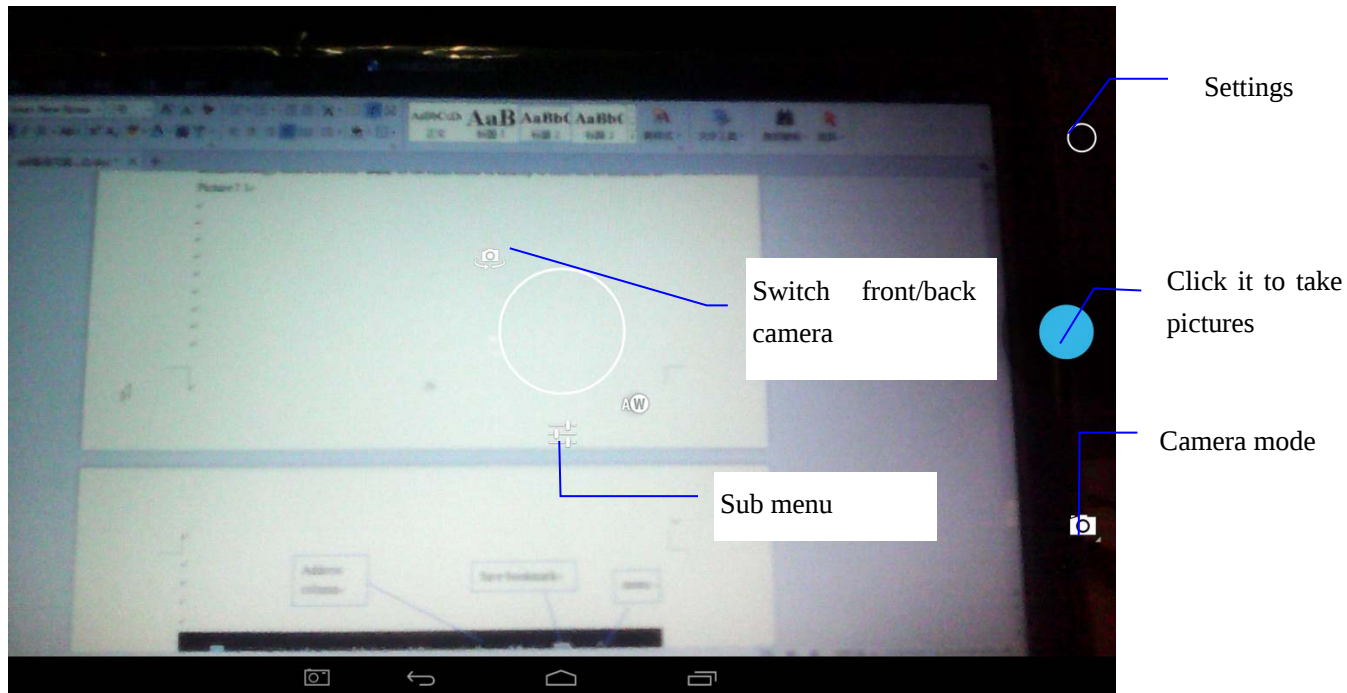

Picture 5.7

6 Internet


6.1 Browser

In case of Wi-Fi or mobile internet is connected well (Please refer to Chapter 4.1 for wireless and internet setting), click IE browser  in the main menu or desktop to enter the IE interface, as Picture 6.1



Picture 6.1

Click address bar to input the website, click start, enter into related webpage, then you can browse the website information, as Picture 6.2 and you can click the menu you can refresh ,save to bookmarks,,share page,bookmarks,,history and setting the webpage.

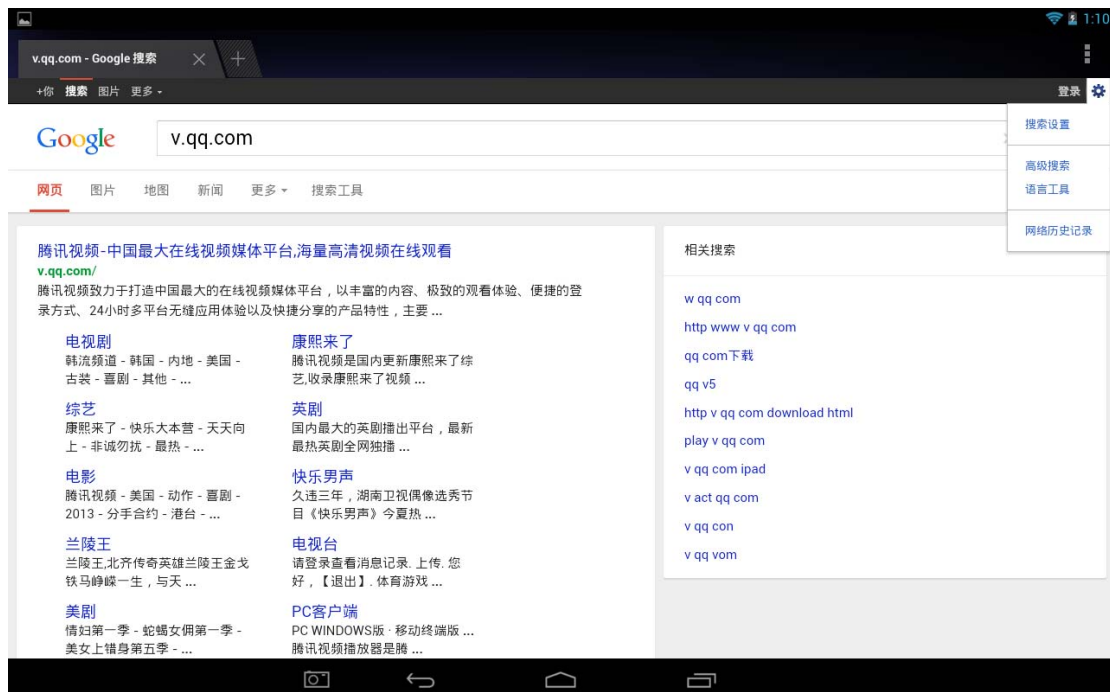


Picture6.2

7 Other Application Procedures

7.1 Clock

Click **Clock** procedure, enter into below interface as Picture 7.1.

There are clock, picture, music and homepage buttons.

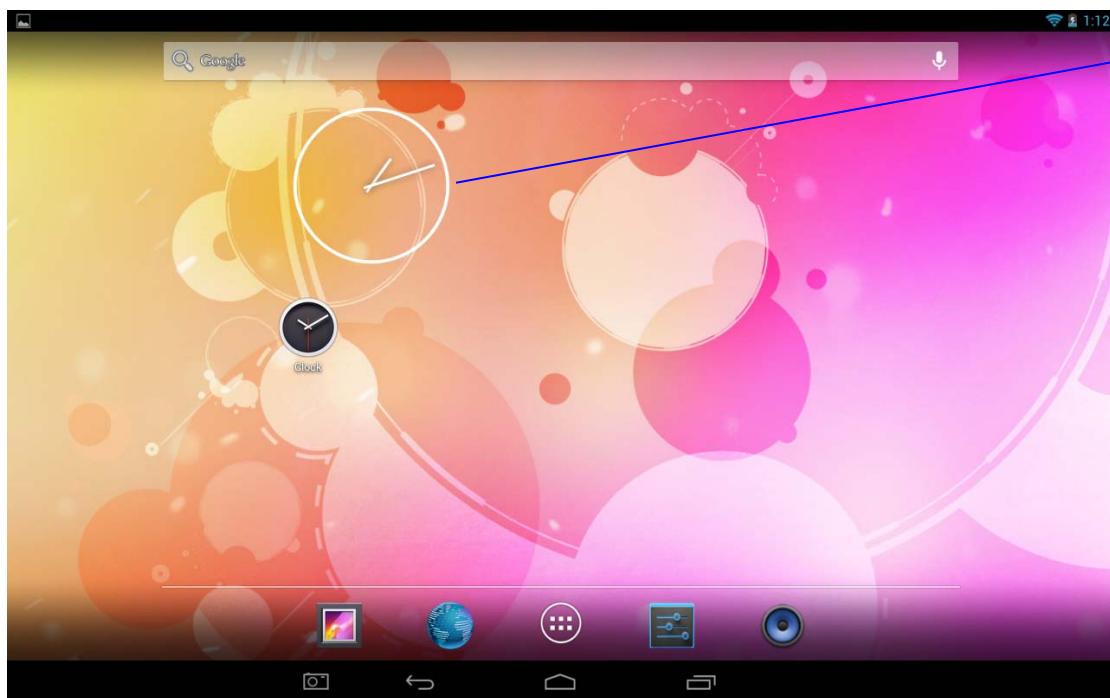

Set alarm

Picture 7.1

7.2 Calculator



1. Click
2. Enter into the basic board of calculator.
3. Soft touch the numbers or operator in calculator to calculate.

8 Troubles Shooting

1. The first startup of MID is slow

After the MID system upgraded, the first startup need to install the pre-installed application softwares, the lead time is around 2-3 minutes, the startup afterwards will be much quicker.

2. MID can't connect Wi-Fi

- Make sure the wireless router of internet service can work in normal.
- Ensure the MID and wireless router in certain distance, and no wall or other barrier between them.
- Ensure the user name and password both correct.

3. MID feels hot

When many application procedures are used in meanwhile, or the brightness of screen open to the lightest or under charging, MID may feel fever. It is normal.

4. Email can't be set or Registration of application procedure.

- Ensure your internet is well connected.
- Make sure your email setting way is correct.
- Keep your system time and local time consistent.

5. The system is abnormal and can't work.

When you install some third party application procedure, it may cause abnormal work, you can press **Reset key**(next to power port) to reset the system.

6. The webpage can't be opened

- Please keep the distance between from route to MID in effective range.
- Please restart WIFI and try again.

7. MID works terribly slow sometimes

It is normal phenomenon. Please turn off some application you don't need in advanced task management, or uninstall some third party application to release more system resource.

9 FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation