



1 Description of Parts



2 Start Here

First link: Press and hold the touch button for 3-4 seconds to turn on the earbuds At this time, the two earphones will flash red and blue. When one of the lights goes out, the earbuds will enter the pairing state. Click "A2" on the phone to link successfully.

Power on: long press for 3-4 seconds
Power off: long press for 5 seconds
Headphone reset: long press for 10 seconds to reset and restart the headphone (to prevent the headset from crashing)

3 Charging

Charging: Charging box and earphones, the red light is on

Fully charged: Charging box and earphones, the red light is off

Socket type: TYPE-C



4 Touch functions

- 1.Play/pause music: touch L/R on either side
- 2.Left ear: double-click the previous song / triple-click to reduce the volume
- 3.Right ear: double-click the next song / triple-click to increase the volume



- 4. Start SIE: four click the L/R on either side
- 5.Answer the call: touch any side
- 6.Reject call: touch either side for two seconds



Product Specification

Product Name : A2
Charging Time : 1hours
Music Time : 8-10hours
Charge times : 4 times
Operation Range : 15m
Talk Time : 8hours
Charging Input : 5V=1A

Important Notice

- If your cellphone can't find'A2',please double check that your cellphone Bluetooth is at visible mode.The earphone will automatically pair after initial repairing,but if no use for a long time ,it must be paired again.
- If there is one earphone with sound when playing music, please initialize the headset.The way as follows:
a .please touch light and right earphone 5 times quickly and continuously, the headset is initialized successfully,
b. Open the earphone to connect again.

Security Warning

- Please use the products in the suitable temperature between 0℃-45℃ .If the temperature is too high or low ,maybe it will be broken.
- Please keep the product dry, do not contact wateror
- Please don't throw ,drop or pull the products in avoid to damage .
- Please turn off the power before cleaning the products.
- Please use the suitable volume to listen the music and answer the call.If use high volume for a long time ,maybe it will cause the permanent hearing impairment.
- The product is with built-in battery please don't replace it by yourself.
- If it's necessary,please ask authorized service center for help.
- Please handle the product correctly and don't throw them as domestic garbage.
- Please keep the product out reach of children.

Warranty Card

- the warranty time is one year from the date of purchase for correct using. And the function damage is not by human.
- The repairing with the following situation isn't for free.
A. Human damage;
B. Exceed the warranty time;
C. Can't provide the receipt of purchase;
D. Don't follow the instruction to use the product;
E. Without authorization to repair or disassemble the product;
F. The damage is caused by force majeure;

warning

Warranty Card _____
User's name _____
User's telephone# _____
User's Add _____
Date of purchase _____
Invoice # _____
Dealer's name _____
Dealer's Add _____
Dealer's telephone# _____

QC Report info

Model .#	
Inspector	
Date	

FCC Statement
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
•Reorient or relocate the receiving antenna.
•Increase the separation between the equipment and receiver.
•Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
•Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.