


Bluetooth Earphone

User Manual

Model:BTW-116

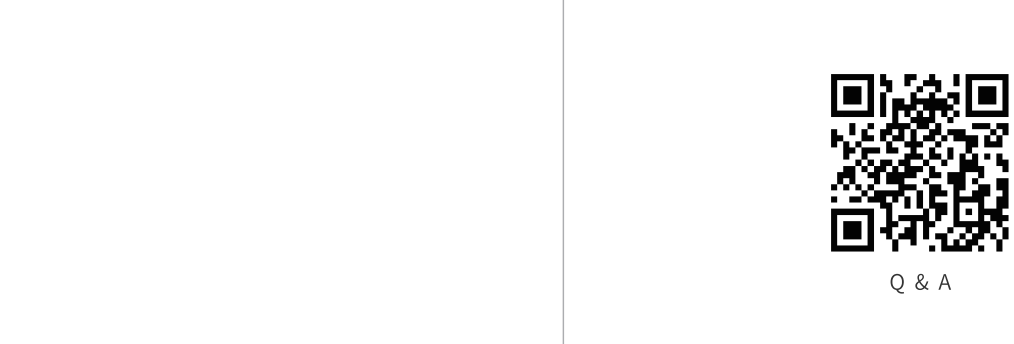

Manual Download


Q & A

English Version


01

01

02

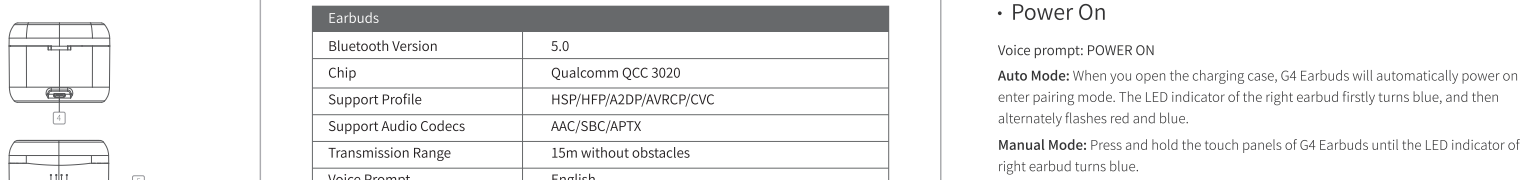

Manual Download

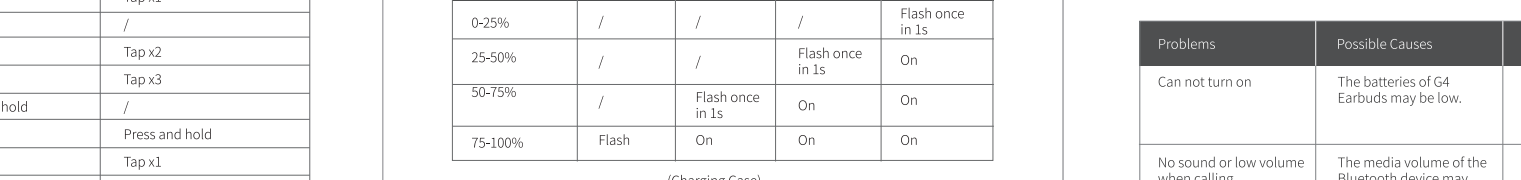

Q & A

 
Package Contents




2 x Wireless Earbuds




1 x Charging Case



3 x Pairs of Ear Caps (S/M/L)

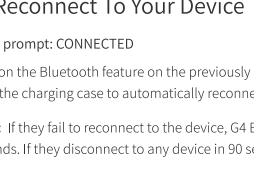


1 x USB Cable

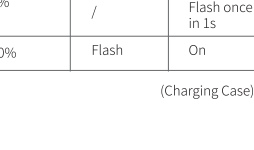

1 x User Manual

 Product Overview



1 Inductive Touch Sensor



2 Charging Pins of Earbuds



3 LED Indicator of Charging Case



2 LED Indicator of Earbuds



4 Micro USB Charging Port

Technical Specifications

Earbuds	
Bluetooth Version	5.0
Chip	Qualcomm QCC 3020
Support Profile	HSP/HFP/A2DP/AVRCP/VCV
Support Audio Codecs	AAC/SBC/ AptX
Transmission Range	15m without obstacles
Voice Prompt	English
Frequency Response Range	20Hz-20kHz
Sensitivity	97±3dB
Speaker Driver Diameter	6mm
Resistance	160±15%
Compatibility	Most smartphones, tablets and Bluetooth devices
Earbud battery	50mAh Li-polymer battery (single earbud)
Charging Time	1 hour
Music time	6 hours
Talk Time	5 hours

Charging Case	
Battery capacity	500mAh
Charging plug	Micro USB
Charging time	1 hour
Input	5V/1A
Working voltage	5V/300mA

How to Use

• Power On

Voice prompt: POWER ON

① When the earbuds batteries are low, the LED indicators will turn in red and a voice prompt will say "BATTERY LOW".

② Put them in the charging case and close the lid. The first and fourth LED indicator of charging case will be on when charging. The LED will be off when fully charged.

• Power Off

Voice prompt: POWER OFF

Auto Mode: Simply put G4 Earbuds in the charging case to automatically turn off.

Manual Mode: Press and hold the touch panels of both earbuds for 15 seconds and the LED indicators will turn red for 1 second.

How to Charge

• Earbuds

① When the earbuds batteries are low, the LED indicators will turn in red and a voice prompt will say "BATTERY LOW".

② Put them in the charging case and close the lid. The first and fourth LED indicator of charging case will be on when charging. The LED will be off when fully charged.

• Charging Case

The charging case can be charged via micro USB and its LED will indicate the battery level status.

Bluetooth Pairing Request

Cancel

Pair

Note: If they disconnect to any Bluetooth device in 90 seconds, the earbuds will automatically power off.

② Reconnect To Your Device

Voice prompt: CONNECTED

Turn on the Bluetooth feature on the previously paired Bluetooth device. Remove G4 Earbuds from the charging case to automatically reconnect to the device.

Note: If they fail to reconnect to the device, G4 Earbuds will turn to pairing mode in 1-3 seconds. If they disconnect to any device in 90 seconds, G4 Earbuds will automatically power off.

Mono Mode

Right or left earbud of G4 can be used as a mono wireless earbud.

① Remove the right or left earbud from the charging case to automatically power on and enter pairing mode.

② Turn on your Bluetooth device to search and select "G4-R" or "G4-L" to connect, and a voice prompt will say "PAIRING" and "CONNECTED".

Note: To enter mono mode, one of the earbud should stay in the charging case while the other one is removed from it.

How to Control

Music & Call	Left Earbud	Right Earbud
Play/pause	Tap x1	Tap x1
Previous	Tap x2	/
Next	/	Tap x2
Activate Siri	Tap x3	Tap x3
Volume -	Press and hold	/
Volume +	/	Press and hold
Answer/end a call	Tap x1	Tap x1
Reject a call	Tap x2	Tap x2
Power off	Press and hold for 15 seconds	Press and hold for 15 seconds
Delete the pairing record	Press and hold the touch panel for 10 seconds when G4 Earbuds are off, and the LED indicators will flash 2 seconds.	

How to Charge

• Earbuds

① When the earbuds batteries are low, the LED indicators will turn in red and a voice prompt will say "BATTERY LOW".

② Put them in the charging case and close the lid. The first and fourth LED indicator of charging case will be on when charging. The LED will be off when fully charged.

• Charging Case

The charging case can be charged via micro USB and its LED will indicate the battery level status.

Non-Charging Mode

Battery Level	1 LED	2 LED	3 LED	4 LED
0-25%	/	/	/	On
25-50%	/	/	On	On
50-75%	/	On	On	On
75-100%	On	On	On	On

(Charging Case)

Troubleshooting

Problems	Possible Causes	Solutions
Can not turn on	The batteries of G4 Earbuds may be low.	Put them back to the charging case and charge them for about 1 hour.
No sound or low volume when calling	The media volume of the Bluetooth device may switch to mute or minimum mode; or you're in a noisy environment.	Turn up the volume or change to a quiet place.

Safety Tips

The earbuds cannot be synchronized.

Cache issue

Turn off G4 Earbuds, press and hold the touch panels for 10 seconds, the LED indicators will alternately flash red and blue for 2 seconds. And then turn on G4 Earbuds again, they will pair successfully.

Safety Tips

1. Please read this manual carefully to properly use the earbuds before first use.

2. Fully charge the earbuds along with the charging case before first use.

3. Keep the earbuds away from children or pets to avoid accidental ingestion.

4. Do not use the earbuds at a high volume continuously which may cause hearing loss.

5. Do not use output larger than 5V 1A charger which may cause battery damage.

6. Keep this product within acceptable temperatures.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.