

ADVANCED MOBILE SOLUTIONS, INC

AIR MAGIC

**WIRELESS HEADSET & BASE STATION
USER'S GUIDE**

HOW TO USE THE HEADSET AND BASE STATION

STEP 1

Plug base station into cigarette lighter outlet.

STEP 2

Plug the right angle 2.5mm plug from the base station into the audio receptacle or adapter on the phone.

STEP 3

Adjust microphone tip to point to the corner of your mouth and adjust the earhook for proper stability.

STEP 4

Turn on the headset by pushing the ON button. During a call, should it be necessary to adjust the receiver volume, push the three step volume button to achieve the correct level.

BASE STATION OPERATION

- Make sure the second battery pack is in the base station charging receptacle.
- The LED on the right side of the base station will display the charging status of the battery, Red is fast charge and Green fully charged.
- If the battery power drops below sufficient power level, you will notice a slight increase in background noise. Remove battery pack from the headset and replace it with a freshly charged battery pack from the base station. Place the discharged battery pack from the headset into the base station charger.
- The newly charged battery will have a 4 hour on time
- Normal charging time for the battery is 2.5 hours.

HEADSET OPERATION

- During a call, should it be necessary to adjust the receiver volume, push the three step volume button to achieve the correct level.
- Transmit and receive range is 5 feet from the base station. If you exceed this range, the headset will generate an out of range tone every four seconds, up to eight times for a total of 32 seconds. When you return back into range the headset will still be linked to the base station. If you stay out of range for more than 32 seconds, the headset will automatically turn off to conserve battery power. At that time the yellow LED will be off, indicating a broken link.
- To establish the link, simply turn the headset back on and the yellow LED will be back on showing the link has been established.
- If for some reason you experience some interference with other electronic devices such as laptop computer TV set or radio etc. you can change the frequency setting by removing the battery pack from the headset and changing the 2 channel select switch to the other position.

CAUTION:

- Do not attempt to put on your headset or change the battery while driving.
- Only turn off the headset when you leave the car or when you do not wish to use your cellular phone.

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment