 




Contents	
1 CAUTIONS ON MOBILE PHONE USE	4
1.1 INTERFERENCE	4
1.2 REASONABLE USE	4
1.3 QUALIFIED MAINTENANCE SERVICE	4
1.4 WATER-RESISTANCE	4
1.5 EMERGENCY CALLS	4
2 PRECAUTIONS FOR USE OF BATTERY	4
2.1 CAUTIONS FOR CHILDREN	4
3 KEYS AND PARTS	5
3.1 START TO USE	5
3.2 HOW TO INSERT SIM CARD(S)	6
3.3 CHARGE THE BATTERY	8
4 BASIC FUNCTIONS	9
4.1 LOCK AND UNLOCK THE SCREEN	9
4.2 MAKE IT YOURS	10
5 SWITCH TO RECENTLY USED APPLICATION	16
6 MAKE A CALL	17

I. Keys and parts

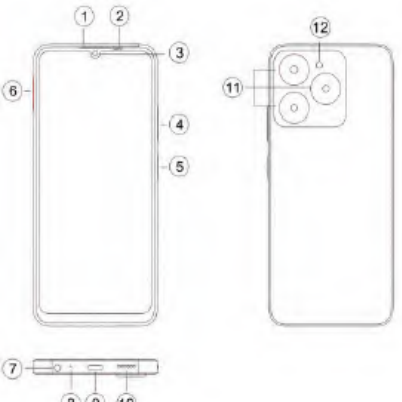

 
4 Basic functions

4.1 Lock and unlock the screen

Press the power button to enter Sleep mode and meanwhile the screen will be locked; press power button again to wake up and then swipe up for unlock.



Swipe up and enter the application list.

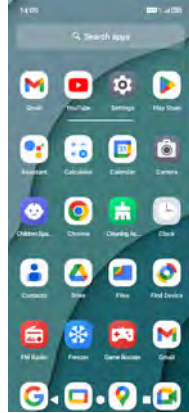

6 Make a call

 
Click and enter a complete phone number to make a call. Your phone supports smart search.



Swipe to right to view Call history and Contacts.

10 Send and Receive message(s)


Tap to enter messaging, tap "Start chat".

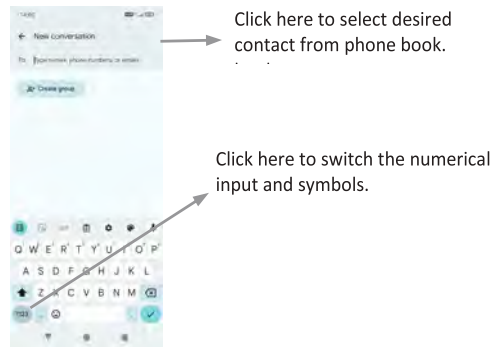

When typing a new text message, you can select the text to cut or copy it. Selected texts are highlighted in blue.


14 Manage Applications

 Enter Settings > Apps. You can see app info.

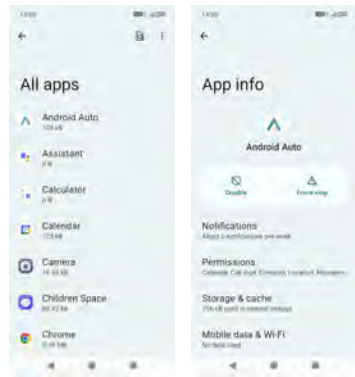

16.4 Face ID

 Click Settings—Security & privacy—Device unlock—Face ID, follow the prompts. After completing the face recognition, you can use the face unlock function.

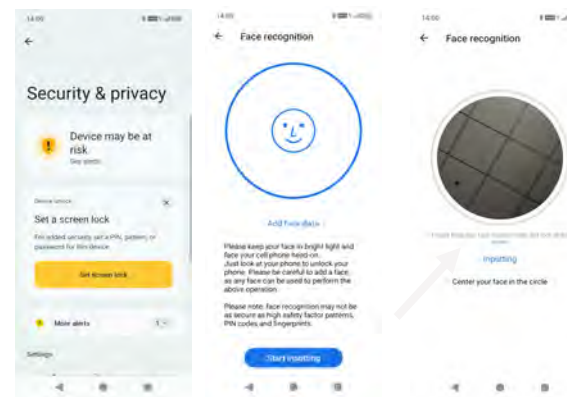

Contents	
1 CAUTIONS ON MOBILE PHONE USE	4
1.1 INTERFERENCE	4
1.2 REASONABLE USE	4
1.3 QUALIFIED MAINTENANCE SERVICE	4
1.4 WATER-RESISTANCE	4
1.5 EMERGENCY CALLS	4
2 PRECAUTIONS FOR USE OF BATTERY	4
2.1 CAUTIONS FOR CHILDREN	4
3 KEYS AND PARTS	5
3.1 START TO USE	5
3.2 HOW TO INSERT SIM CARD(S)	6
3.3 CHARGE THE BATTERY	8
4 BASIC FUNCTIONS	9
4.1 LOCK AND UNLOCK THE SCREEN	9
4.2 MAKE IT YOURS	10
5 SWITCH TO RECENTLY USED APPLICATION	16
6 MAKE A CALL	17

- 1. Receiver
- 2. Light sensor / Proximity sensor
- 3. Front Camera
- 4. Volume Key
- 5. Power Key/Fingerprint
- 6. SIM Card Tray
- 7. Earphone Jack
- 8. MIC
- 9. Type C connector
- 10. Speaker
- 11. Rear Camera
- 12. Flashlight

 
II. Start to use

III To insert SIM card(S):

Insert the SIM card correctly in the card slot(s) (See figure below). Suggestion: switch off the phone before inserting the SIM card. Insert the Micro SD card into the slot with the correct direction (See figure below). Suggestion: switch off the phone before inserting the Micro SD card. Note: Use only compatible memory cards with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.



4.2.3 Notification Bar: At the top of the screen, the Status Bar displays the time, status, and notifications. If there is a new message, missed call, or other in the notification bar, you can drag it down to open the notification panel and click the desired one to have a view. When you finish, close it by dragging the panel up or pressing "Back".

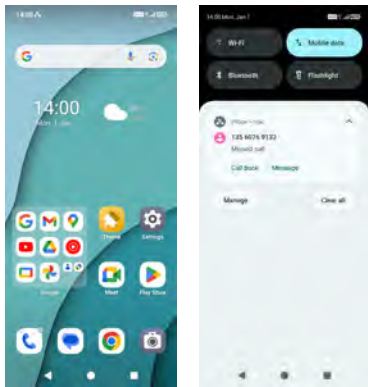

7 Call log



Press the number if you want to see the History details, send message or call back, there are three options for you.

Tap to add attachments such as pictures, videos, audios, etc, to send MMS.



 
When receiving a new message, you can read it by swiping the notification panel and clicking the message or entering the message to read it directly. Long press on any message threads to delete it.

15 Applications & Utilities

For entertainment purposes, your device has access to several games, applications and utilities, such as Gmail, Email, Play Store, etc. Before accessing the applications, please activate the data or Wi-Fi connection.


16 Settings

Open the Wi-Fi setting, find a nearby Wi-Fi network and connect, then you can use Internet or download apps.

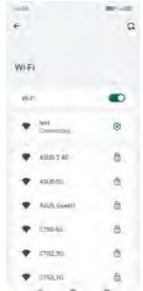


16.5 Fingerprint

 Click Settings—Security & privacy—Device unlock—Fingerprint, follow the prompts. After completing the fingerprint recording, you can use the fingerprint unlock function.

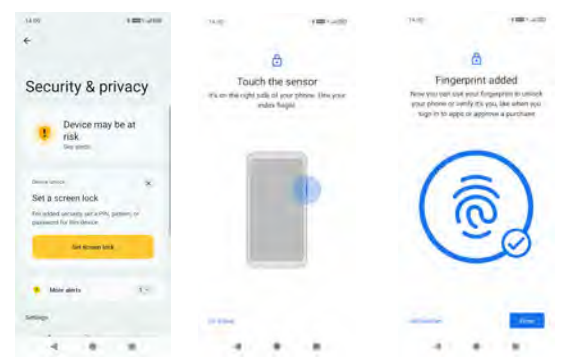

Google, Android, Google Play, Google Duo and Android are trademarks of Google LLC.


7 CALL LOG	17
8 ANSWERING PHONE CALLS AND REJECTION	19
9 ADD A CONTACT	20
10 SEND AND RECEIVE MESSAGE(S)	21
11 BROWSE THE WEB	23
12 ENJOY MUSIC	23
13 DOWNLOAD APPLICATIONS FROM GOOGLE PLAY STORE	24
14 MANAGE APPLICATIONS	25
15 APPLICATIONS & UTILITIES	26
16 SETTINGS	26
17 FCC	31
18 SAR	31

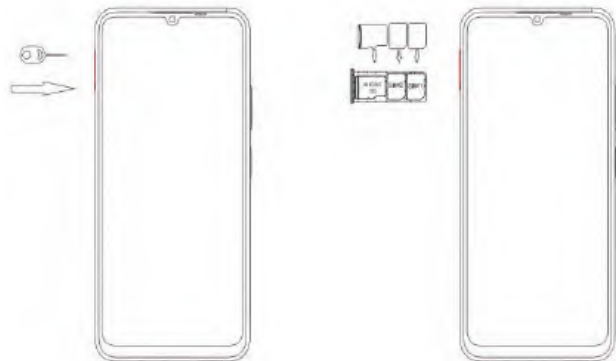 

4.2.2 Long press the Home screen, and then you can Modify Wallpaper; to relocate an application icon, long press it till the screen vibrates, then change the icon position and loosen your hold finger.



 4.2.4 Android™ and computer connection
If you connect your phone to a PC via USB, you can find the USB options, choose "This Device" - file Transfer option, you will browse your phone memory in the PC, this is the same function as USB storage.

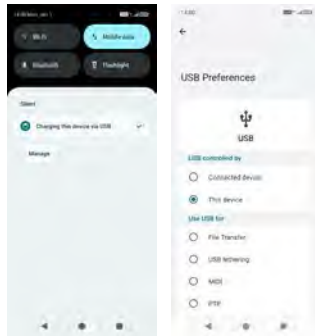

8 Answering phone calls and rejection

When there is an incoming call, you can drag the icon up or down to answer or hang up directly.



11 Browse the Web

11.1 Set up Internet/Data connection
Enter Settings > Network & internet > SIM, tap your Mobile Operator name > Access Point Names, then choose the desired Internet account.

11.2 Switch on Data or Wi-Fi connection
To browse the Web, you need to switch on Data connection. If there is Wi-Fi around, you can switch on Wi-Fi and use it to browse the web.

 


12 Enjoy music

When you transfer music to your Micro SD card, the Music Player will search for music files on the card and create a catalog of your music.

16.2 Bluetooth

Settings>Connected devices> Pair new device
Pair to another Bluetooth device, then you can share music, photos, movies, etc.

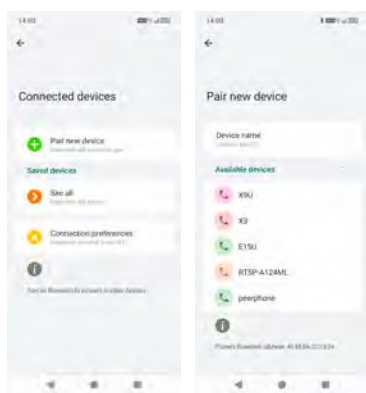

Federal Communication Commission Interference Statement

FCC ID: 2ADR3UB202
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Radiation Exposure Statement:
This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions (15mm) accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

To maintain compliance with radio frequency exposure guidelines and limits, keep the smartphone at least 15mm away from your body. When you carry the smartphone on your body, use only accessories equipped with an integrated belt clip that are supplied or approved by the manufacturer. If you use a body-worn accessory not supplied by the manufacturer, verify that the accessory does not contain metal and keep the smartphone at least 15 mm from your body.

1 Cautions on mobile phone use

1.1 Interference

All phones may be interfered, which affect phone calls.

1.2 Reasonable use

Use only in the normal position. Do not touch the antenna area unnecessarily.

1.3 Qualified maintenance service

Only qualified personnel may install or repair this product.

1.4 Water-resistance

Your device is non water-resistant. Keep it dry.

1.5 Emergency calls

Ensure the phone is switched on and in service. Enter the emergency number and press the Dialer icon.

2 Precautions for use of battery

2.1 Do not dispose of batteries near or in a fire to avoid dangers.

2.2 Do not dispose of batteries in the garbage. Dispose of batteries to assigned battery recycling center.

3 Cautions for children

Keep your device out the reach of children in case of accidental injury caused by incorrect use of the device as toys.

III Charge the battery

 
During charging, the battery indicator on the phone is a thunder icon. If the device is switched off during charging, there will still be a charging indication on the screen that shows the phone is being charged. If the device is overused when the battery is low, the charging icon might take some time to appear.

When the battery indicator on the screen displays "Battery is full", the thunder icon will disappear, which means the completion of charging. If the phone is switched off during charging, the screen will display "Battery is full". While charging, the battery, the device and the charger will get hot. This is normal.

Unplug the charger from the AC electrical outlet and disconnect the wiring between the phone and the charger after charging.

Caution: Charge the phone in a well-ventilated place in which the temperature is between -10°C to +55°C. Use the charger provided by the manufacturer only. The use of an unconfirmed charger may lead to danger and violate the manufacturer's warranty clause.

If the temperature is too high or too low during charging, the device will automatically send a warning and stop charging to avoid damage to the battery.

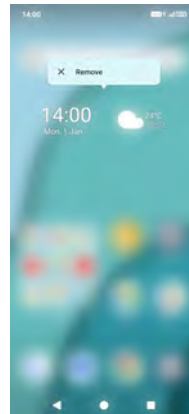

Long press the widget or icon, after the phone vibrates, select Remove or Uninstall (select Remove for widget, select Uninstall for APP).

5 Switch to Recently Used Application

Press the Menu key.



 
By selecting the 'Menu key' you can view your application history and select one of your previously used Apps.

To clear your recently used applications history, press the 'Clear all' button.

9 Add a contact

Tap to view contacts

Tap to create a new contact

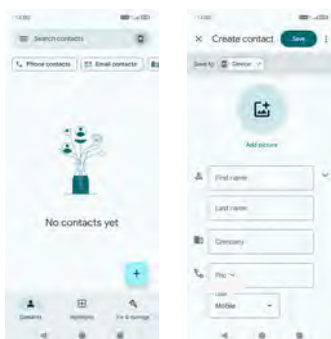


Tap Save option to store the new contact when you finish creating it.

13 Download applications from Google Play Store

13.1 Sign in to your Google™ Account.

 
13.2 Enter Google Play Store to download apps.

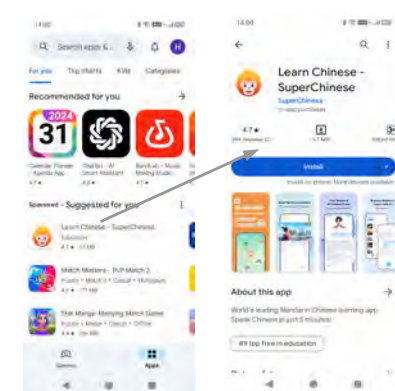

16.3 Security

Click Settings—Security & privacy—Device unlock—Screen lock.

 There are four screen lock ways for you to choose: Swipe, Pattern, PIN, and Password.

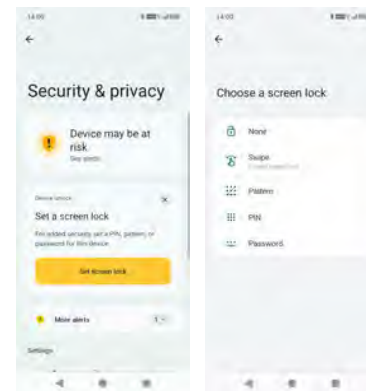




I. Teclas y partes

4.1 Bloquear y desbloquear la pantalla

 Presione el botón de encendido para entrar en modo de suspensión y, simultáneamente la pantalla se bloqueará; presione el botón de nuevo para encenderlo, luego deslice hacia arriba para desbloquear.

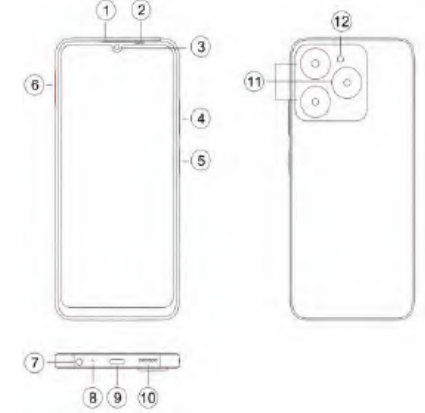


36



40

 4 Funciones básicas

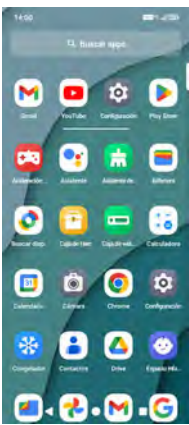

44

6 Hacer una llamada

Haga clic  e ingrese un número de teléfono completo para hacer una llamada. Su teléfono admite búsqueda inteligente



Deslice hacia la derecha para ver Historial de llamadas y Contactos.

48

10 Enviar y recibir mensajes

Presione  para ingresar a mensajería, toque "Iniciar chat".



Seleccione este espacio para elegir el contacto deseado de la guía telefónica

 
Toque para cambiar la entrada numérica y los símbolos.

Cuando redacte un nuevo mensaje, puede seleccionar el texto para cortarlo o pegarlo. El texto seleccionado se resalta en azul.

52

14 Gestionar aplicaciones


Ingresa a Configuración > Apps. Puede ahora visualizar información sobre las aplicaciones.

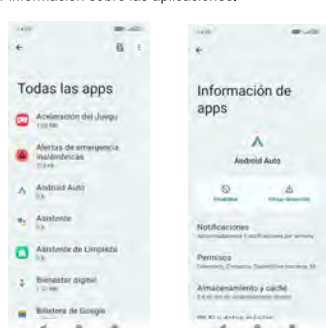

56

16.4 Reconocimiento facial

 Haga clic en configuración –Seguridad y privacidad – Desbloqueo del dispositivo – Reconocimiento facial, siga las indicaciones, después de completar la grabación de rostro puede usar la función de desbloqueo facial.

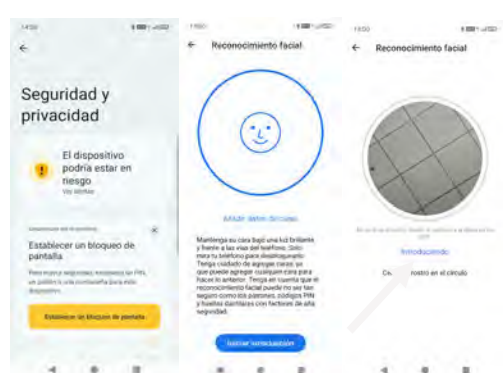

60

Contenido	
1 PRECAUCIONES EN EL USO DEL TELÉFONO	35
1.1 INTERFERENCIA	35
1.2 USO RAZONABLE	35
1.3 SERVICIO DE MANTENIMIENTO CALIFICADO	35
1.4 RESISTENCIA AL AGUA	35
1.5 LLAMADAS DE EMERGENCIA	35
2 PRECAUCIONES PARA EL USO DE LA BATERÍA	35
3 PRECAUCIONES PARA NIÑOS	35
I. TECLAS Y PARTES	36
II. EMPEZAR A USAR	37
III. PARA INSERTAR TARJETA(S) SIM:	37
III.1 CARGAR LA BATERÍA	39
IV. FUNCIONES BÁSICAS	40
4.1 BLOQUEAR Y DESBLOQUEAR LA PANTALLA	40
4.2 HÁGALO SUYO	41
5 CAMBIAR A APLICACIONES USADAS RECIENTEMENTE	47
6 HACER UNA LLAMADA	48

 
33

- 1. Receptor
- 2. Sensor de luz / Sensor de proximidad
- 3. Cámara frontal
- 4. Tecla de volumen
- 5. Botón de encendido / Huella dactilar
- 6. Bandeja para tarjeta SIM
- 7. Conector de auriculares
- 8. Altavoz
- 9. Conector Tipo C
- 10. Altavoz
- 11. Cámara trasera
- 12. Flash


II. Empezar a usar

III. Para insertar tarjeta(S) SIM:

Inserte la tarjeta SIM correctamente en la ranura para tarjetas (Ver la figura debajo), se sugiere apagar el teléfono antes de insertar la tarjeta SIM. Inserte la tarjeta Micro SD en la ranura en la dirección correcta (Ver la figura debajo), se sugiere apagar el teléfono antes de insertar la tarjeta Micro SD. Nota: Use solo tarjetas de memoria compatibles con este dispositivo. Las tarjetas de memoria incompatibles pueden dañar la tarjeta o el dispositivo y corromper los datos almacenados en la tarjeta.

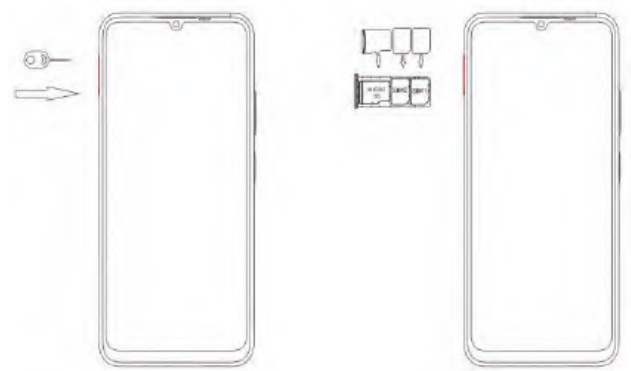

37

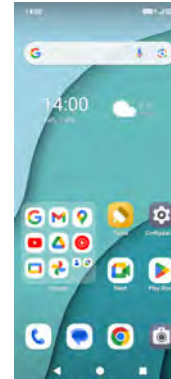 

41

4.2.3 Barra de Notificaciones: En la parte superior de la pantalla, la Barra de Estatus muestra la hora, estatus, y notificaciones. Si hay un nuevo mensaje, una llamada perdida u otra notificación, puede arrastrarlo hacia abajo para abrir el panel de notificaciones y hacer clic en la notificación que desee visualizar. Cuando termine, puede cerrarlo arrastrando el panel hacia arriba o presionando "Atrás".



45

 
7 Registro de llamadas



Presione el número si desea, Agregar contacto, Mandar un mensaje, Historial, regresar llamada.

49

Presione  para añadir Adjuntos tales como: imágenes, videos, audios, etc. al enviar MMS

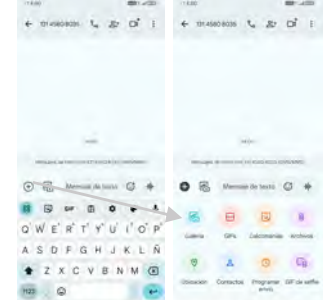

Cuando entra un nuevo mensaje, puede leerlo arrastrando el panel de notificaciones y haciendo clic en el mensaje, o ingresando al mensaje para leerlo directamente. Mantenga presionado uno de todos los hilos de mensajes, puede eliminarlo

53

 
15 Aplicaciones y Utilidades

Para su entretenimiento, el dispositivo cuenta con acceso a juegos, aplicaciones y utilidades, tales como Gmail, Correo Electrónico, Play Store, etc. Antes de acceder a las aplicaciones, por favor active la conexión de datos o conéctese a Wifi.

16 Configuraciones

16.1 Wifi

Abra Wifi, busque una Red Wifi cercana y conéctese, para poder usar Internet o descargar aplicaciones.

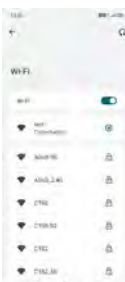

57

16.5 Huella dactilar

Haga clic en configuración –Seguridad y privacidad – Desbloqueo del dispositivo – huella dactilar, siga las indicaciones y después de completar la grabación de huellas dactilares, podrá utilizar la función de desbloqueo con huellas dactilares.




Google, Android, Google Play, Google Duo y Android son marcas comerciales de Google LLC.

61

7 REGISTRO DE LLAMADAS	49
8 RESPONDER Y RECHAZAR LLAMADAS	50
9 CREAR UN CONTACTO	51
10 ENVIAR Y RECIBIR MENSAJES	51
11 NAVEGAR POR LA WEB	54
12 DISFRUTE DE MÚSICA	54
13 DESCARGAR APLICACIONES DESDE PLAY STORE	55
14 GESTIONAR APLICACIONES	56
15 APLICACIONES Y UTILIDADES	57
16 CONFIGURACIONES	57
17 FCC	62
18 SAR	62

 34

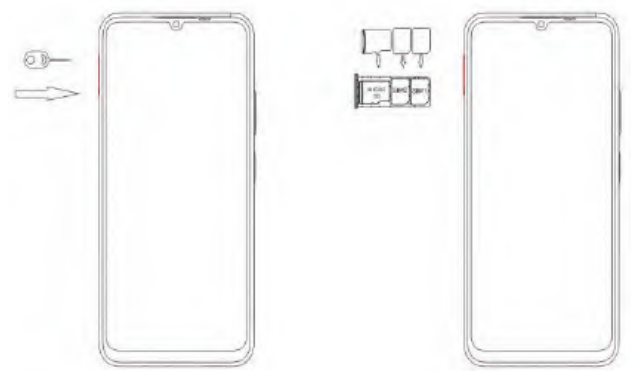


38

4.2.2 Mantenga presionada la pantalla de inicio para poder modificar el Fondo de Pantalla. Para reubicar el icono de una aplicación presione de manera prolongada el icono hasta que la pantalla vibre, mueva la posición del mismo y luego deje de presionar.



42

 4.2.4 Conexión Android™ y computadora Si conecta su teléfono a la PC a través de una USB, podrá encontrar las opciones para USB, seleccione "Este dispositivo" opción de "Transferencia de archivos", podrá ver la memoria de su teléfono en la PC, esta es la misma función que el almacenamiento USB.

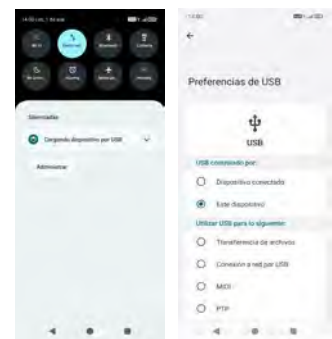

46

8 Responder y rechazar llamadas

Cuando haya una llamada entrante, puede arrastrar el icono hacia arriba o hacia abajo para contestar o colgar directamente.



50

11 Navegar por la Web

11.1 Configure la conexión a internet / Datos Móviles Ingrese a Configuración > Internet y Redes > SIM, elija el nombre de la Operador Móvil > "Nombres de punto de acceso", y seleccione la cuenta de Internet deseada.

11.2 Active la conexión de Datos o Wifi Para navegar por la web, debe activar la conexión de datos. Si hay Wifi disponible, puede activarlo para usarlo y navegar por la web.

12 Disfrute de música

 
Cuando transfiera música a su tarjeta MicroSD, el reproductor de música explorará archivos de música en la tarjeta y creará un catálogo de su música.



54

16.2 Bluetooth


Configuración > Dispositivos conectados > Vincular dispositivo nuevo. Vincúlase a dispositivo Bluetooth, para compartir música, fotos, películas, etc.

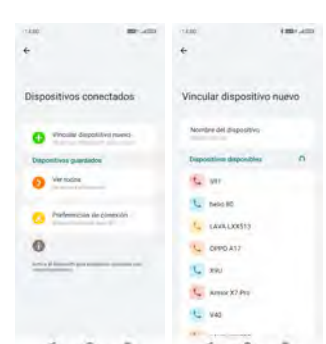

58

16.3 Seguridad

 Haga clic en configuración –Seguridad y privacidad – Bloqueo del dispositivo –Bloqueo de pantalla. Hay cuatro formas de bloqueo para elegir: Deslizar, Patrón, PIN y Contraseña.

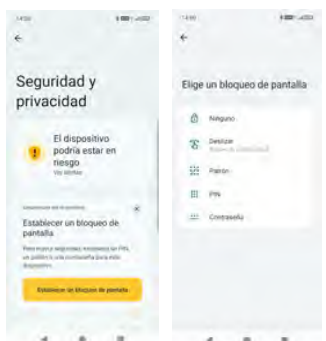

59


1 Precauciones en el uso del teléfono	
1.1 Interferencia	
Todos los teléfonos pueden llegar a ser interferidos, lo que afecta las llamadas telefónicas.	
1.2 Uso razonable	
Utilice solo en la posición normal. No toque innecesariamente el área de la antena.	
1.3 Servicio de mantenimiento calificado	
Solo personal calificado puede instalar o reparar este producto.	
1.4 Resistencia al agua	
Su dispositivo no es resistente al agua. Manténgalo seco.	
1.5 Llamadas de emergencia	
Asegúrese de que el teléfono esté encendido y en servicio. Ingrese el número de emergencia y presione el icono de llamada	
2 Precauciones para el uso de la batería	
2.1 No desche las baterías cerca de o el fuego, para evitar peligros.	
2.2 No desche las baterías en la basura. Deseche las baterías en un centro de reciclaje de baterías asignado.	
3 Precauciones para niños	
Mantenga su dispositivo fuera del alcance de los niños para evitar lesiones accidentales causadas por el uso incorrecto del dispositivo como juguete.	

35

III.2 Cargar la batería Mientras se carga, el indicador de la batería en el teléfono es un icono de rayo. Si el dispositivo está apagado durante la carga, aún habrá una indicación en la pantalla que muestra que el teléfono está siendo cargado. Si el dispositivo se usa en exceso cuando la batería está baja, el icono de carga podría tardar en aparecer. Cuando el indicador de batería en la pantalla muestra "Batería llena", el icono de rayo desaparecerá, lo que significa que la carga se ha completado. Si el teléfono está apagado durante la carga, la pantalla mostrará "Batería llena". Durante la carga, la batería, el dispositivo y el cargador se calentarán. Esto es normal. Desconecte el cargador del enchufe eléctrico de CA y retire el cable entre el teléfono y el cargador después de la carga. Precauciones: Cargue el teléfono en un lugar bien ventilado, donde la temperatura esté entre -10°C y +55°C. Utilice solo el cargador proporcionado por el fabricante. El uso de un cargador no confirmado puede provocar peligros y violar la cláusula de garantía del fabricante.

Si la temperatura es demasiado alta o baja mientras se está cargando, el dispositivo automáticamente enviará una advertencia y detendrá la carga para evitar daños a la batería.

 Mantenga presionado el widget o icono, después de que el dispositivo vibre, seleccione Quitar o Desinstalar (seleccione Quitar para los widgets, seleccione Desinstalar para las aplicaciones)

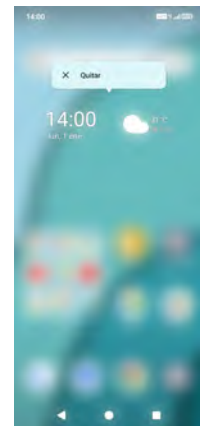

43

5 Cambiar a aplicaciones usadas recientemente

Presione la tecla Menu



 
Toque y deslice esta área para abrir y visualizar el historial de aplicaciones abiertas.

Toque este icono para cerrar todas las aplicaciones del historial

47

9 Agregar un contacto

Presione  para ingresar en un contacto Presione  para añadir un nuevo contacto

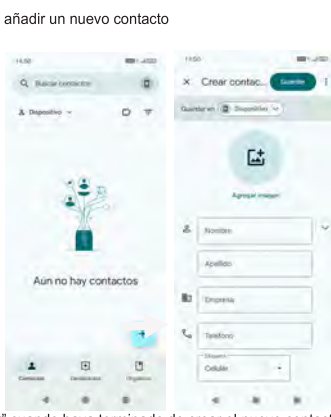


Haga clic en "Guardar" cuando haya terminado de crear el nuevo contacto.

51

13 Descargar aplicaciones desde Google Play Store

13.1 Ingrese a su cuenta de Google™

 13.2 Ingrese a Google Play Store para descargar aplicaciones.

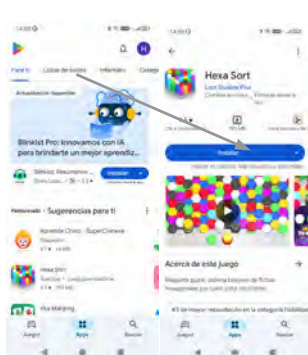

55

