

DS-KV9503-WBE1

Video Intercom Villa Door Station

UDB

Diagram References

1 Appearance

- ① Microphone ② Camera ③ Indicator ④ Button ⑤ Card Reading Area
⑥ Loudspeaker ⑦ Terminals ⑧ Debugging Port ⑨ TAMPER
⑩ Set Screw ⑪ TF Card Slot ⑫ Network Interface

Note: The debugging port is used for debugging only.

Indicator Description

Unlock: Green Call: Orange Communicate: White

2 Terminal and Wiring

NC: Door Lock Relay Output (NC) AUO: Audio Input
NO: Door Lock Relay Output (NO) 485-: RS-485 Interface
COM: Common Interface 485+: RS-485 Interface
AIN1&AIN2: For the access of Door Contact 12 VDC IN: Power Supply Input
AIN3&AIN4: For the access of Exit Button GND: Grounding

3 Installation Accessory

- ① Mounting Template ② Mounting Plate

Note: The dimension of the mounting plate is 102.58 mm × 39.24 mm × 6.2 mm.

4 Installation

Note: Video intercom villa door station supports surface mounting.

Before You Start

- Make sure all related equipments are power-off during the installation.
- Tools that you need to prepare for installation: Drill (ø2.846) and gradienter.
- Purchase the protective shield before installation.

★ Surface Mounting without Protective Shield

- Stick the mounting template on the wall. Drill screw holes according to the mounting template. Remove the template from the wall.
- Secure the mounting plate on the wall with 4 supplied screws according to the screw holes.
- Install the villa door station to the mounting plate. Fix the device on the mounting plate with the set screw.

★ Surface Mounting with Protective Shield

- Stick the mounting template on the wall. Drill the screw holes according to the mounting template. Remove the template from the wall.
- Align the protective shield with the mounting template.
- Secure the mounting plate and protective shield on the wall with 4 supplied screws according to the screw holes.
- Install the villa door station to the mounting plate. Fix the device on the mounting plate with the set screw.

5 Configuration via Web

① Activate Device via Web

You are required to activate the device first by settings a strong password before you can use the device.

Default parameters of door station are as follows:

- Default IP Address: 192.0.0.65.
- Default Port No.:8000.
- Default User Name: admin

- Power on the device, and connect the device to the network.
- Enter the IP address into the address bar of the web browser, and click Enter to enter the activation page.

Note: The computer and the device should belongs to the same subnet.

- Create and enter a password into the password field.
- Confirm the password.
- Click OK to activate the device.

Note: When the device is not activated, the basic operation and remote configuration of device cannot be performed.

② Access to the Device by Web Browsers

- In the browser address bar, enter the IP address of the device, and press the Enter key to enter the login page.
- Enter the user name and password and click Login.

③ Communicate with Indoor Station

- Click Settings -> Intercom -> Press Button to Call to enter the settings page.
- Set the parameters.
 - Edit call No. for every button.
 - Check Call Management Center to set the button calling center.

Note: If you check Call Management Center and set the call No. as well, call management center has higher privilege than call No.

- Press button to call indoor station.

④ Issue Card

- Click Settings -> Access Control and Elevator Control to enter the settings page.
- Click Issue Card. Present the card on the card reading area.
- When issuing finished, the windows pop up on the settings page.

Note:

- Only Mifare card supported, and Mifare card with non-standard shape is recommended.
- Up to 10000 cards can be issued and managed by V series door station. A voice prompt (No more cards can be issued.) can be heard when the issued card amount exceeds the upper limit.

⑤ Unlock Door

After issuing cards, you can unlock the door by presenting the issued cards.


Refers to Video Intercom Villa Door Station User Manual (scan the QR code) for details.

1


3

4

★ Surface Mounting without Protective Shield

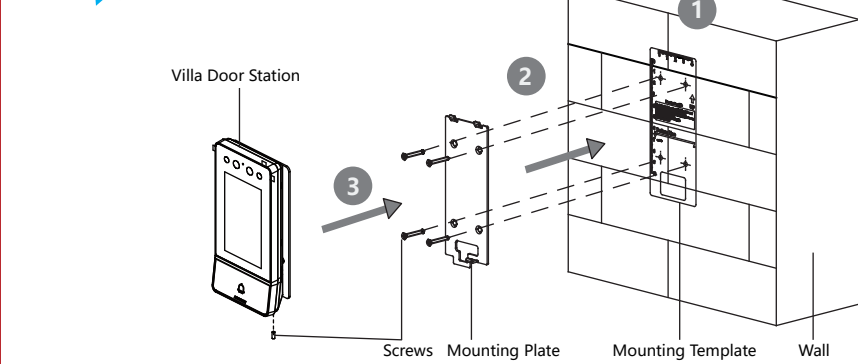


★ Surface Mounting with Protective Shield

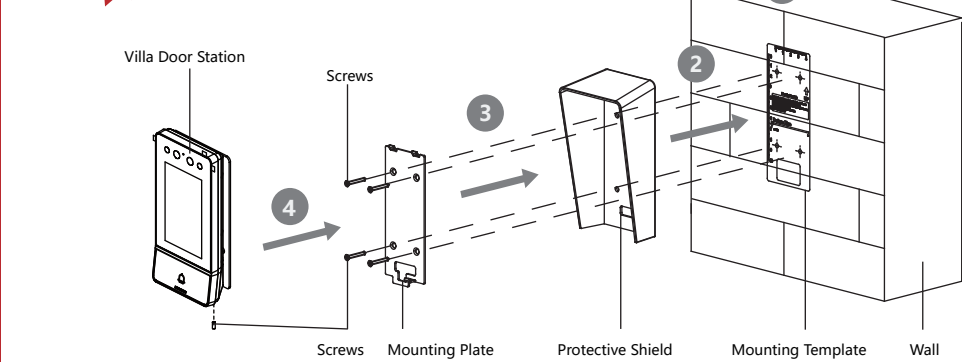

2

4

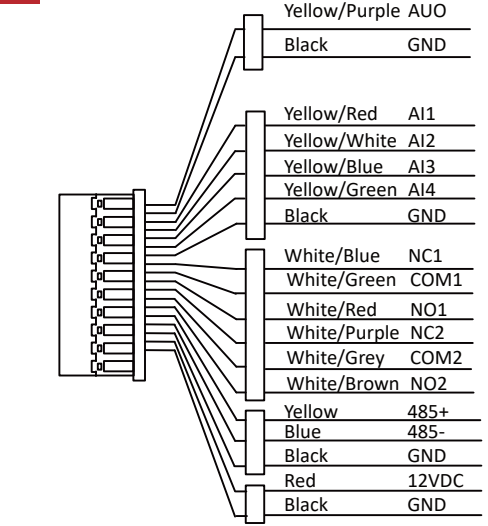

Recommended Installation Height (The distance between the camera and the ground): 1.4 m to 1.6 m

