

Safety Instructions



Caution: Electric Shock Hazard

When using this electronic appliance, basic precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons, including the following:

Important safety information

1. READ these instructions.
2. DO NOT use this apparatus near water.
3. CLEAN ONLY with dry cloth.
4. DO NOT use near any heat sources such as radiators, heat registers, stove, or other apparatus (including amplifiers) that produce heat.
5. PROTECT the USB cord from being walked on or pinched, particularly at the plugs and the point where it exits from the speaker.
6. UNPLUG this apparatus during lightning storms or when unused from long periods of time.

Regulatory Compliance

FCC Class B Information


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

CE Compliance for Europe

This equipment has been tested and found to comply with the limits for European Council Directive on the approximation of the law of the member states relating to electromagnetic compatibility (89/336/EEC) according to EN55022 Class B.

Package Contents

AWD-58X Water Dancing Soundbar

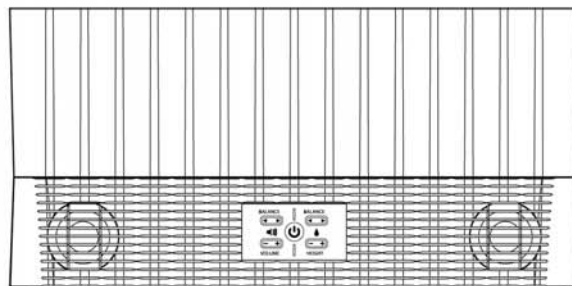

3.5mm audio cable



USB Power Cable



Fountain sound bar

Model:AWD-58X

Setup

CONNECT TO 58X

BLUETOOTH®
(wireless audio)



OR



3.5mm STEREO
(wired audio)

POWER UP 58X



USB

Buttons



LEFT/RIGHT CHANNEL VOLUME BALANCE

- ◀ Increasing Left channel volume while descending right channel
- ▶ Increasing Right channel volume while descending left channel




MAIN VOLUME

- Decrease volume
- + Increase volume



POWER ON/OFF; RESET

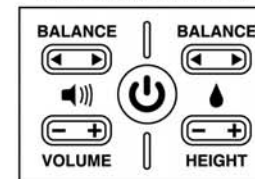

LEFT/RIGHT CHANNEL FOUNTAIN BALANCE

- ◀ Increasing Left channel fountain height while descending right channel
- ▶ Increasing Right channel fountain height while descending left channel



MAIN FOUNTAIN HEIGHT

- Decrease fountain height
- + Increase fountain height

Setting up your Water Dancing Soundbar

POWER ON/OFF

To turn on the Soundbar:

1. Connect the Soundbar and the computer with the USB power cable.
2. Press and release the power button. The 16 LEDs will light up and an audio cue will indicate the system is on. To turn the Soundbar off, press and release the power button. The LEDs will go off indicating power is off.

BLUETOOTH

Pairing: Turn on the Soundbar and an audio cue will indicate it is in "bluetooth mode". Search "58X" on the bluetooth setting of the device.

Connected: Once the Soundbar is successfully paired and connected, you'll hear the audio tones.

Reconnect: After initially pairing and connecting your phone and speaker, you don't need to do it again.

AUX INPUT

To play audio using the audio cable, plug the cable from the audio device to the "AUX" jack on the back of the Soundbar. You'll hear the audio tones that indicate it is in "AUX mode".

Remark: Unplug the audio cable when switching to Bluetooth Mode.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.