

Buttons

The operation of buttons are indicated by using the letters shown in the illustration.

A -- Set
B -- Mode
C -- EL backlight /
D -- Execution / +

Sync Movement
Call Notice
Message Notice
E-Mail Notice
Event Notice
Sync Time
Find
Camera
SOS
SOS
Safety Range Notice
EL Backlight
Vibration
Low voltage indicator
100 Years Calendar
50M Water Resistant
Battery (CR2032)

Factory Mode

LCD default is off before the watch out of factory.

In the LCD off state, press and hold "D" for 2s "Hold" (flashing) to return the timekeeping mode.

You may need to conduct hands calibration for the watch (See Page17-18) before use it.

LCD off
Press and hold "D" for 2s
Timekeeping mode
After 0.5s
Full display
After 2s
"Hold" flashing

App Install

APP Install For Android System

1. Use mobile phone log in <https://play.google.com/store> (searching on google play, find "Youngswatch" APP to follow the instructions to install on your mobile phone). If you mobile phone already installed "Y1 assistant" you can directly search "Youngswatch", then you can install the APP prompt.

2. To install the "Youngswatch" APP in the following steps:

Click Youngs watch app

Click next

Click install

After a few seconds

Click done

Click confirm

Installing...

3. Click finish back to phone desktop, after finished the APP installation.

APP Install For iOS System

Searching on APP store and find "Youngswatch" APP then follow instructions to install to your phone.

Click install

Click start

Guide page1

Guide page2

Guide page3

Next page

System Requirement For Mobile Phone

Bluetooth version: BLE4.0.

Android system: Samsung mobile phone android version 4.3 above (such as: Note2, Note3, Galaxy S4, Galaxy S5 and others), other brand mobile phone reference to use.

iPhone system: iOS6.0 or above of iPhone 4s/5/5c/5s...

4

App Pairing

Please conduct pairing when the watch connect with mobile phone first time.

1. Firstly turn on the phone's bluetooth function;

2. Enter into APP search screen follow the steps as below:

Click the icon Youngs watch on phone desktop

Click here

Click Youngs watch

Click ok after input the pairing code

Click here

Click connect watch function (display link cartoon)

Scanning...

BLE off state

"Hold" flashing

Link cartoon

Next page

6

When the watch in connection state, all icon buttons are color display in the APP main menu.

In the timekeeping mode, press and hold "D" short cut to activate on/off the bluetooth function.

Before using APP, please ensure the mobile phone and watch are already connected normally.

7

Notice

When there is a missed call, the watch icon "CALL" flashing, press any button to stop it.

When there is an incoming call, the watch will alarm and/or vibrate to remind user, at the same time the watch icon "CALL" flashing, press any button to refuse to answer.

Refuse to answer call only available for android system, iOS do not support this feature.

In the APP main menu state, click the "CALL" button, on/off the call notice (In gray means the function is off).

8

Message Notice

When having new message on phone, the watch will alarm and/or vibrate to remind user, at the same time the watch icon "MESSAGE" flashing, press any button to stop it.

In the APP main menu state, click the "MESSAGE" button, on/off the event notice (In gray means the function is off).

9

E-mail Notice

When having new E-mail on phone, the watch will alarm and/or vibrate to remind user, at the same time the watch icon "EMAIL" flashing, press any button to stop it.

The requirement of E-mail address: Gmail, yahoo e-mail for android system, iCloud e-mail for iOS system.

In the APP main menu state, click the "EMAIL" button, on/off the E-mail notice (In gray means the function is off).

10

Sync Time

In the APP main menu state, click the "SYNC" button to enter bluetooth time calibration menu;

In the bluetooth time calibration menu state, click sync time, the watch time will synchronize with mobile phone;

The watch will automatically back to timekeeping mode after bluetooth time calibration is finished.

11

SOS

In the timekeeping mode, press and hold "B" short cut to activate the SOS function, the mobile phone will automatically call SOS number.

In the SOS mode, press and hold "D" to activate the SOS function.

SOS only available for android system, iOS system do not support this feature.

12

Find

The Mobile Phone Find Watch

In the APP main menu state, click the "FIND" button to perform the mobile phone find watch function, the watch will alarm and/or vibrate to remind user.

The watch find mobile phone

In the FIND mode, press and hold "D" to perform the watch find mobile phone function, the mobile phone will alarm and/or vibrate to remind user.

13

PIC

Aim the camera at the screen user want to take photo;

In the PIC mode, press "D" to perform remote photo shooting function.

14

Safe Range Remind

When the distance between watch and mobile phone beyond the safe range (around 6 meters), the watch will alarm and/or vibrate to remind user ("SAFE" flashing).

When the watch remind you beyond safe range, user back to safe range within one minute, the watch will automatically re-connect with mobile phone.

15

Power Saving

Enter PS

When PS setting is on, the mobile phone and watch are in normal connection state, if the watch is placed in rest for 10 minutes late, it will automatically enter to power saving mode ("PS" icon displayed).

Power saving setting (See page22).

Wake up PS

Moving the watch after 1 minute

Connect succeed

Timekeeping mode

16

Re-connect

The watch will automatically re-connect with mobile phone after PS wake up (See page 15).

The watch within safe range remind state, back to safe range within 1 minute, it will automatic re-connect with mobile phone (See page 14).

The watch and mobile phone are in normal connection state, if encounter short time disconnection (maybe caused by environmental interference or other causes), this does not mean that there is something wrong with the watch, after a few seconds the watch will automatic re-connect with mobile phone.

In the re-connecting state, the watch will automatic connect with the mobile phone many times, it will automatic close bluetooth function after 1 minute late still unable to connect with watch.

At the watch bluetooth function off state, phone, message, e-mail, event reminder and other functions are invalid. User need turn on the watch bluetooth function by manual then can connect with mobile phone again (See page6-7).

17

Hands Calibration

Please ensure the digital time and hands at same time before using this watch, when they are not the same, please conduct the hands calibration function.

Hands Calibration

Timekeeping mode

Press and hold key "A" for 2s

Full display

Version

Press key "B"

Adjust "hour"

"Hour" flashing

Hand

Press key "B"

Adjust "minutes"

"Minutes" flashing

Adjust "seconds"

"Seconds" flashing

Next page

18

Mode Selection

Press "B" to change the mode in the following sequence: Timekeeping Mode - BLE Mode - SOS Mode - FIND mode - PIC Mode.

19

Timekeeping

Hour, Minutes, Seconds, Month, Date, Day of week;

12/24H Format;

100 years Calendar (2000 - 2099).

20

Find

The mobile phone find watch;

The watch find mobile phone.

21

BLE

Turn ON The Bluetooth

In the BLE off state, press and hold "D" to turn on bluetooth function.

BLE off state

Press and hold key "D"

"Hold" flashing

Link cartoon

22

Turn OFF The Bluetooth

In the BLE on state, press and hold "D" to turn off bluetooth function.

BLE on state

Press and hold key "D"

"Hold" flashing

After 2s

BLE off

23

Clear Bluetooth Connection Of Watch

In the BLE state (when the watch bluetooth function off), press and hold "A" to clear historical bluetooth connection of watch (the icon "A" will disappear).

Press and hold key "A"

"CLR" flashing

Clear connection

When user change mobile phone or bluetooth connection abnormal, please perform to clear bluetooth connection function for the watch (See page28).

24

SOS

In the SOS mode, press and hold "D" to perform SOS function (See page 11).

25

PIC

Remote Photo Shooting

In the PIC mode, press "D" to perform remote photo shooting function (See page13).

The PIC function is invalid when the watch bluetooth off.

26

Backlight

The backlight that uses an EL (electro-luminescent) cause the display to glow for easy reading in the dark.

EL Setting

In the timekeeping mode, press and hold "A" the selection in the following sequence: Auto EL - EL - EL OFF.

Use EL Backlight

In the EL state, press "C" to illuminate the display about 3 seconds.

In the EL off state, press "C" only the "EL OFF" flashing.

In the auto EL state, if the current time within auto EL time setting range, press "C" to illuminate the display about 3 seconds.

In the auto EL state, if the current time out of auto EL time setting range, press "C" only the "AUTO EL OFF" flashing.

Auto EL time setting (See Page22).

27

Low Power

If the battery voltage level is insufficient, the icon "BATT" will be on to remind to replace a new battery.

Change Battery

User use coin to screw out the battery door of the watch, and change with the same specification battery.

28

Trouble Shooting

When user is unable to connect bluetooth function, please follow the steps as below to re-pair the watch and mobile phone.

1. To enter mobile phone setting menu, check the bluetooth function is on or not;

2. At mobile phone bluetooth menu state, un-pair "ALL" paired device;

3. Click Youngs watch APP, in the APP main menu state, click "Setting" disconnection" to clear current connection;

4. In the user mode USER state (when the watch bluetooth function off), press and hold "A" to clear historical connection (clear the displayed "A");

5. Please re-pair APP (See page5-7).

29

Display

The screen shown in below:

Message Notice

Bluetooth

E-Mail Notice

Event Notice

EL indicator

Minutes

Low power indicator

Hour

Buzzer

Vibra

Power Save

30

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. This equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

31

Android

Apple

Bluetooth SMART

CE

FC

Non-professionals, do not disassemble.

Made in China

14652-YP(MD14322)-E

USER'S MANUAL

(Bluetooth Smart Watch)