

 


| iDance®

AC/DC®

TNT-3

ALL-IN-ONE RECHARGEABLE BLUETOOTH PARTY SYSTEM

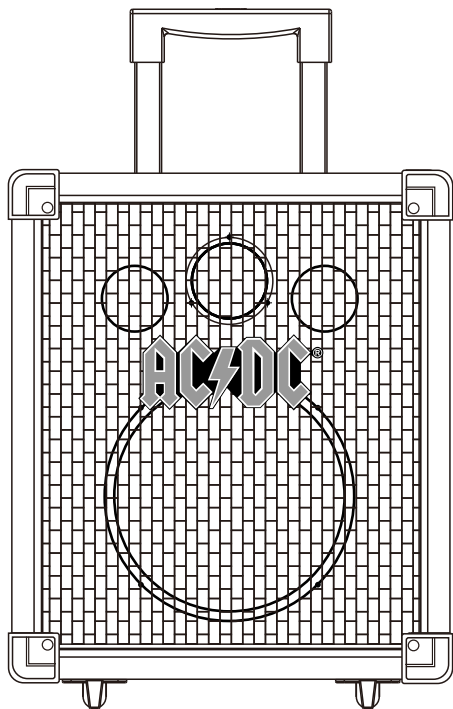

Reference Number: TNT-3-V21
Version Number: V01
Issue Date: 6-12-2017

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATION THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE

WORLD HEADQUARTERS:
iDance H.K.
Unit L 6/F, MC Tower,
133 Hoi Bun Road, Kwun Tong,
Kowloon, Hong Kong.

UK OFFICE:
iDance Audio U.K.
Graham Lloyd Building, Midland
Structures Industrial Estate
Amphill Road, Bedford MK42 8JJ,
United Kingdom

EUROPE OFFICE:
iDance Audio Europe
Gaasterland 2c
1145RG Bovenrijck
The Netherlands

This product meets the essential requirements of Directive 1999/5/EC.
<http://www.idanceaudio.com/documentation/declarationofconformity/>





Company name: First Audio Manufacturing(Guangzhou)Ltd.

Product name: PORTABLE WIRELESS PA SYSTEM

Item Number: TNT-3

Hereby, [First Audio Manufacturing(Guangzhou)Ltd.], declares that this[PORTABLE WIRELESS PA SYSTEM] is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. A copy of the full Doc is attached. The declaration of conformity may be consult at Imports/ manufacture.

Name: First Audio Manufacturing (HK)Ltd.

Imports/ manufacture Address: 3/F.,Block A ,wing Kut Industrial Bldg.,
608 Castle Peak Road HK.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC NOTICE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION

caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CONTENTS

FEATURES	1
UNPACKING	1
IMPORTANT SAFETY INSTRUCTIONS	2
FUNCTION DESCRIPTION	3-5
CONNECTION	6
SPECIFICATIONS	7

 
 
FEATURES

- Bluetooth connection with any mobile device
- Built-in rechargeable batteries for up to 4-hour use
- USB MP3 player for music playback, supporting MP3 and WMA file
- 1/4" MIC input for wired microphone or musical instrument
- 3.5mm LINE input for external audio source
- 1x 1" tweeter
- 1X8" woofer
- Integrated trolley

UNPACKING

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to your local regulations



The following items are included:

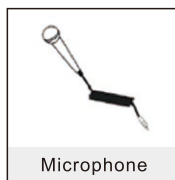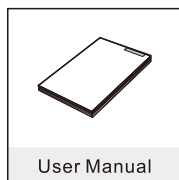

IMPORTANT SAFETY INSTRUCTIONS

CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN  		The lightning flash with arrowhead symbol inside an equilateral triangle is intended to alert User of the presence of uninsulated "hazardous voltage" within the product's enclosure, which may be of sufficient magnitude to induce a risk of electric shock to persons. The exclamation mark inside an equilateral triangle is intended to alert user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.	
Caution: To Reduce The Risk Of Electric Shock, Do Not Remove Cover (or Back). No User-serviceable Parts Inside. Refer Servicing To Qualified Personnel.			
Caution: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.		 This symbol means that this unit is double insulated. An earth or ground connection is not required.	
1. Read these instructions. 2. Keep these instructions. 3. Heed all warnings. 4. Follow all instructions. 5. Do not use this apparatus near water. 6. Clean only with dry cloth. 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. 11. Only use attachments/accessories specified by the manufacturer.		12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.  Portable Cart Warning 13. Unplug this apparatus during lightning storms or when unused for long periods of time. 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. 15. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus. 16. The battery shall not be exposed to excessive heat such as sunshine, fire or the like. 17. The MAINS plug of the adaptor is used as the disconnect device, which shall remain readily operable.	

  FUNCTION DESCRIPTION

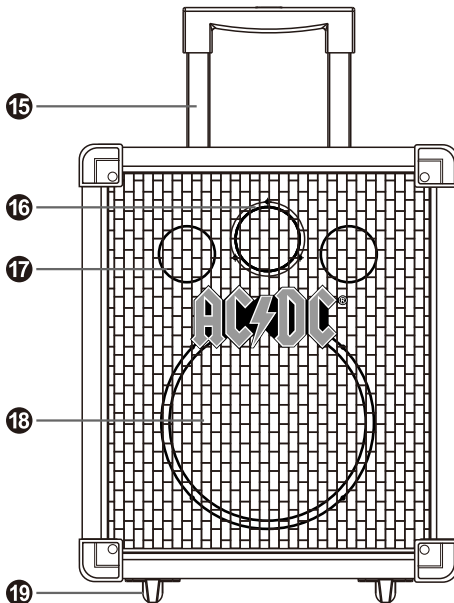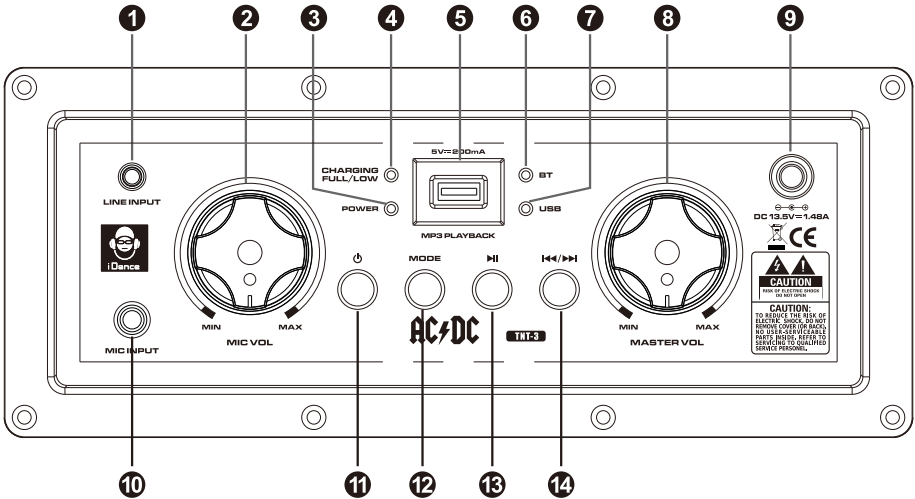

- 1.LINE input jack (3.5mm)
- 2.Knob MIC VOLUME
- 3.POWER INDICATOR
- 4.CHARGING INDICATOR
- 5.MP3 input port (USB)
- 6.BLUETOOTH INDICATOR
- 7.USB INDICATOR
- 8.Knob MASTER VOLUME
- 9.DC input jack (DC 13.5V 1.48A)
- 10.MIC input jack (1/4")
- 11.Button POWER
- 12.Button MODE
- 13.Button PLAY
- 14.Button PREVIOUS/NEXT
- 15.Telescope
- 16.Tweeter
- 17.Tube
- 18.Woofer
- 19.Wheel

FUNCTION DESCRIPTION

1. LINE input jack (3.5mm)

Connect external audio source by 3.5mm cable.

2. Knob MIC VOLUME

Turn this knob to adjust the volume of MIC input. Please don not aim the microphone at the speaker.

3. POWER INDICATOR

LED will be lit when the unit power ON.

4. CHARGING INDICATOR

Indicate the status of battery power. RED=low battery GREEN=charging/fully charged.

5. MP3 input port (USB)

Insert your USB thumb (up to 32GB) for MP3/WMA playback.

6. BLUETOOTH INDICATOR

Indicate the status of Bluetooth connection. LED will twinkle quickly when the Bluetooth is ready for connection. Please turn on the Bluetooth function of your device, scan until you find the device name “TNT-3” and confirm the connection. If connected successfully, the LED will twinkle slowly. Password is not required. If your device ask for the password, please input “0000”.

7. USB INDICATOR

LED will twinkle when your USB thumb insert to MP3 input port.

FUNCTION DESCRIPTION

8. Knob MASTER VOLUME

Turn this knob to adjust the master volume.

9. DC input jack (DC 13.5V 1.48A)

Please use the provided AC/DC adaptor for better performance.

10. MIC input jack (1/4")

Connect the wired microphone or musical instrument by 1/4" cable.

11. Button POWER

Press to turn the unit power ON/OFF.

12. Button MODE (for Bluetooth and MP3 only)

Press to change the play mode Bluetooth and MP3.

The unit will automatically notify the mode status via voice.

 
13. Button PLAY (for Bluetooth and MP3 only)

Press to play/pause the music.

14. Button PREVIOUS/NEXT (for Bluetooth and MP3 only)

Short press to play next song and long press (2 seconds) for previous song.

CONNECTION

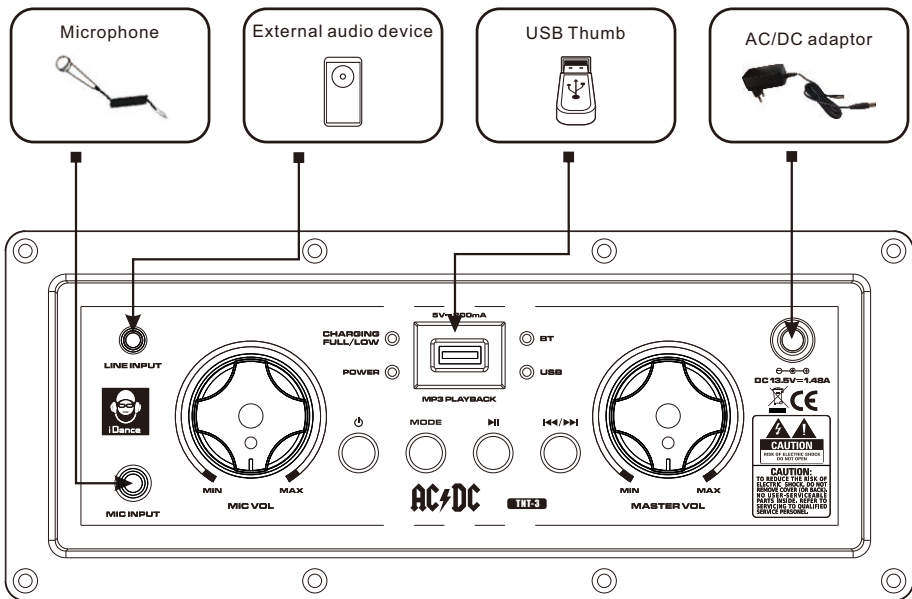

SPECIFICATIONS

Speaker Unit	1x 1"tweeter, 1X8"woofer, 4Ω
Power Supply	DC 13.5V 1.48A
Power Consumption	
Standby	<0.5W
Maximum	20W
Rated Output Power	14W
Maximum Output Power	20W
Rechargeable Battery	Li-ion battery, 11.1V 2200mAh
Distortion	≤0.5%
S/N Ratio	≥ 75dB
Frequency Response	25Hz ~ 20kHz
Input Sensitivity	
Bluetooth	-6dB
MP3	-6dB
MIC INPUT	25mV
LINE INPUT	500mV
Maximum Input Voltage	
MIC INPUT	50mV
LINE INPUT	1V
Unit Dimensions (WxDxH)	355x210x440mm
Net Weight	6.8kg

**Disposal of Old Electrical & Electronic Equipment
(Applicable in the European Union and other European
countries with separate collection systems).**



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic office, your household waste disposal service or the shop where you purchased the product.

