

210mm

Kidzlane

Stage Mic Sing-Off

Bluetooth Karaoke with Dual Microphones

INSTRUCTION MANUAL


For Ages
4+

SAFETY WARNINGS

- Before use, read all safety warnings.
- Only use this product for the purpose described in this manual.
- Always inspect the product for damage. Discontinue use if the product is damaged in any way.
- Do not use the product if it has been damaged or if it has no user serviceable components.
- **WARNING: Strangulation Hazard** - long cord
- Not suitable for children under 3 years due to small parts - choking hazard.
- Remove all packaging before giving to child.
- Please keep packaging for future reference.
- Do not use the product if it has been damaged or if it has no user serviceable components.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not charge with non-rechargeable batteries.
- Do not use the product if it has been damaged or if it has no user serviceable components.
- Do not dispose of batteries in a fire, batteries may explode or leak.
- Recycle or dispose of batteries according to federal, state, and local laws.

CONTENTS

1. Wired Mics
2. Adjustable Mic Holders
3. Device Holder
4. Connector
5. Stage Mic Sing-Off
6. Adjustable Stand
7. Base Center
8. Base Legs

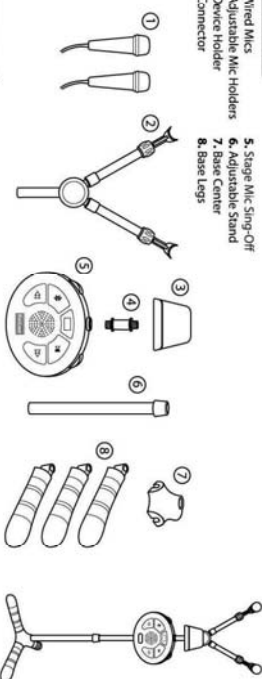

ASSEMBLY

1. Press the 3 Base Legs onto the Base Center from underneath.
2. Press the Adjustable Stand down into the center hole of the Base Center.
3. Secure the Adjustable Stand to the Stage Mic Sing-Off by rotating counter-clockwise. Adjust the height and then tighten the ring on the Adjustable Stand by rotating clockwise.

4. Secure the Connector to the Stage Mic Sing-Off by rotating clockwise.

5. Slide the ring on the back of the Device Holder into the Connector by rotating clockwise.

6. Press the Mics onto the Adjustable Mic Holders. The mic holders fit into the back side of the Stage Mic Sing-Off.

BATTERY INSTALLATION

Remove the back battery cover using a screwdriver. Insert 4 AA size batteries (not included) in the polarity direction shown to the right. Screw the battery cover back on.

NOTE: Can be powered via standard Micro USB Adapter (Not included).

FEATURES

Bluetooth Mode

Keep pressing the Play Mode Button until the LCD screen displays "BT". Scan for device on your Bluetooth enabled device. It will show up as "KIDZLANE". When pairing is complete, Press Play/Pause for music to start playing.

NOTE: If you want to pair the Stage Mic Sing-Off to any device, turn on the Bluetooth function on the current connected device, and select the Stage Mic Sing-Off from the list of devices.

LINE IN MODE

Use the included AUX cable to plug in an external device. Press the Play/Pause button until the LCD screen displays "LINE".

NOTE: The Stage Mic Sing-Off is unable to control music play in this mode. All songs need to be selected using the connected device.

USING MODE

Insert a USB Flash Drive into the port on the back side.

• Press the Play/Pause button until the LCD screen displays "USB".

• Press the Previous and Next buttons to skip to a song or rewind.

Bluetooth Mode

Keep pressing the Play Mode Button until the LCD screen displays "BT". Scan for device on your Bluetooth enabled device. It will show up as "KIDZLANE". When pairing is complete, Press Play/Pause for music to start playing.

NOTE: If you want to pair the Stage Mic Sing-Off to any device, turn on the Bluetooth function on the current connected device, and select the Stage Mic Sing-Off from the list of devices.

LINE IN MODE

Use the included AUX cable to plug in an external device. Press the Play/Pause button until the LCD screen displays "LINE".

NOTE: The Stage Mic Sing-Off is unable to control music play in this mode. All songs need to be selected using the connected device.

USING MODE

Insert a USB Flash Drive into the port on the back side.

• Press the Play/Pause button until the LCD screen displays "USB".

• Press the Previous and Next buttons to skip to a song or rewind.

FCC STATEMENT

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide protection against harmful interference in a residential environment. This equipment does not create harmful interference to radio or television reception, which can be determined by turning the equipment off and on, and observing for changes in the quality of the reception.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, please maintain a minimum proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

Model number: KIDZLANE

NEW YORK, NY 10005
www.kidzlane.com
© 2018 KIDZLANE
www.kidzlane.com



WARNING:
CHOKING HAZARD - Small parts.
Not suitable for children under 3 years.

V1

297mm