

Damai



Service Hotline: 1-888-681-4588

FCC Caution


§ 15.19 Labelling requirements.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Remote control

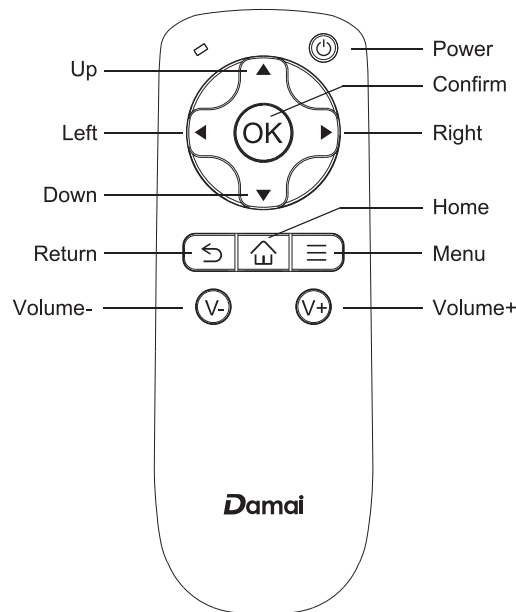


Product specification:

Product name:	DamaiBox		
Model number:	DB4246US		
CPU:	Quad core 64bit A53		
OS:	Android 6.0		
RAM:	1GB		
Flash:	8GB		
PSU:	12V --- 1A		
Work Environment:	work temperature: 0°C~+45°C	humidity: <90%	
	storage temperature: -20°C~+45°C	humidity: <95%	

Friendly reminder:

- The mobile HDD connected USB port and the requirements of external mobile HDD output current can not be more than 5V 500mA, otherwise the protection circuit will result in mobile HDD failure.
- Device needs a minimum of 10cm surrounding gap, do not cover with newspaper and other items.
- Device is not water/splash proof. Objects such as vase filled with liquid should not be placed on top of the device.
- Please keep the product away from moisture, sun exposure, high temperature and objects with magnetic force.
- Please avoid scratches and damages on the casing and interface, avoid dropping or throwing the products which may cause damages due to strong impacts.
- Please use the exclusive power adapter, to prevent excessive current and other reasons, such as damage to the motherboard and important components.
- Please do not attempt to disassemble the product, the maintenance work is limited to the company's authorized staff only.

Installation instructions

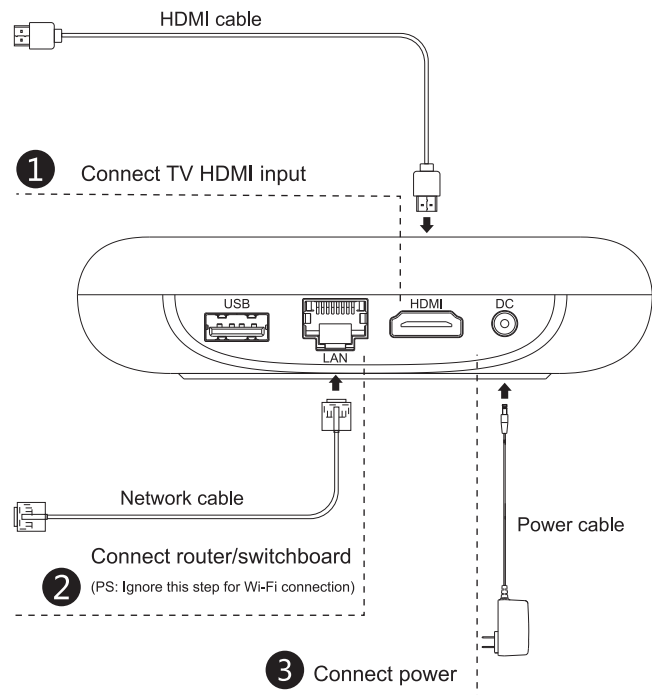

Device connection

- 1.Connect the HDMI OUT ① of the box with the TV HDMI input.
- 2.If the box uses wired connection, please connect the wired connection output to wireless router or ADSL Modem, as ②. When connected to network, the system will configure the network automatically.
- 3.The box has embedded Wi-Fi. You may start the Wi-Fi function in the box, search for Wi-Fi, and connect.
- 4.Connect power cord ③ of the box and switch on.

Network configuration

Switch on the box and check the indicator to verify if the box boots properly, then begin to configure the network.(Choose wireless or wired connection)

Wired connection configuration

System setup->Network setup->choose 'wired connection'
When choose wired connection, system will configure the network automatically and obtain IP address.

PPPOE configuration

System setup->Network setup->choose 'broadband dial-up'-> pops up dial-up interface.
Type 'user account/password'(Telecom Operators ADSL account and password), click 'dial'.
Begin dial automatically: if this option is checked, system will dial-up automatically.

Wireless network configuration

System setup->Network setup->choose 'Wireless network', the system will search for Wi-Fi signals and choose one automatically.
Type in the right password, click' network connection', wireless network connected.