

Mobile Phone User's Guide

Table of Contents

1	THE BASICS	3
1.1	OVERVIEW	3
1.2	SAFETY GUIDE	4
1.3	SAFETY WARNINGS AND NOTICES.....	5
	<i>1.3.1 General attention</i>	5
	<i>1.3.2 Notices when using your phone</i>	6
	<i>1.3.3 Notices when using the battery</i>	9
	<i>1.3.4 Charging your phone</i>	11
	<i>1.3.5 Cleaning and maintenance</i>	15
2	GETTING STARTED	16
2.1	KEY EXPLANATIONS.....	16
2.2	USING THE TOUCHSCREEN	17
2.3	CONNECTING TO THE NETWORK.....	17
	<i>2.3.1 Inserting and removing the SIM card</i>	17
	<i>2.3.2 Turning your phone on and off</i>	18
	<i>2.3.3 Unlocking the SIM card</i>	18
	<i>2.3.4 Unlocking your phone</i>	19
	<i>2.3.5 Connecting to the network</i>	20
	<i>2.3.6 Making a call</i>	20
	<i>2.3.7 Making a domestic call</i>	21
	<i>2.3.8 Making an international call</i>	21

2.3.9 *Making a call from the list* 22

2.3.10 *Making an emergency call* 22

3 FUNCTIONAL MENU 24

3.1 FILE MANAGEMENT 24

3.2 SENDING AN EMAIL 25

3.3 DIALING 26

3.4 CALCULATOR..... 27

3.5 VOICE RECORDER 28

3.6 CALENDAR..... 29

3.7 SETTINGS 30

3.8 CLOCK 32

3.9 RADIO 33

3.10 PEOPLE..... 35

3.11 CAMERA..... 37

3.12 MESSAGING..... 38

3.13 MUSIC..... 39

4. TEXT INPUT 41

1 The Basics

1.1 Overview

Thank you for choosing the mobile phone. After reading this guide you will be able to fully master the use of your phone and appreciate all its functions and ease of use.

Not only does **the smart phone** provide you with basic call functions such as call Register, but also with many practical functions and services, to improve the time you spend working and playing.

The color screen mobile phone complies with the technology and has been approved by certification authorities both domestically and abroad.

The availability of some services and features described in this manual depends on the network and your subscription. Therefore, some menu items may not be available in your phone. The shortcuts to menus and features may also vary from phone to phone.

Our company reserves the right to revise this manual content without prior notice.

1.2 Safety guide

- If your mobile phone is lost or stolen, please contact the telecommunications authorities or a sales agent immediately to have a hold on the phone and the SIM card. This will prevent economic loss caused by unauthorized calls made from your mobile phone.
- When you contact the telecommunications authorities or a sales agent, they will need to know the IMEI number of our mobile phone (remove battery to expose number located on the label on back of phone). Please copy this number and keep in a safe place for future use.
- In order to avoid the misuse of your mobile phone please take the following preventative measures:
 - Set the PIN number of your mobile phone's SIM card and change this number immediately if it becomes known to a third party.
 - Please keep the phone out of sight when leaving it in a vehicle. It is best to carry the phone with you, or lock it in the trunk.
 - Set call barring.

1.3 Safety warnings and notices

Before using your mobile phone, read and understand the following notices carefully to ensure you will use it safely and properly.

1.3.1 General attention

- Only the battery and battery charger specified by our company should be used in your phone. Other products might result in battery leakage, overheating, fire or explosion.
- To avoid your phone malfunctioning, or catching fire, please do not violently impact, jolt or throw your phone.
- Please do not place the battery, mobile phone, or charger in a microwave oven or high-pressure equipment. Otherwise it could lead to unexpected accidents such as damage to the circuitry or fire hazard.
- Please do not use your phone near flammable or explosive gases, otherwise it could cause malfunction of your phone or fire hazard.
- Please do not subject your phone to high temperatures, high humidity or dusty places; otherwise this may lead to the malfunction of

your phone.

- Keep your phone out of the reach of small children. Your phone is not a toy. Children could hurt themselves.
- To avoid your phone falling and malfunctioning or being damaged, please do not place it on uneven or unstable surfaces.

1.3.2 Notices when using your phone

- Turn off your mobile phone where the phone is not allowed, such as, on the airplane or in hospitals. Using the mobile phone in those places may impact the normal operation of electronic devices and medical instruments. Follow relevant regulations when using your mobile phone in those places. Your mobile phone has the auto turn-on feature. Check your alarm clock settings to confirm that your mobile phone will not be turned on automatically during flight.
- Please do not use your mobile phone near the weak signal or high precision electronic devices. RF interference might cause malfunctioning of such electronic devices and other problems. Special tips must be paid

near the following equipment: hearing aids, pace makers and other medical electronic devices, fire detectors, automatic doors and other automatic control installations. To find out the effect of mobile phones on a pacemaker or other pieces of electronic medical equipment please contact the manufacturers or local sales agents of the equipment.

- Please do not subject the LCD to impact or use the screen to strike things, as this will damage the LCD board and cause leakage of the liquid crystal. There is a risk of blindness if the liquid crystal substance gets into the eyes. If this occurs rinse eyes immediately with clear water (under no circumstances rub your eyes) and go immediately to a hospital for treatment.
- Do not disassemble or modify your mobile phone, as it will lead to damage to the phone such as battery leakage or circuitry failure.
- Under very rare circumstances using the mobile phone in certain model cars may negatively affect the internal electronic

equipment. In order to assure your safety under such circumstances please do not use the mobile phone.

- Please do not use needles, pen tips, or other sharp objects on the keypad as this may damage the mobile phone or cause it to malfunction.
- In the event of antenna malfunction, do not use your phone, as it could be harmful to human body.
- Avoid letting the phone come into close contact with magnetic objects such as magnetic cards as the radiation waves of the mobile phone may erase the information stored on floppy disks, pay cards and credit cards.
- Please keep small metal objects, such as thumbtacks far away from the receiver. When the receiver is in use it becomes magnetic and may attract these small metal objects and thus these may cause injury or damage the mobile phone.
- Avoid having the mobile phone come into contact with water or other liquids. If liquids

enter the phone, this could cause a short circuit, battery leakage or other malfunction.

1.3.3 Notices when using the battery

- The battery has a limited service life. The remaining life gets shorter as the times of charging increase. If the battery becomes feeble even after the charging, this indicates the service life is over and you have to use a new battery.
- Do not dispose of old batteries with everyday domestic garbage. Please dispose of old batteries at the directed places with specific rules for their disposal.
- Please do not throw batteries into a fire, as this will cause the batter to catch fire and explode.
- When installing the battery, do not use force or pressure, as this will cause the battery to leak, overheat, crack and catch fire.
- Please do not use wires, needles or other metal objects to short-circuit the battery. Also, do not put the battery near necklaces or other metal objects, as this will cause the battery to leak, overheat, crack and catch fire.

-
- Please do not solder the contact points of the battery, as this will cause the battery to leak, overheat, crack and catch fire.
 - If the liquid in the batteries goes into the eyes, there is a risk of blindness. If this occurs do not rub the eyes, but immediately rinse eyes with clear water and go to the hospital for treatment.
 - Please do not disassemble or modify the battery, as this will cause the battery to leak, overheat, crack and catch fire.
 - Please do not use or place the batteries near high temperature places such as near a fire or heating vessel, as this will cause the battery to leak, overheat, crack and catch fire.
 - If the battery overheats, changes color, or becomes distorted during use, charging, or storage, please stop using and replace it with a new battery.
 - If the liquid from the battery comes in contact with skin or clothing this could cause burning of the skin. Immediately use clear water to rinse and seek medical tips if necessary.

-
- If the battery leaks or gives off a strange odor, please remove the battery from the vicinity of the open fire to avoid a fire or explosion.
 - Please do not let the battery become wet as this will cause the battery to overheat, smoke and corrode.
 - Please do not use or place batteries in places of high temperature such as in direct sunlight, as this will cause the battery to leak and overheat, lower performance, and shorten the battery's life.
 - Please do not continuously charge for more than 24 hours.

1.3.4 Charging your phone

- Connect the connector of charger to the mobile phone. The battery level indicator flashes on the screen. Even if the phone has been turned off, the charging image still appears, indicating that the battery is being charged. If the phone is overused when the current is insufficient, it may take longer time for the charging indicator to appear on the screen after the charging begins.
- When the battery level indicator does not flash and indicates the battery is full, this indicates the charging has been completed. If the phone is off

during charging, the charging being completed image also appears on the screen. The charging process often takes 3 to 4 hours. During the charging, the battery, phone and charger gets warm, this is a normal phenomenon.

- Upon the completion of charging, disconnect the charger from AC power socket, and from the mobile phone.

Notes:

- During charging, the phone must be placed in well-ventilated environment of $+5\text{ }^{\circ}\text{C}$ to $+40\text{ }^{\circ}\text{C}$. Always use the charger supplied by your phone manufacturer. Using an unauthorized charger might cause danger and invalidate the authorization and warranty clauses for your phone.
- The standby time and call duration provided by the manufacturer are based on ideal operating environment. In practice, the battery's operating time varies depending on network conditions, operating environment and usage methods.
- Make sure the battery has been installed before charging. It is best not to remove the battery while charging.

-
- Upon completion of charging, disconnect the charger from your phone and the power supply.

If you have not disconnected the charger from your phone and the power supply, the charger will continue to charge the battery after about 5 to 8 hours when the battery level decreases substantially. We advise you not to do like this, as it lowers your phone performance and shortens your phone life.

Notices when using your charger

- Please use AC 220 volts. The use of any other voltage will cause battery leakage, fire and cause damage to the mobile phone and charger.
- It is forbidden to short circuit the charger, as this will cause electrical shock, smoking and damage to the charger.
- Please do not use the charger if the power cord is damaged, as this will cause fire or electrical shock.
- Please immediately clean any dust gathered on the electrical outlet.
- Please do not place vessels with water near the charger in order to avoid water splashing onto the charger and causing an electrical shortage,

leakage or other malfunction.

- If the charger comes in contact with water or other liquid the power must immediately be switched off to avoid an electrical short or shock, fire or malfunction of the charger.
- Please do not disassemble or modify the charger, as it will lead to bodily harm, electrical shock, fire or damage to the charger.
- Please do not use the charger in the bathroom or other excessively moist areas, as this will cause electrical shock, fire or damage to the charger.
- Please do not touch the charger with wet hands, as this will cause electrical shock.
- Do not modify or place heavy objects on the power cord, as this will cause electrical shock or fire.
- Before cleaning or carrying out maintenance please unplug the charger from the electrical outlet.
- When unplugging charger, do not pull on the cord, but rather hold on to the body of the charger, as pulling on the cord will damage the cord and lead to electrical shock or fire.

1.3.5 Cleaning and maintenance

- The mobile phone, battery, and charger are not water resistant. Please do not use them in the bathroom or other excessively moist areas and likewise avoid allowing them to get wet in the rain.
- Use a soft, dry cloth to clean the mobile phone, battery and charger.
- Please do not use alcohol, thinner, benzene or other solvents to wipe the mobile phone.
- A dirty outlet will cause poor electrical contact, lose of power and even inability to recharge. Please clean regularly.

2 Getting Started

2.1 Key explanations

Key	Explanations
Return key	<ul style="list-style-type: none">●Return to the previous menu.
Menu key	<ul style="list-style-type: none">●Show options of current menu.
Home key	<ul style="list-style-type: none">●At any status, press the key to return to the standby screen.
Power key	<ul style="list-style-type: none">● Hold down this key to turn your phone off and on.● Generally, press this key to lock the mobile phone.● Long press 10 seconds,force the system to power off
Side volume	<ul style="list-style-type: none">● During the conversation, press the two keys to adjust the volume.
Power key +Home key	<ul style="list-style-type: none">●Interception of the current screen picture,you can see screenshots in the Gallery.

Note: In this guide, the phrase “press the key” refers to pressing and thereafter releasing a key. “Hold down a key” refers to pressing a key and keeping it depressed for 2 seconds or longer.

The descriptions and functions of keys depend on the model of your phone.

2.2 Using the touchscreen

Your phone provides **many** touch keys in the Main screen. To use these keys correctly, calibrate the touch screen in advance . Meanwhile please follow the instructions:

- Do not touch the screen with wet hands.
- Do not touch the screen with great forces.
- Do not touch the screen with metallic or conductive objects.

2.3 Connecting to the network

2.3.1 Inserting and removing the SIM card

- Turn off the phone; remove the battery and unplug other external power supplies. Insert the SIM card into the SIM holder as shown in the phone.
- When you need to remove the SIM card, turn off the phone, remove the battery and then remove the SIM card from the holder.

Warning: Do not turn off your phone before removing the SIM card. Never insert or remove the SIM card when an external power supply is connected, as this may cause damage to the SIM card.

2.3.2 Turning your phone on and off

To turn on the phone, hold down the **POWER key** on the top; to turn off the phone, hold down the **POWER key**.

If you have turned on your phone without inserting the SIM card, the phone will prompt you to install the SIM card. With the SIM card already inserted, your phone automatically verifies the availability of the SIM Card.

Then, the screen shows the following:

Enter PIN1 — if you have set the SIM card password.

Enter phone password — if you have set your phone password

Search for network — the phone searches for the appropriate network.

2.3.3 Unlocking the SIM card

The PIN 1 (personal identification number)

secures your SIM card from being misused by others. If you have selected this function, you must enter the PIN1 code each time you turn on the phone so that you may unlock the SIM card and then make or answer calls. You can deactivate SIM card protection (see “Safety settings”). In this case, the misuse of your SIM card cannot be prevented.

- Press the Hang Up key to turn on your phone;
- Enter your PIN1 code. Clear the incorrect digits by using the right soft key, and press OK for confirmation. e.g. if your PIN1 is 1234, please enter:
1 2 3 4

If you enter incorrect numbers for three times in succession, your SIM card will be locked and your phone will ask you to enter PUK 1 number. If you do not know the PUK1 code, do not try. Instead, contact your network service provider. See “Safety settings”.

Note: your network service provider sets a standard PIN1 code (4 to 8 digits) for your SIM card. You should immediately change this number. See “Safety settings”.

2.3.4 Unlocking your phone

To prevent unauthorized use, you can set phone protection. If you have selected this function, you must draw unlocking pattern each time you turn on your phone, to unlock the phone and then make or answer calls. You may clear the

unlocking pattern (see “Safety settings”). In this case, the unauthorized use of your phone cannot be protected.

If you forget your phone password, you must contact the retailer or local authorized service center to unlock your phone.

2.3.5 Connecting to the network

■ Once your SIM card is unlocked, your phone searches for available network automatically (the screen will show the network searching is underway). If your phone has found the available network, the name of network service provider appears at the center of screen.

Note: Making an emergency call. Note: If “only for emergency calls” appears on the screen, it indicates that you are beyond the network coverage (service area), and that you can still make emergency calls depending on the signal intensity.

2.3.6 Making a call

When the logo of network service provider appears on the screen, you can make or answer a call. The bars at the upper left corner of screen indicate the intensity of network signal.

Conversation quality is significantly affected by obstacles, thus moving within a small area while making or answering a call can improve the conversation quality.

2.3.7 Making a domestic call

In the Dial screen, enter a number, and press the **Dial** key to make a call. To change the number, delete the digits you have entered. During dialing, the animation appears on the screen. After the call is picked up, the screen will show call status information. If the connection alert tone has been set, your phone will ring the alert tone (network dependent).

To end a call, press the **Hang Up** key.

Zone code Phone number Dial key

2.3.8 Making an international call

To make an international call, hold down the **0 key** on the Dialing screen until the international prefix "+" for appears. This allows you to dial an international number without knowing its international fix (e.g. 00 for China).

Following the entry of international prefix, enter the country code and complete phone number. For the country codes, follow the general conventions, for example, 49 for Germany, 44 for

UK, and 46 for Sweden.

Like making an international call via a fixed telephone, omit the “0” at the head of a city code.

For example, to call our hotline from another country, you can dial:

+86 21 114

+	Country code	Complete phone
number	Dial key	

2.3.9 Making a call from the list

All calls dialed and received are stored within a list in your phone. Those dialed and received recently are exhibited at the top of the list (see “Call Register”). All the numbers are sorted by Dialed Calls, Received Calls and Missed Calls. Your phone also provides options for you to view all calls. When the call Register is full, the old numbers will be deleted automatically. To view the list, do the following:

- To view the dialed calls, press the Dial key
- You can dial any number from the list by pressing the Dial key.

When the call list appears, press OK to see details, or go to Options -> Save to place the number into your Phonebook.

2.3.10 Making an emergency call

If you are beyond the network coverage (see

 
network-signal-intensity bars at the upper left corner of the screen), you can still make emergency calls. If your network service provider does not provide roaming service to the area, the screen will show “only for emergency calls”, alerting you that you can only make such calls. If you are within the network coverage, you can also make emergency calls even without the SIM card.

3 Functional Menu

(※The following features depends on specific models)

3.1 File Management


In the file management, files can be searched rapid, deleted or edited in each card and new files can be created.

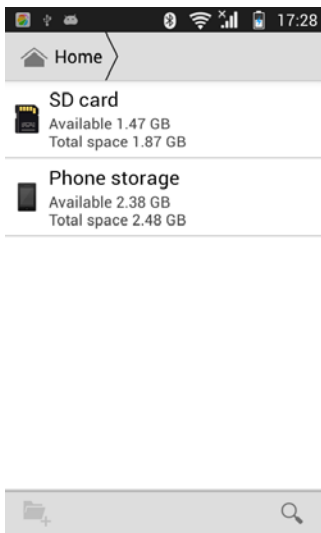

3.2 Sending an Email

You can send an Email to anyone who has an Email address.

 Entering the procedure and set an account, you can click the account so that you come into the account already created, you can also activate, compile and create an account and then delete the operating. The email can be sent and received just like in a computer. This procedure requires the network support.

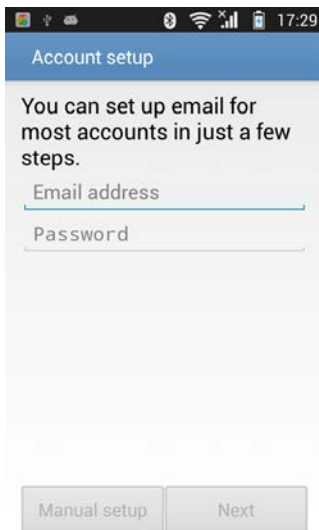

3.3 Dialing

When dialing, you can have a quick access to the call records, contacts and digit dial keyboard (used for manual dialing) by the menu key on the screen.



3.4 Calculator

Your phone provides a calculator with 4 basic functions for the convenience of your calculating.

Press this button , and you delete the input and output .

Notice: this calculator is of limited accuracy and sometimes it causes error, please forgive us for the inconvenience.



3.5 Voice Recorder

The recorder could be used to record audio files.



The audio files are automatically stored on your phone. Click the Menu key, and you can operate and set the recorded voice. The file can be in document management and various players can be selected to play the voices.

3.6 Calendar

Calendar allows you to view your schedules and events at any time. You may view schedules one by one or several ones at the same time.


Select to show calendar by day, week or month. If “by week (or month)”, the calendar will be shown by week (or month). This application is convenient for you to view schedule or add events.



The image shows a mobile application interface for a calendar. At the top, there is a status bar with icons for signal, Wi-Fi, battery, and the time 17:30. Below that is a header for "September 2014" with a small calendar icon on the right. The days of the week are listed in a row: SUN (red), MON, TUE, WED, THU, FRI, SAT (green). The calendar grid shows dates from 31 to 11. The date 15 is highlighted with a dark blue background. Other dates are color-coded: 6, 13, 20, and 27 are green; 7, 14, 21, and 28 are red; and 1, 2, 3, 4, 5, 8, 9, 10, 11, 16, 17, 18, 19, 22, 23, 24, 25, 26, 30 are in black text on a light gray background.

SUN	MON	TUE	WED	THU	FRI	SAT
31	1	2	3	4	5	6
7	8	9	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30	1	2	3	4
5	6	7	8	9	10	11

 3.7 Settings

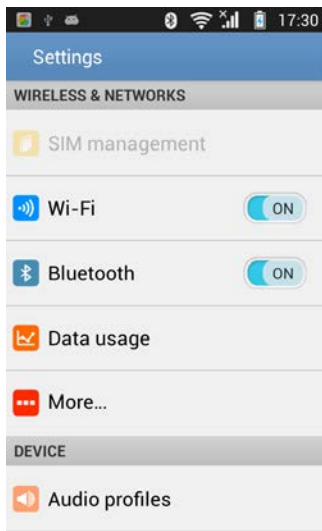

Reach the menu and customize your phone settings.

SIM management: SIM card can be managed and made settings.

Wi-Fi: WLAN can be turned on and off and made some settings.

Bluetooth: Bluetooth can be turned on and off and settings are made.

Data usage: It makes you in full awareness of the usage of the information.

More: Click more and you will set up flight mode and VPN and more.

Audio profiles: General, silent, meeting and outdoor optional. In the meanwhile, customized setting-up of some scene modes are allowed. Select a mode and enter the customized setting-up, operational are vibration, volume, ring tones, notifications and key beep, etc.

Display: Customized setting-up of the phone luminance, wallpaper, the screen and screen time-out and font size is allowed.

Storage: The internal memory of the storage card and of the phone is shown.

Battery: The usage detail of the battery is shown.

Apps: View, manage and delete the applications on your phone.

Location: Set the service during the locating.

Security: Set unlocking pattern; lock the SIM card; set the SD card.

Language & input: Select a language and input method.

Backup & reset: Reset DRM and restore

factory settings to clear all personal data on your phone.

Add account: Set the synchronization of your phone account with your phone.

 
Date & time: Set current time and date.

Schedule power on&off: set the time to turn on or off your phone.

About phone: View the model, service status, mobile software and hardware information, etc.

3.8 Clock

Enter the menu to display the current time. It includes world time,alarm clock,stopwatch and countdown.

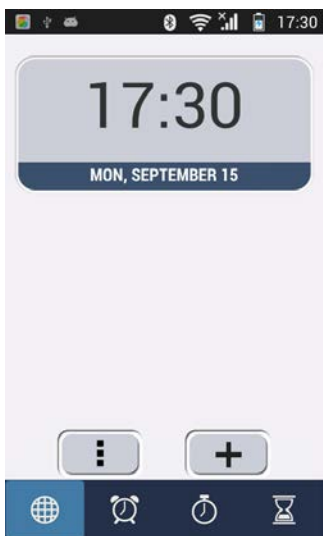

3.9 Radio



Wear your earpieces of radio before searching for channels.



Channel list: Display the list of FM radio channels. You can select to play one of them. (the list can contain 20 channels maximum)

Search: Select this option to automatically search for channels and generate the list of channels.

Loudspeaker: Press the button to use the radio loudspeaker.

 
 and : Tap to move to another channel.



: Tap to broadcast and close

3.10 people

The “people ” lets you easily call your contacts or friends, or send emails or short messages to them. You may add contacts directly from your phone, or synchronize “people” with any application on your computer. You may open “people” directly from the Main screen, or open it via the “Dialing” application.

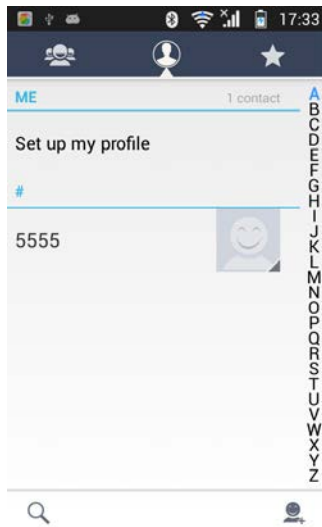

Add a contact:

To add a contact, directly enter the name and phone number, or import the name and phone number from the SIM card. (The number of contacts you can add is limited by the memory of your phone.)

Search for contacts:

To search for a contact, press the Search key in search screen, and a search box will pop up. In the search box, enter the key words, such as first name, second name and company name. While you are entering the key word, the matching contacts immediately appear.

Edit a contact:

To edit details of a contact, select “Edit a contact”.

 
Delete a contact:

To delete the current contact, select “Delete a contact”.

From the menu, you can also synchronize with or share an account or import or export a contact.

3.11 Camera

Your phone provides the camera and video recorder features. Wherever you go, you can take high-resolution photos and videos. It also supports advanced camera features such as image stabilization, face, panorama shooting, high dynamic range and zero delay shutter, which can also be customized.

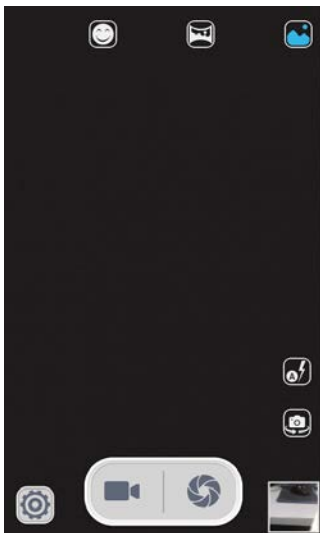

3.12 Messaging

Messaging lets you send text and multimedia messages to any contact that has an SMS device. The multimedia messages include photos, video clips, contacts information, and voice memos. What's more, you can send messages to several contacts at the same time.



Note: Perhaps Messaging is not available in all countries and regions. Probably you need pay for using Messaging. For more information, consult your network operator.

As long as you are within the network, you can use “Messaging”. As long as you can make a call, you can send messages. You probably have to pay for sending or receiving messages, depending on your network operator.

Send a message: Tap it, enter the number and name of the contact or select the contact from Contacts. Tap the text box above keypad, enter the information and then tap “Send”.

After selecting the number, you can select such options as Call, Add subject, Attach, Insert facial expression, and more.

Tap Settings to set ringtone, Delivery reports, and maximum quantity of messages.

3.13 Music

Music is used for enjoying the stored audio files. Select Music, you can see the menus of “ List of played songs”, “Songs”, “Specialists” and “Artists”.



To pause playing a song



To resume playing a song



To skip to the next song
or reading material



Return to the previous
song or reading material



To move fast backward or
forward

Touch and hold or . The longer you hold, the more songs you skipped.

4. Text Input

Enter text via the keypad. Examples of text include contact details, emails, short messages, and websites. The keypad provides the functions of spelling prediction, spelling correction and learning while using.

The smart keypad may give you prompts of correct spelling, depending on which application you are using.

Enter text: 1 Tap the text box (memo, or new contact) to call the keypad.

2 .Tap the keys on keypad.

At the initial stage, you can tap keys using either of your index fingers. Once you get familiar with the keypad, you can try tapping keys using both of your thumbs.

While tapping a key, the corresponding letter will appear above your thumb or another finger. If you are tapping a wrong key, you may slide to the correct one. Only when your tapping finger leaves a key, can the corresponding letter be entered in the text box.

5. FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved

by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The highest reported SAR values for head and body are below:

Head: 0.75W/kg(1g); Body:0.79W/kg(1g) respectively.

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international

standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted.

Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure

to RF energy. The design of your phone complies with the FCC guidelines (and those standards). Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.