






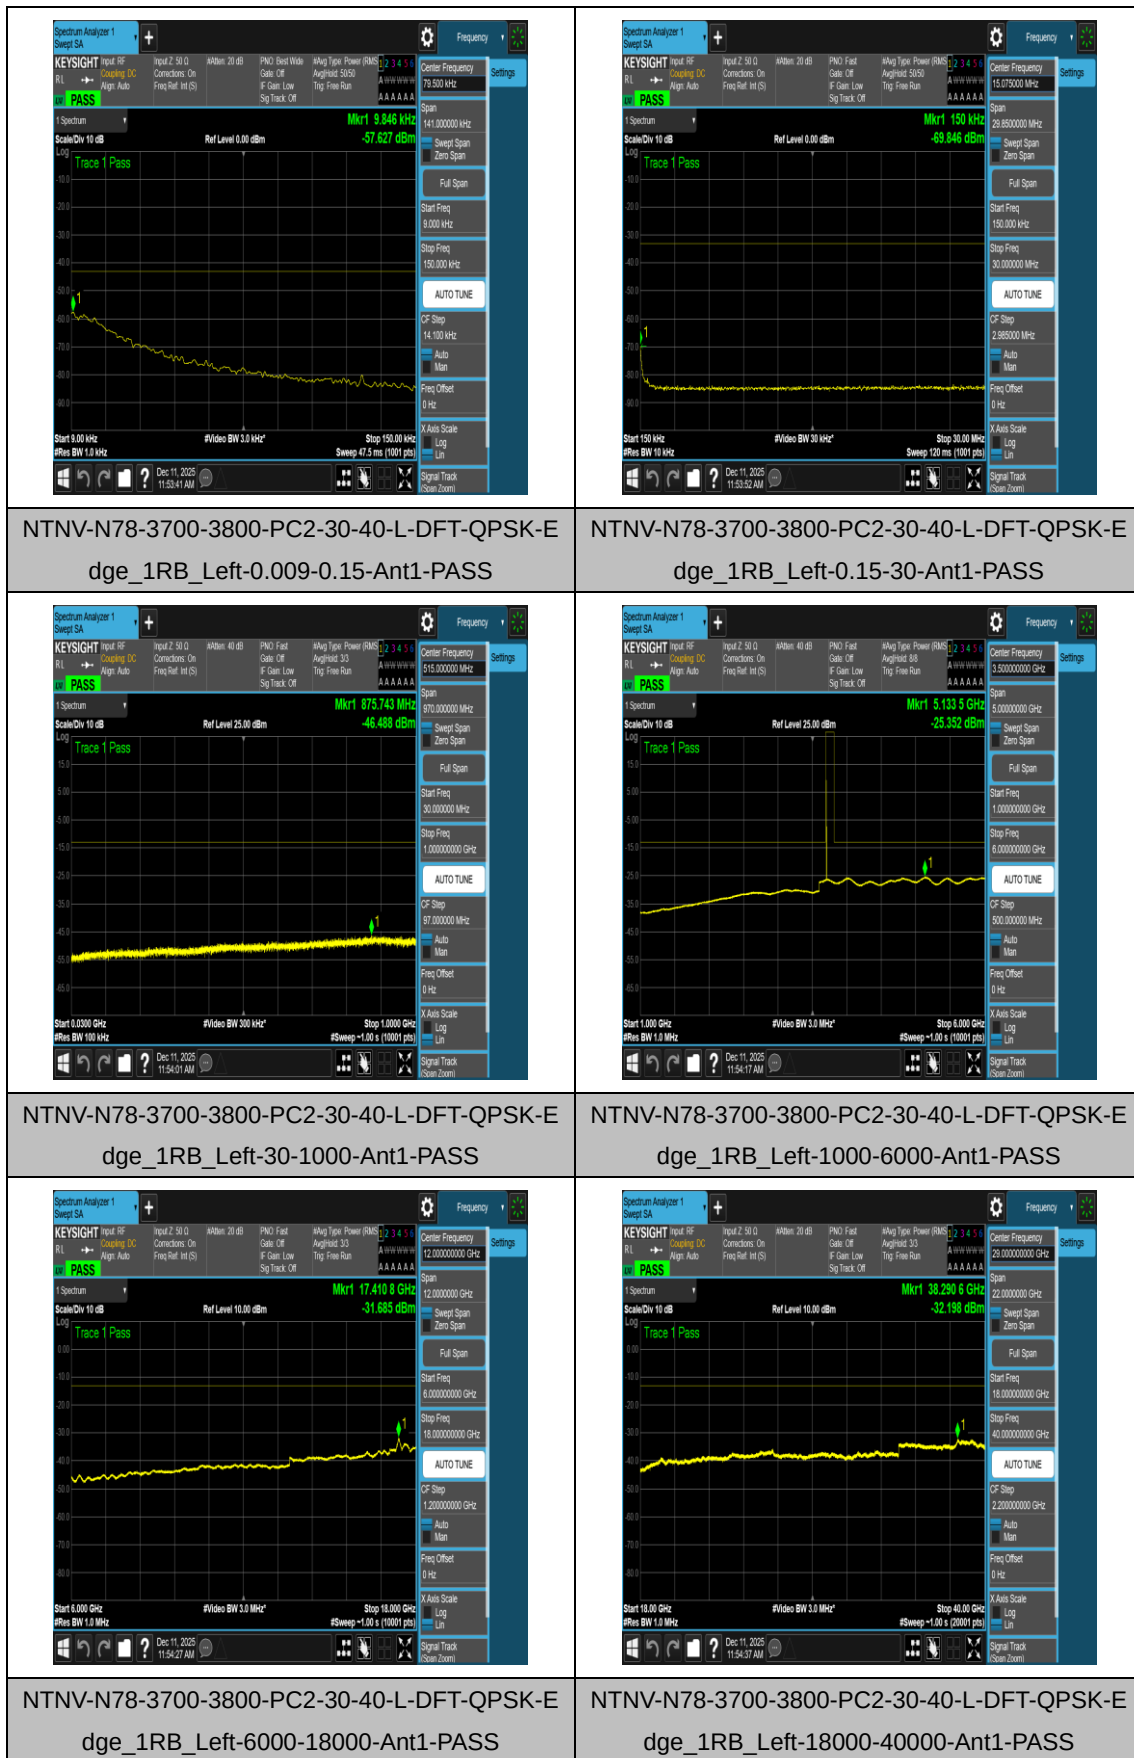


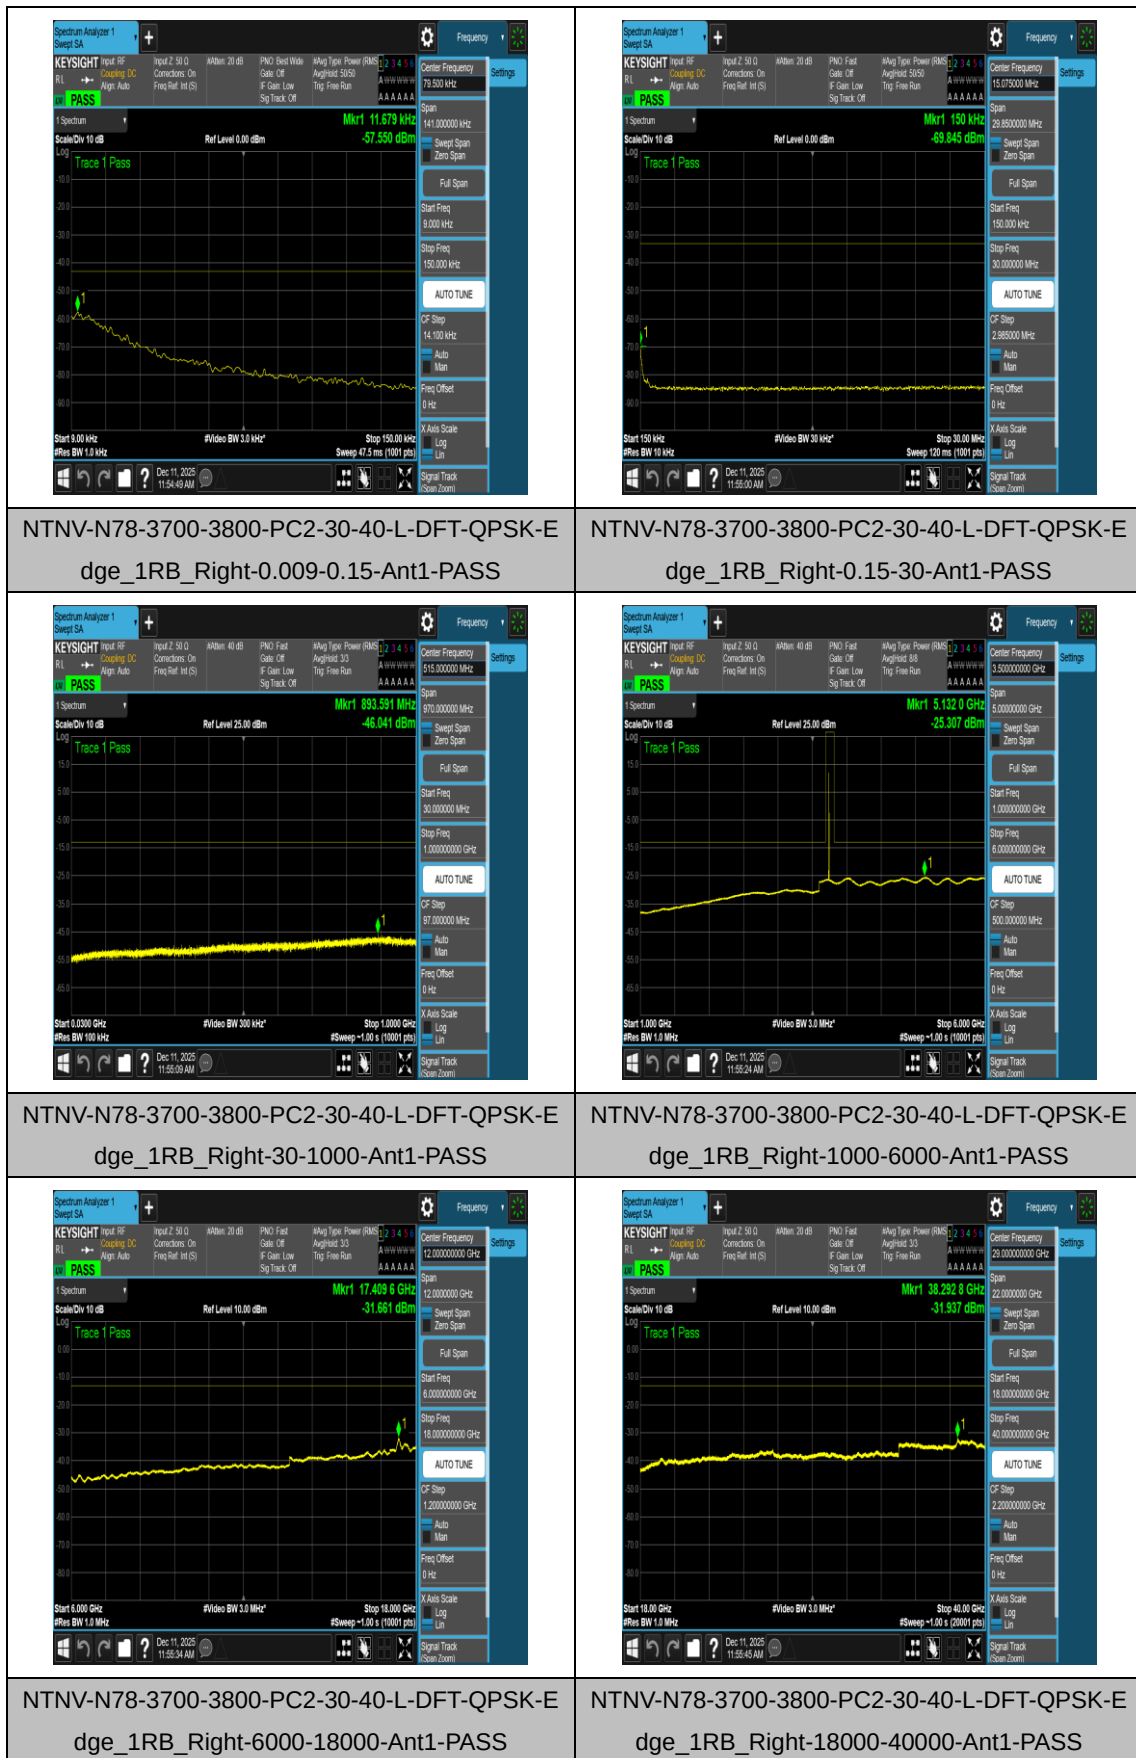


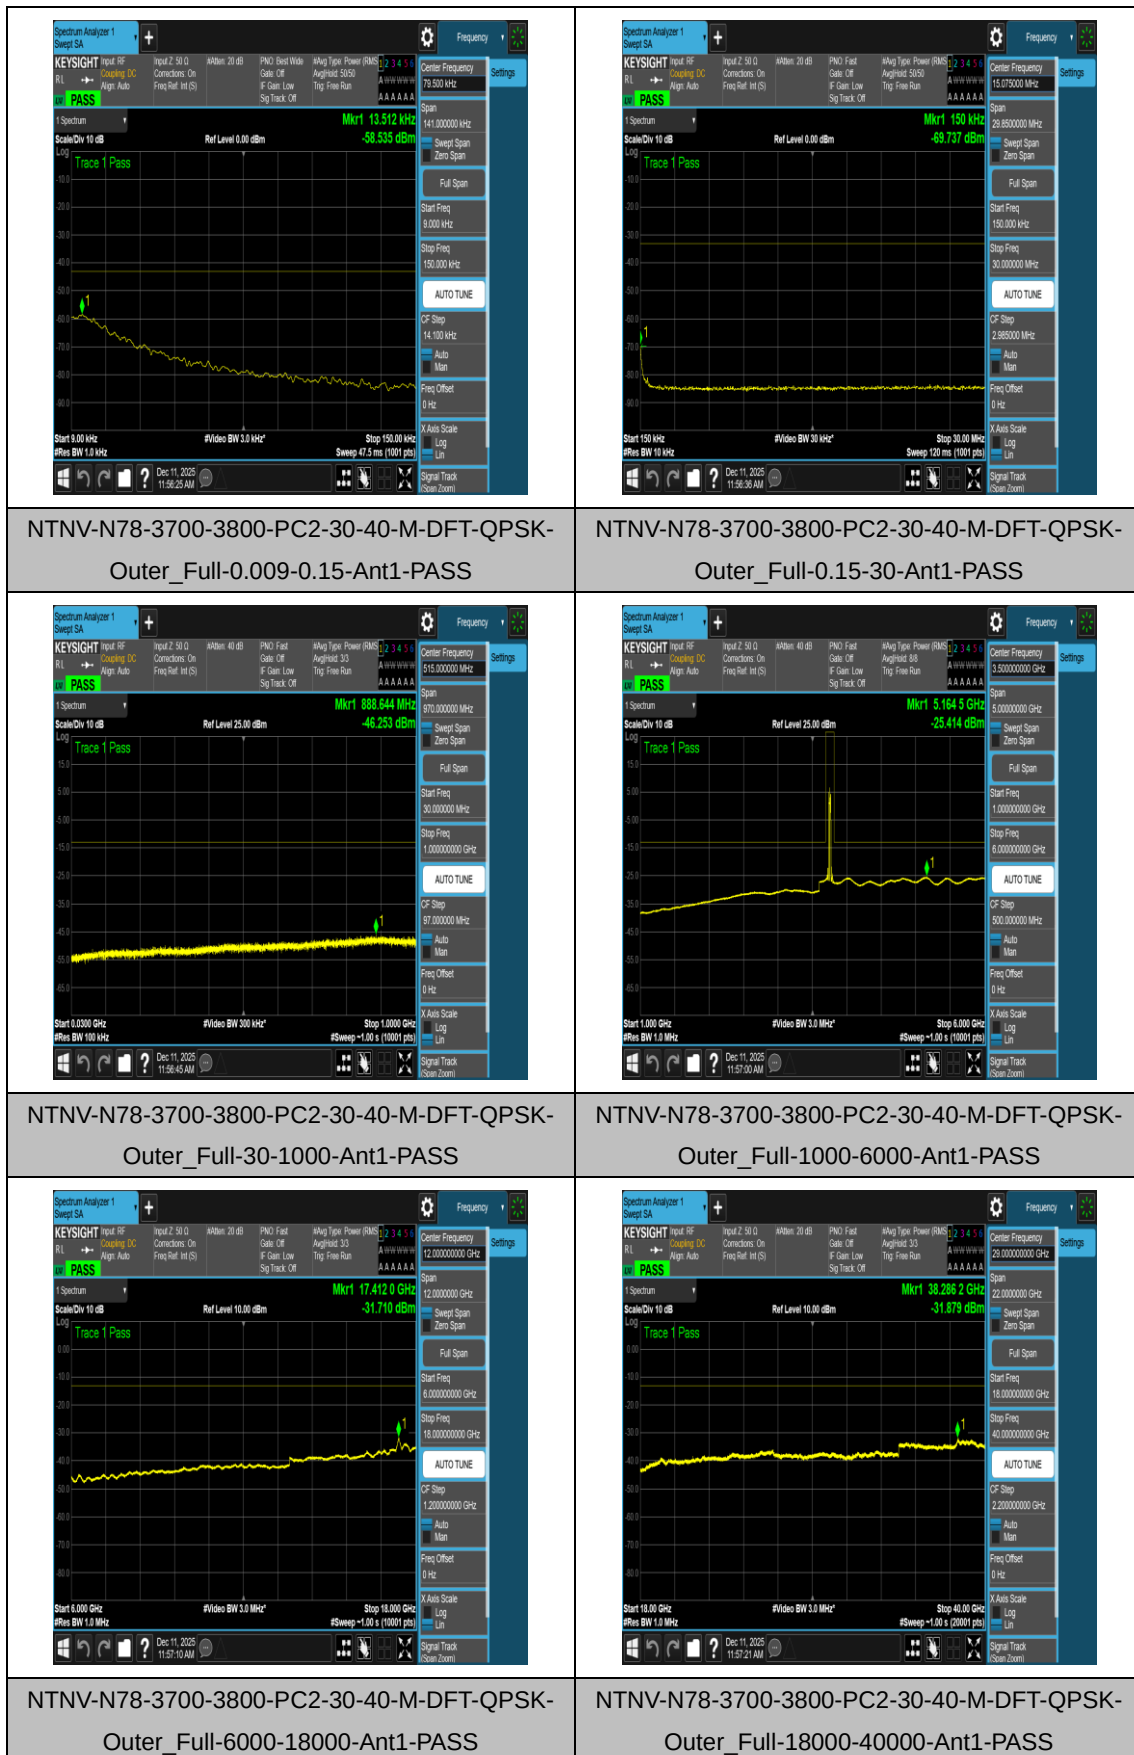


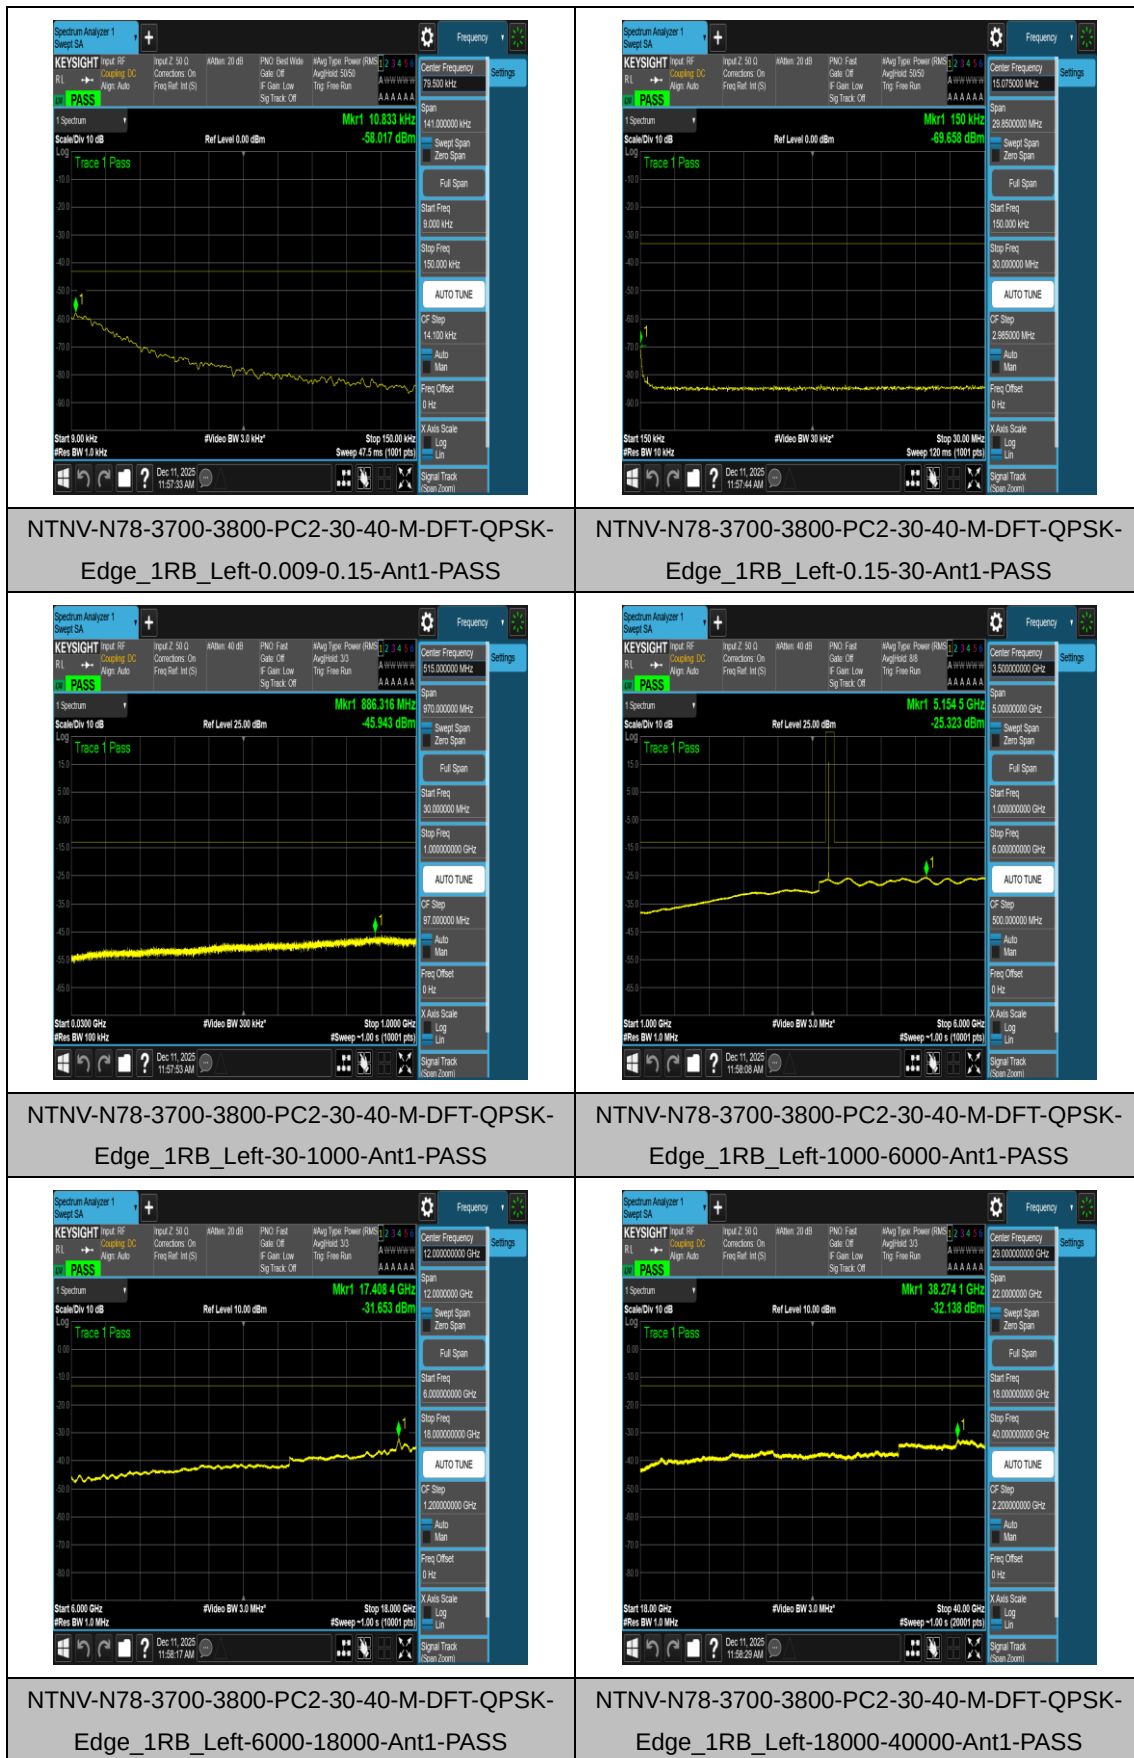

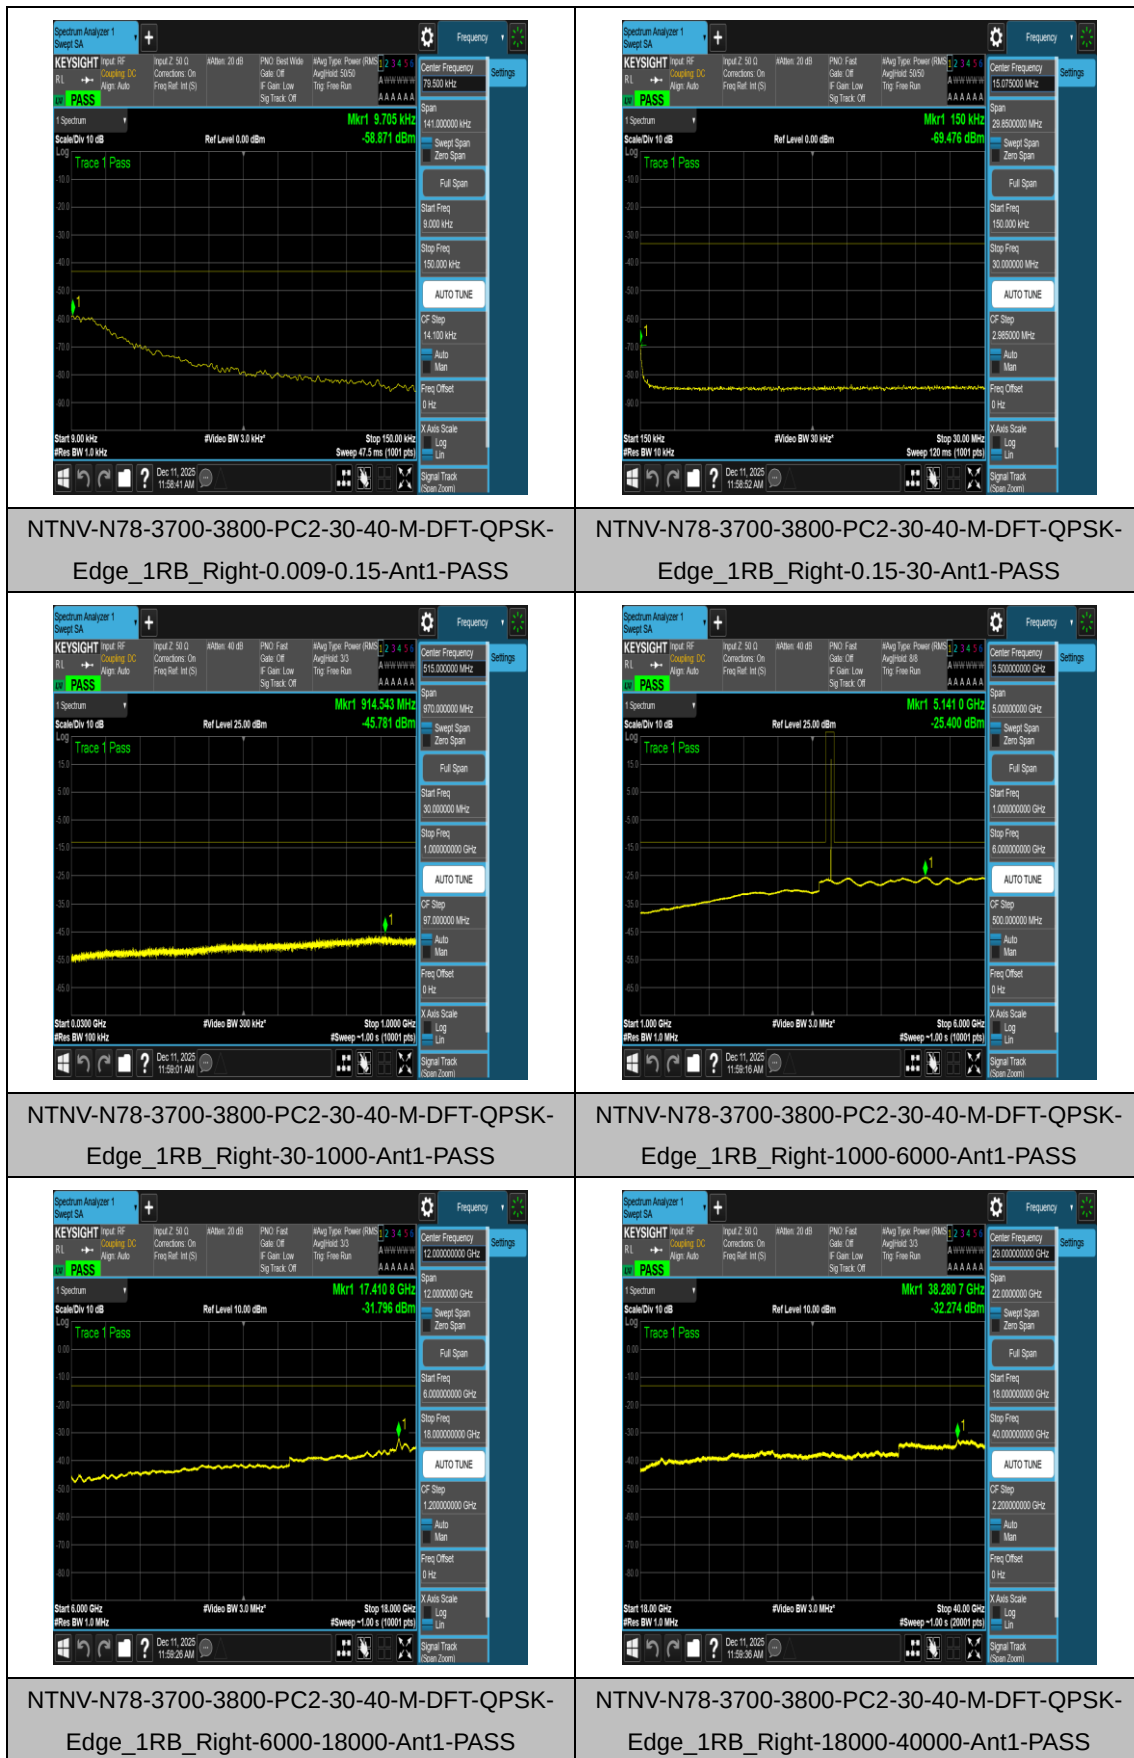

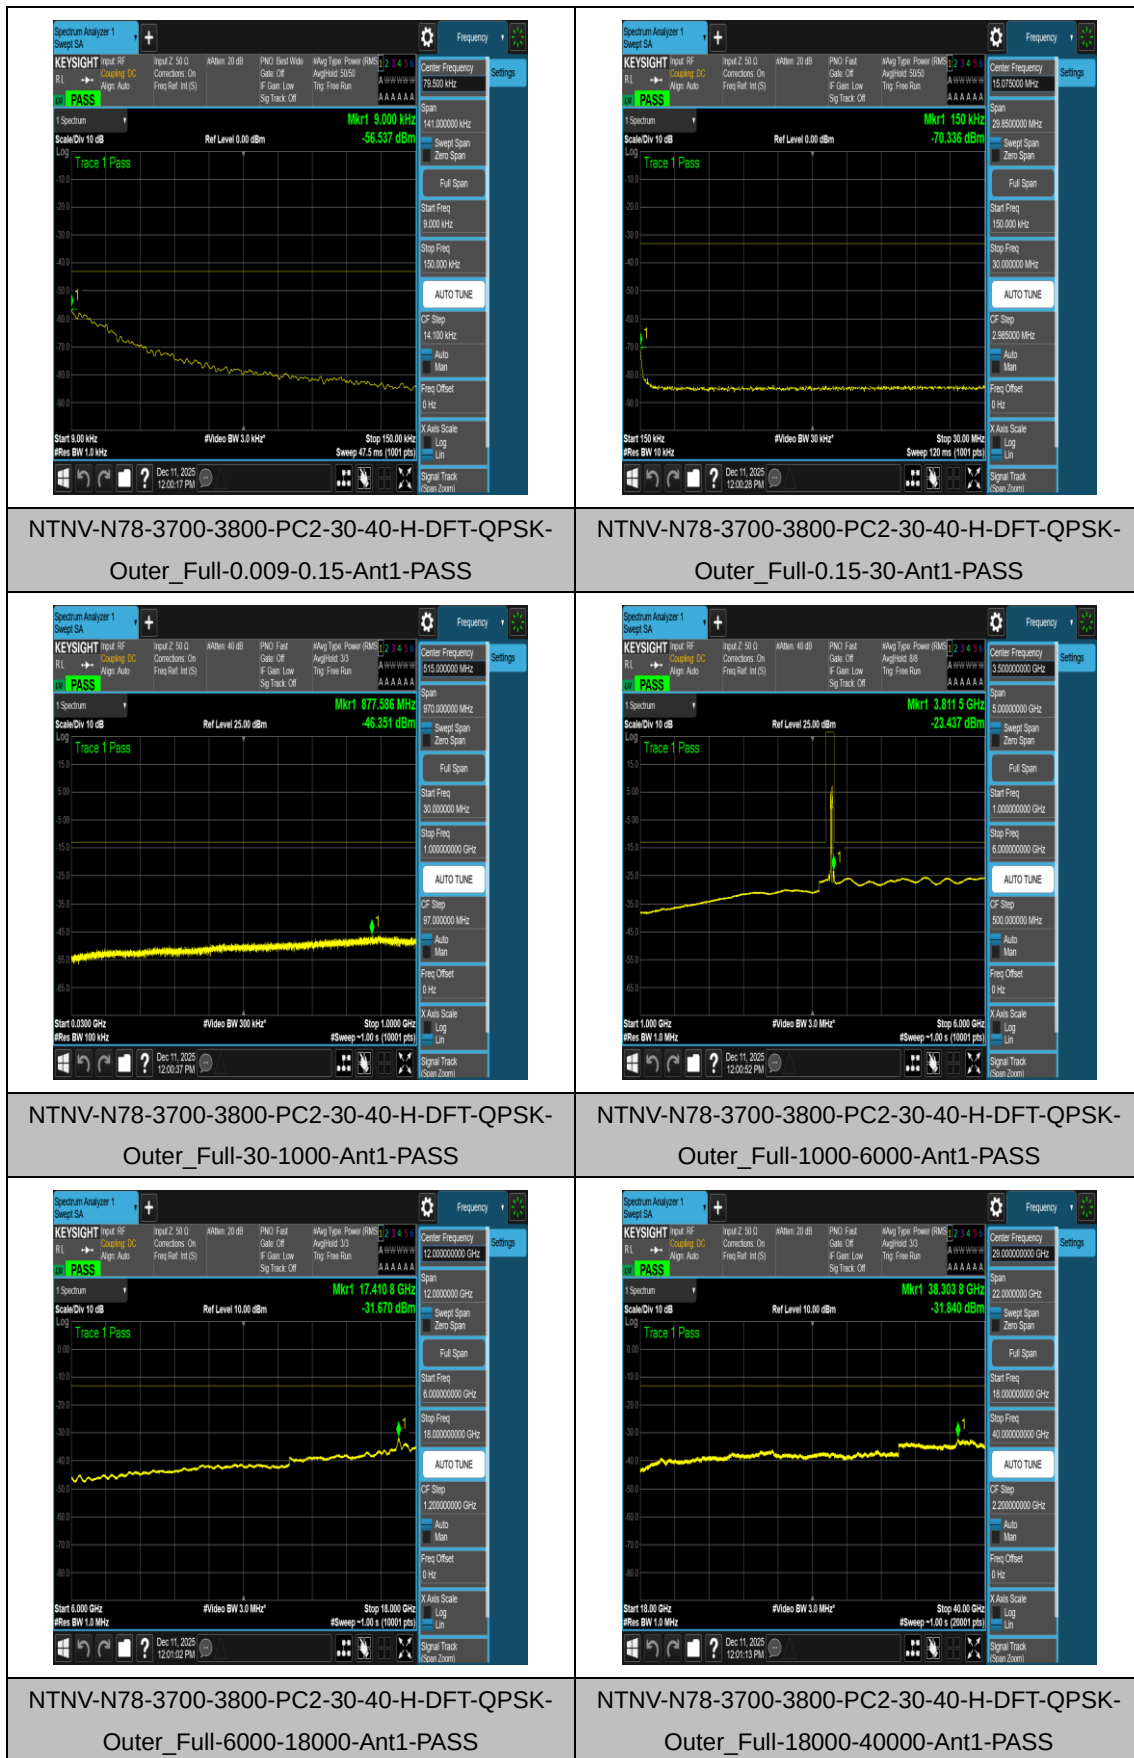

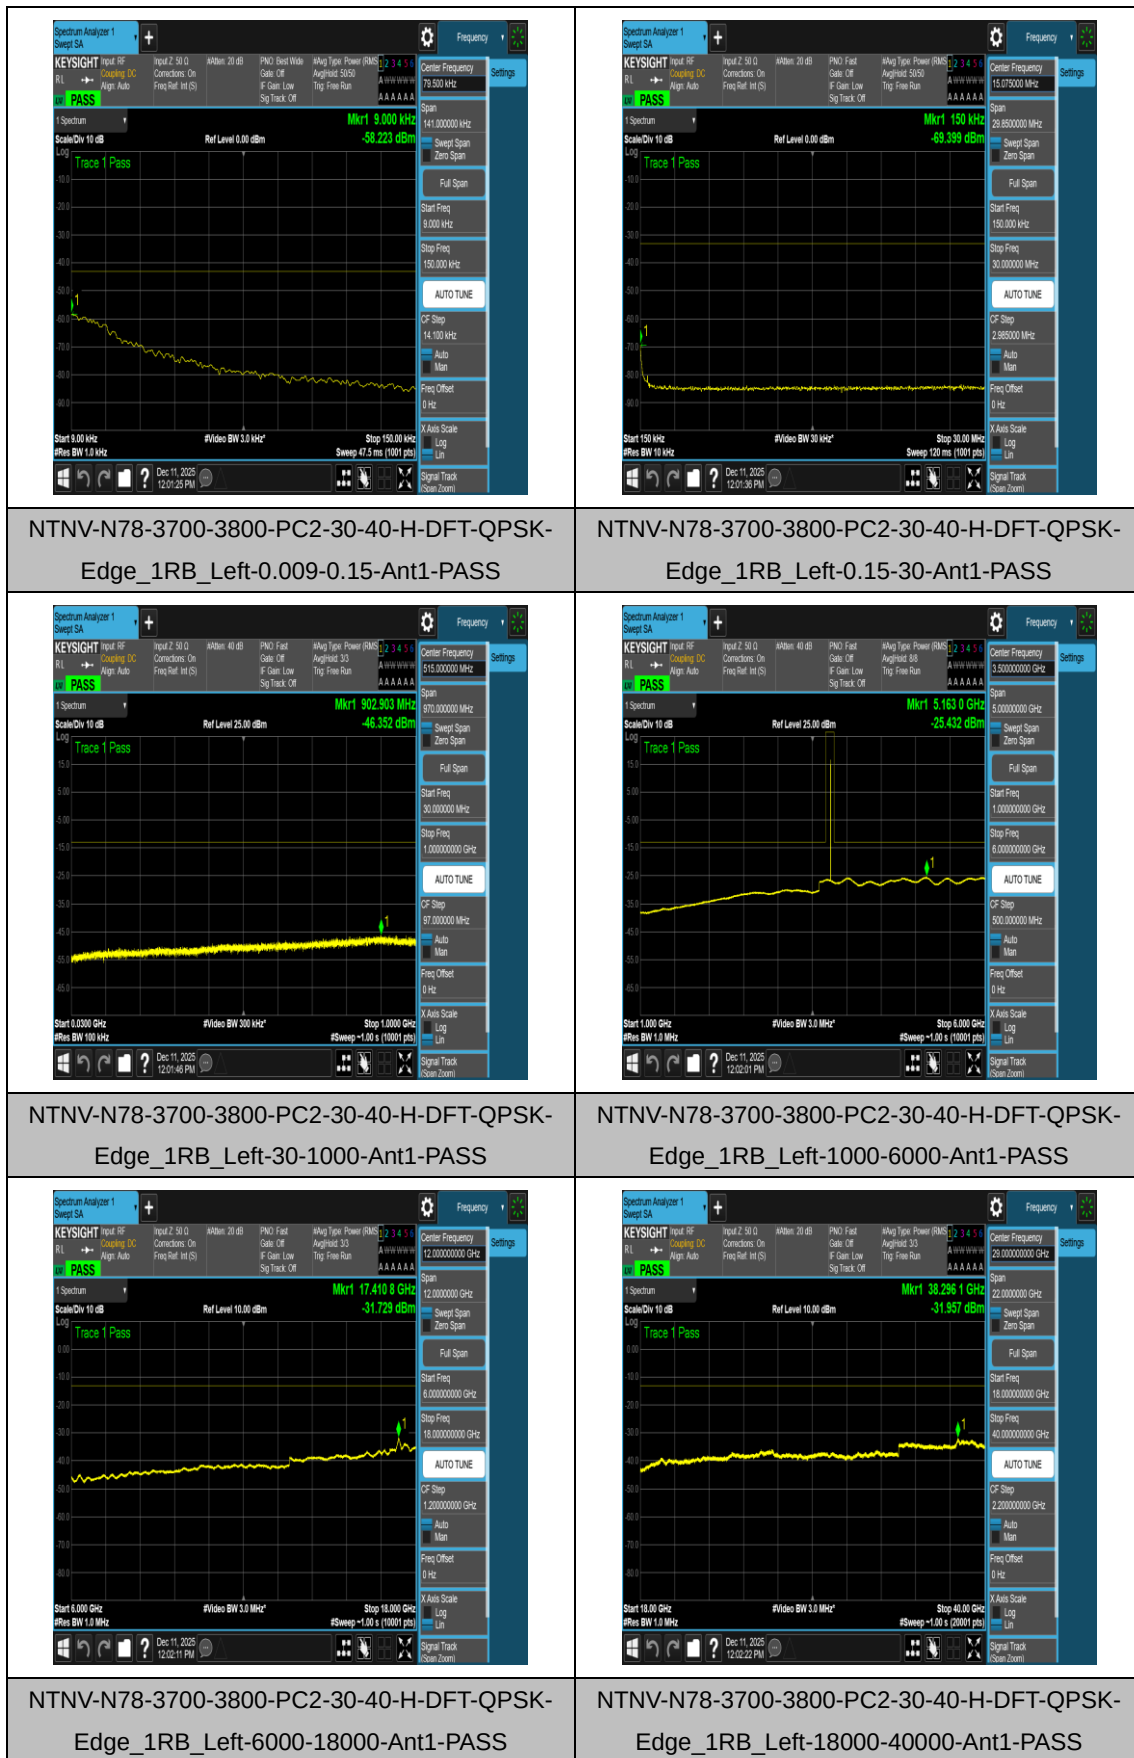

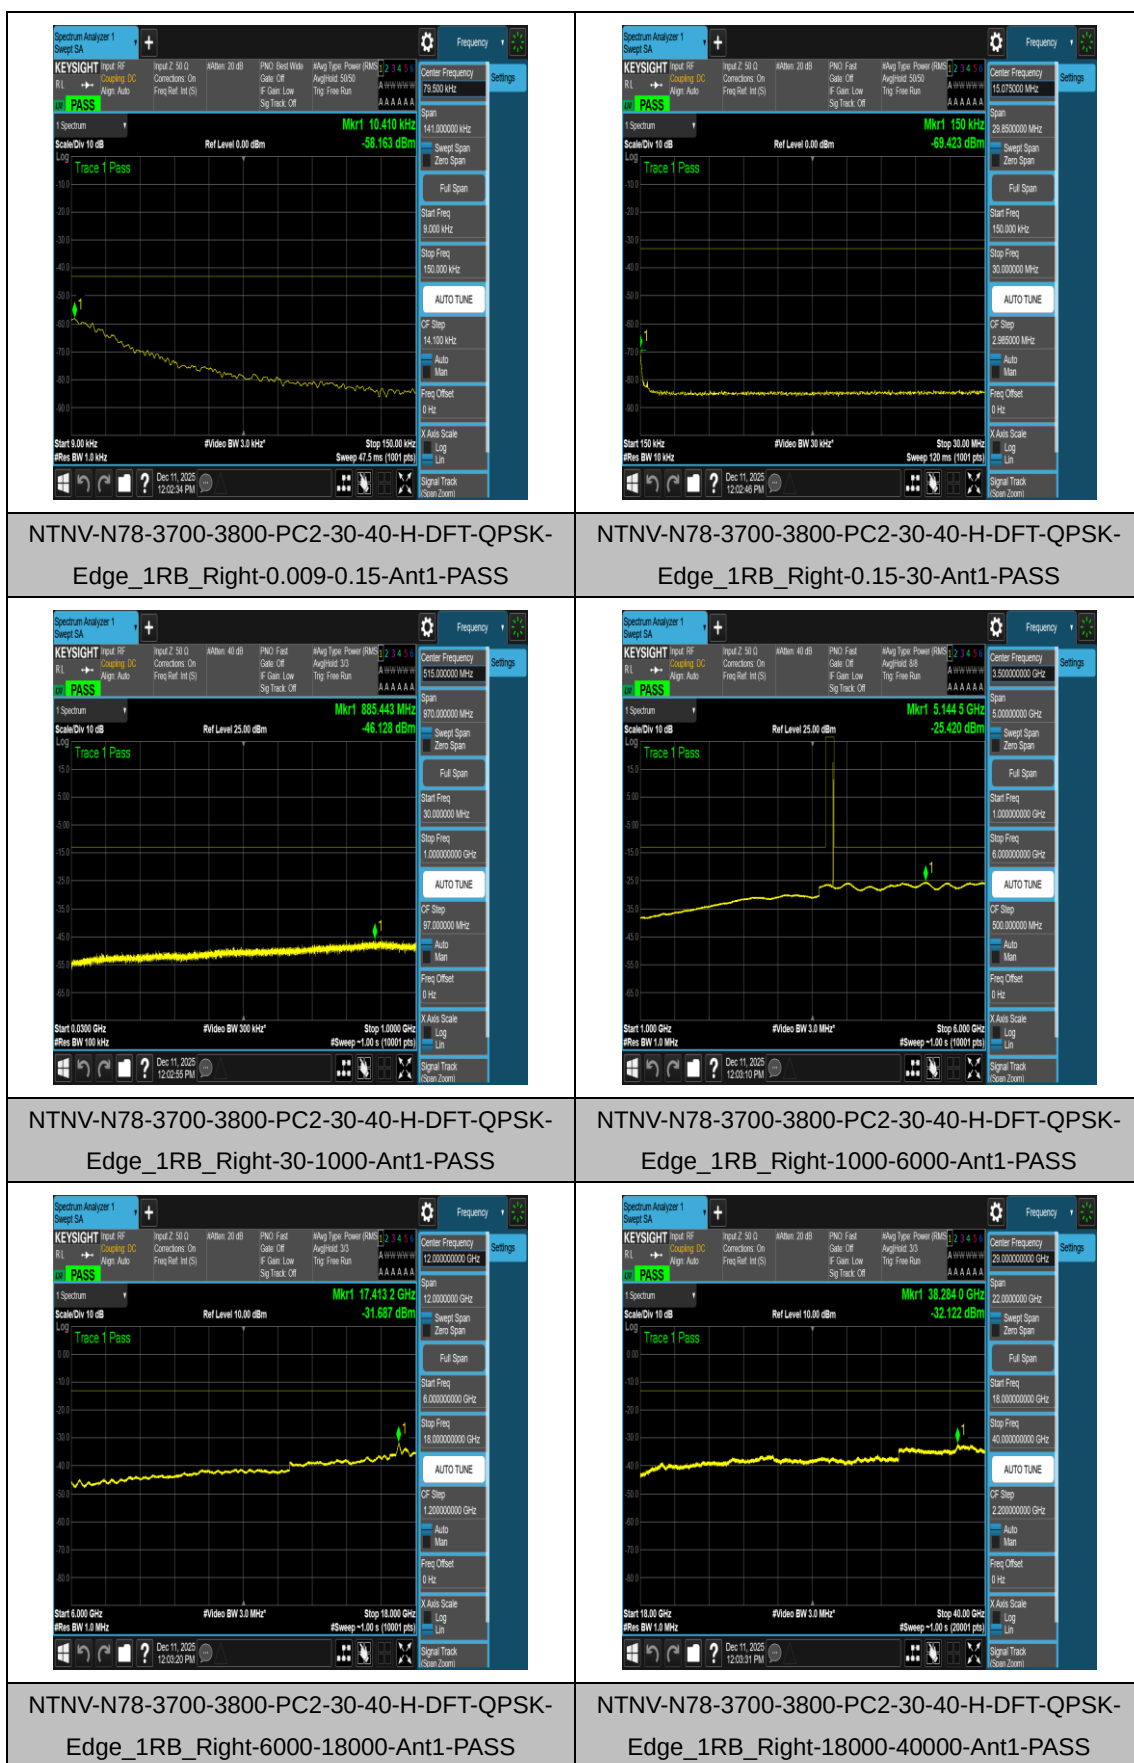

NTNV-N78-3700-3800-PC2-30-40-H-DFT-QPSK-
Edge_1RB_Right-0.009-0.15-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-40-H-DFT-QPSK-
Edge_1RB_Right-0.15-30-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-40-H-DFT-QPSK-
Edge_1RB_Right-30-1000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-40-H-DFT-QPSK-
Edge_1RB_Right-1000-6000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-40-H-DFT-QPSK-
Edge_1RB_Right-6000-18000-Ant1-PASS

NTNV-N78-3700-3800-PC2-30-40-H-DFT-QPSK-
Edge_1RB_Right-18000-40000-Ant1-PASS

