 
 



+H-N/A-N/A-DFT-QPSK-Edge_1RB_Right-0.009-0.15-PASS

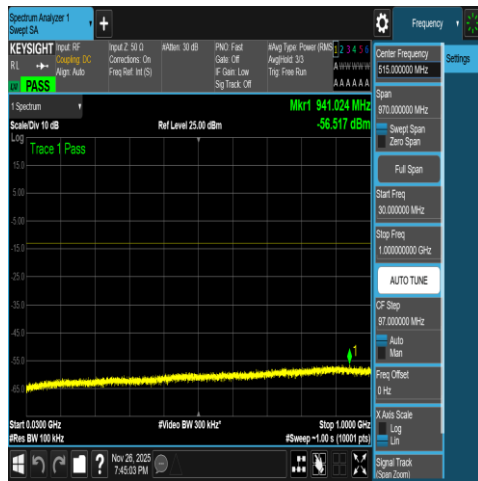


+H-N/A-N/A-DFT-QPSK-Edge_1RB_Right-0.15-30-PASS

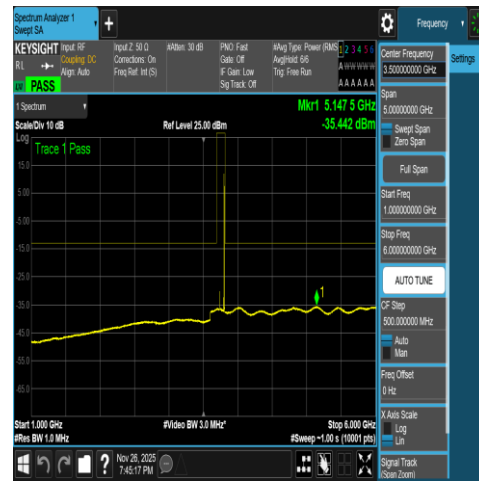

 NTNV-DC_66A_n78A-3700-3800-PC2-30-5+70-M
+H-N/A-N/A-DFT-QPSK-Edge_1RB_Right-30-100
0-PASS

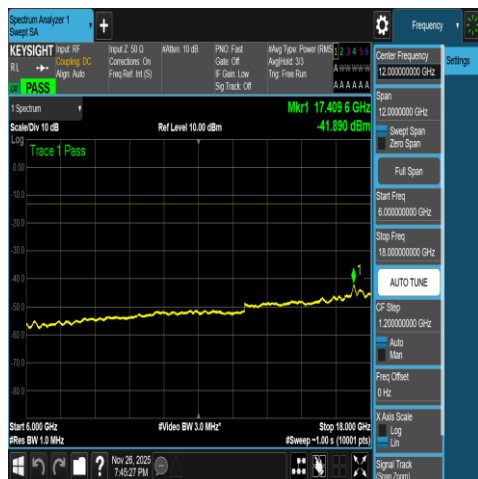

 NTNV-DC_66A_n78A-3700-3800-PC2-30-5+70-M
+H-N/A-N/A-DFT-QPSK-Edge_1RB_Right-1000-6
000-PASS

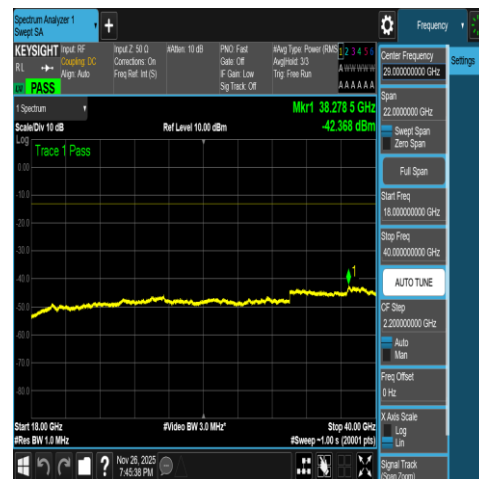


NTNV-DC_66A_n78A-3700-3800-PC2-30-5+70-M
+H-N/A-N/A-DFT-QPSK-Edge_1RB_Right-6000-1
8000-PASS




NTNV-DC_66A_n78A-3700-3800-PC2-30-5+70-M
+H-N/A-N/A-DFT-QPSK-Edge_1RB_Right-18000-
40000-PASS



 
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M
+L-N/A-N/A-DFT-QPSK-Outer_Full-0.009-0.15-PA
SS

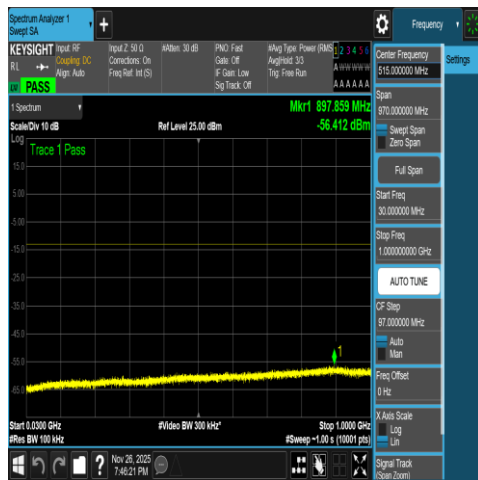

 
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M
+L-N/A-N/A-DFT-QPSK-Outer_Full-0.15-30-PASS

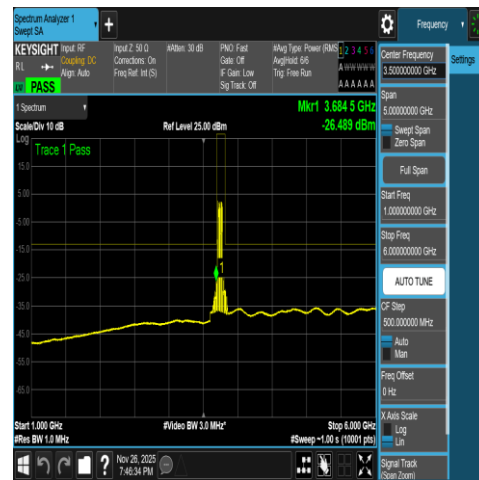

 NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M
+L-N/A-N/A-DFT-QPSK-Outer_Full-30-1000-PASS

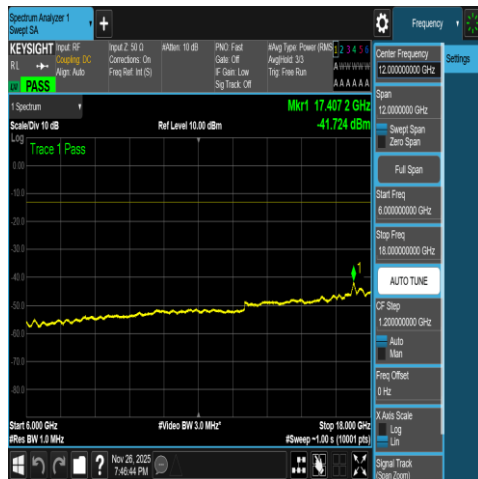



 
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M
+L-N/A-N/A-DFT-QPSK-Outer_Full-1000-6000-PA
SS

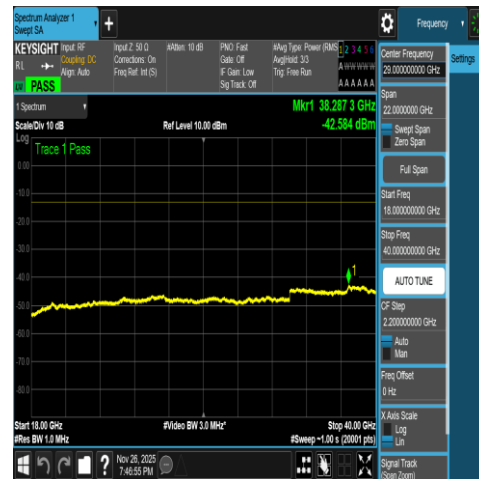





NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M
+L-N/A-N/A-DFT-QPSK-Outer_Full-6000-18000-P
ASS

   
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M
+L-N/A-N/A-DFT-QPSK-Outer_Full-18000-40000-
PASS

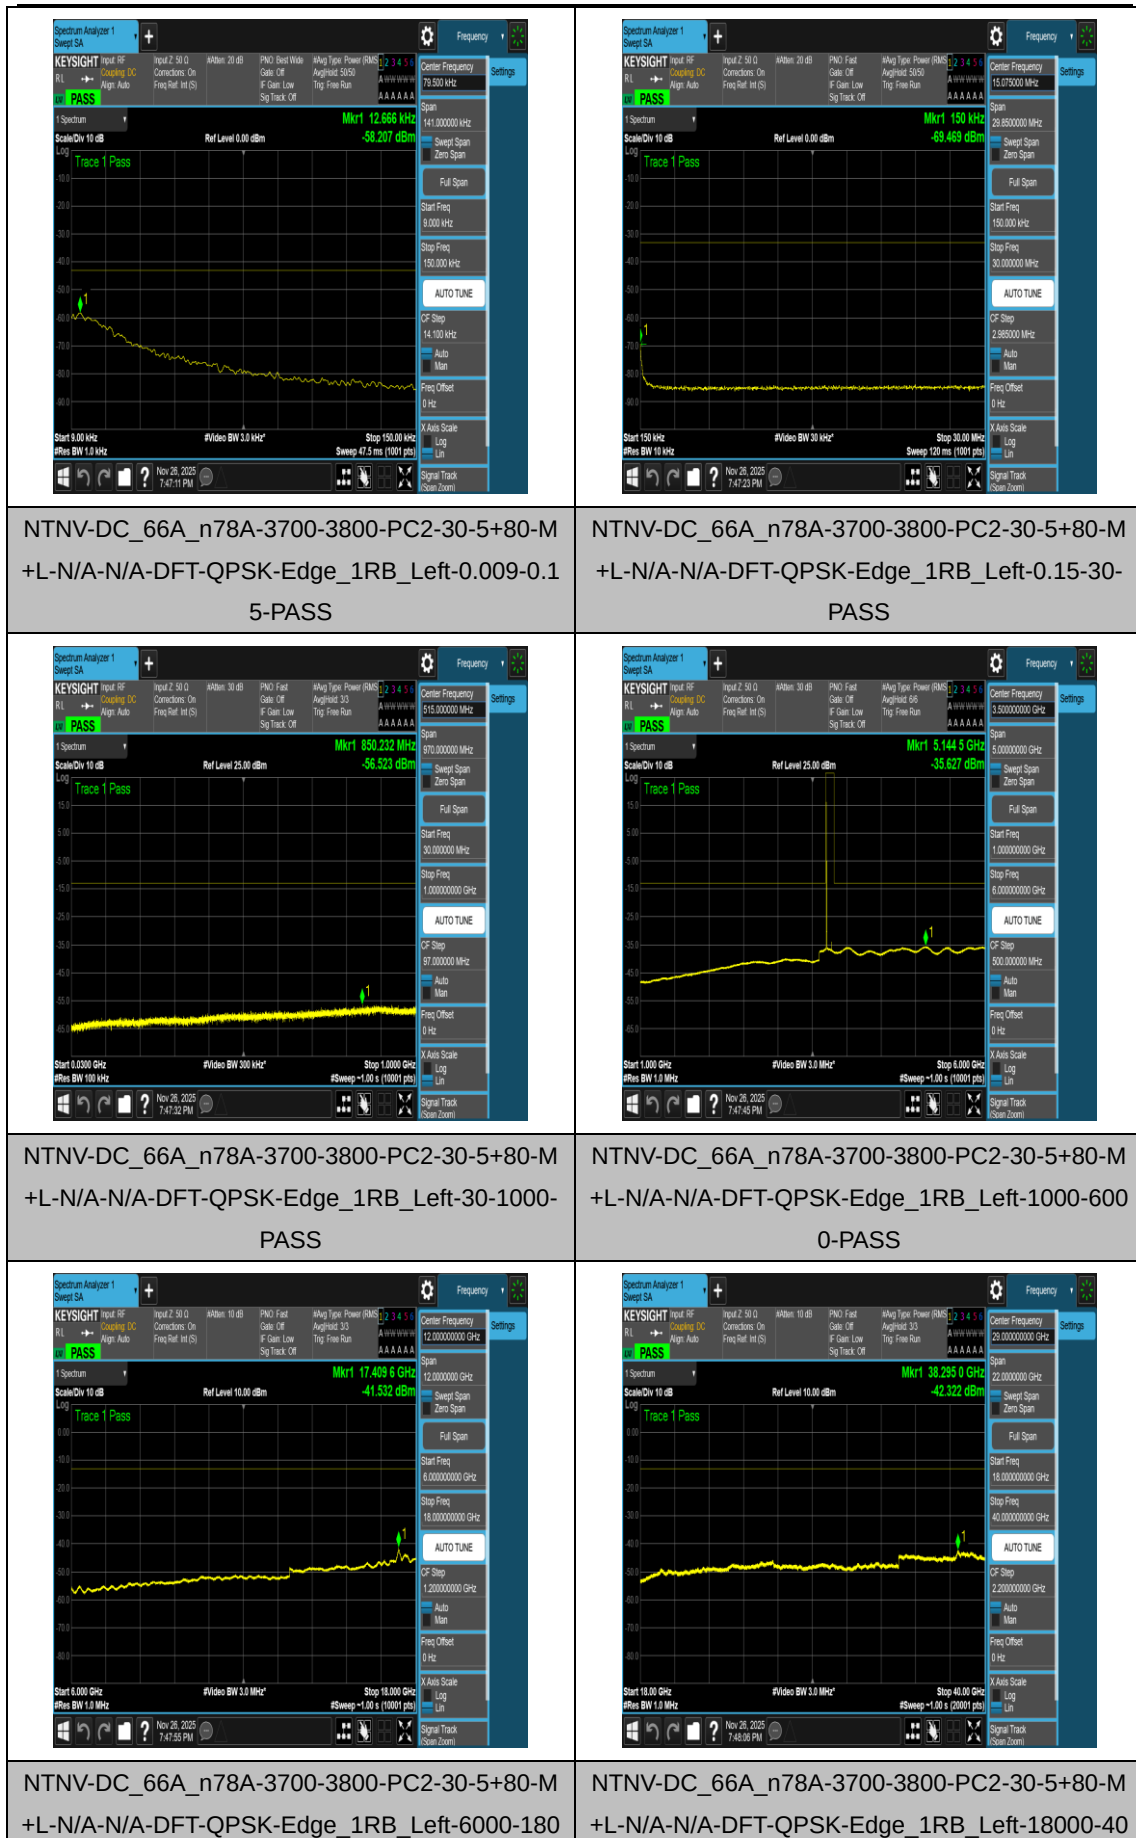


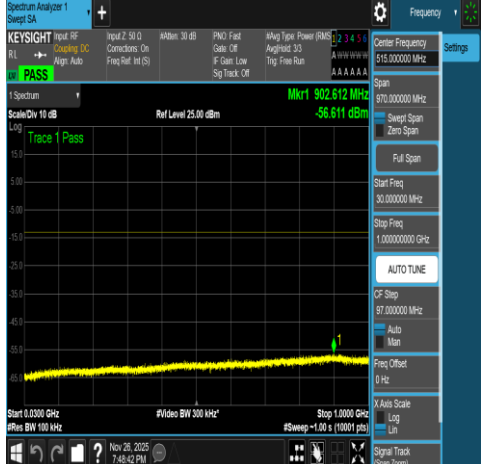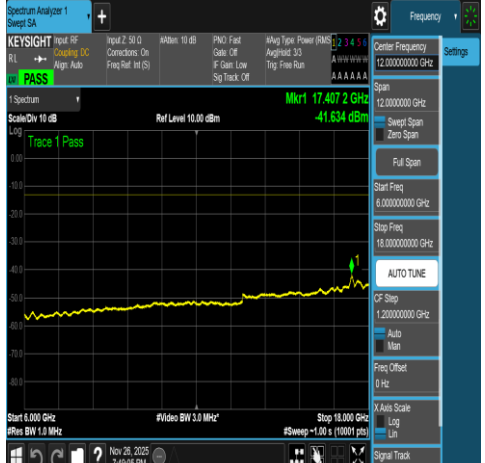
00-PASS 	000-PASS 
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +L-N/A-N/A-DFT-QPSK-Edge_1RB_Right-0.009-0 .15-PASS	NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +L-N/A-N/A-DFT-QPSK-Edge_1RB_Right-0.15-30 -PASS
	
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +L-N/A-N/A-DFT-QPSK-Edge_1RB_Right-30-100 0-PASS	NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +L-N/A-N/A-DFT-QPSK-Edge_1RB_Right-1000-6 000-PASS
	
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M	NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M




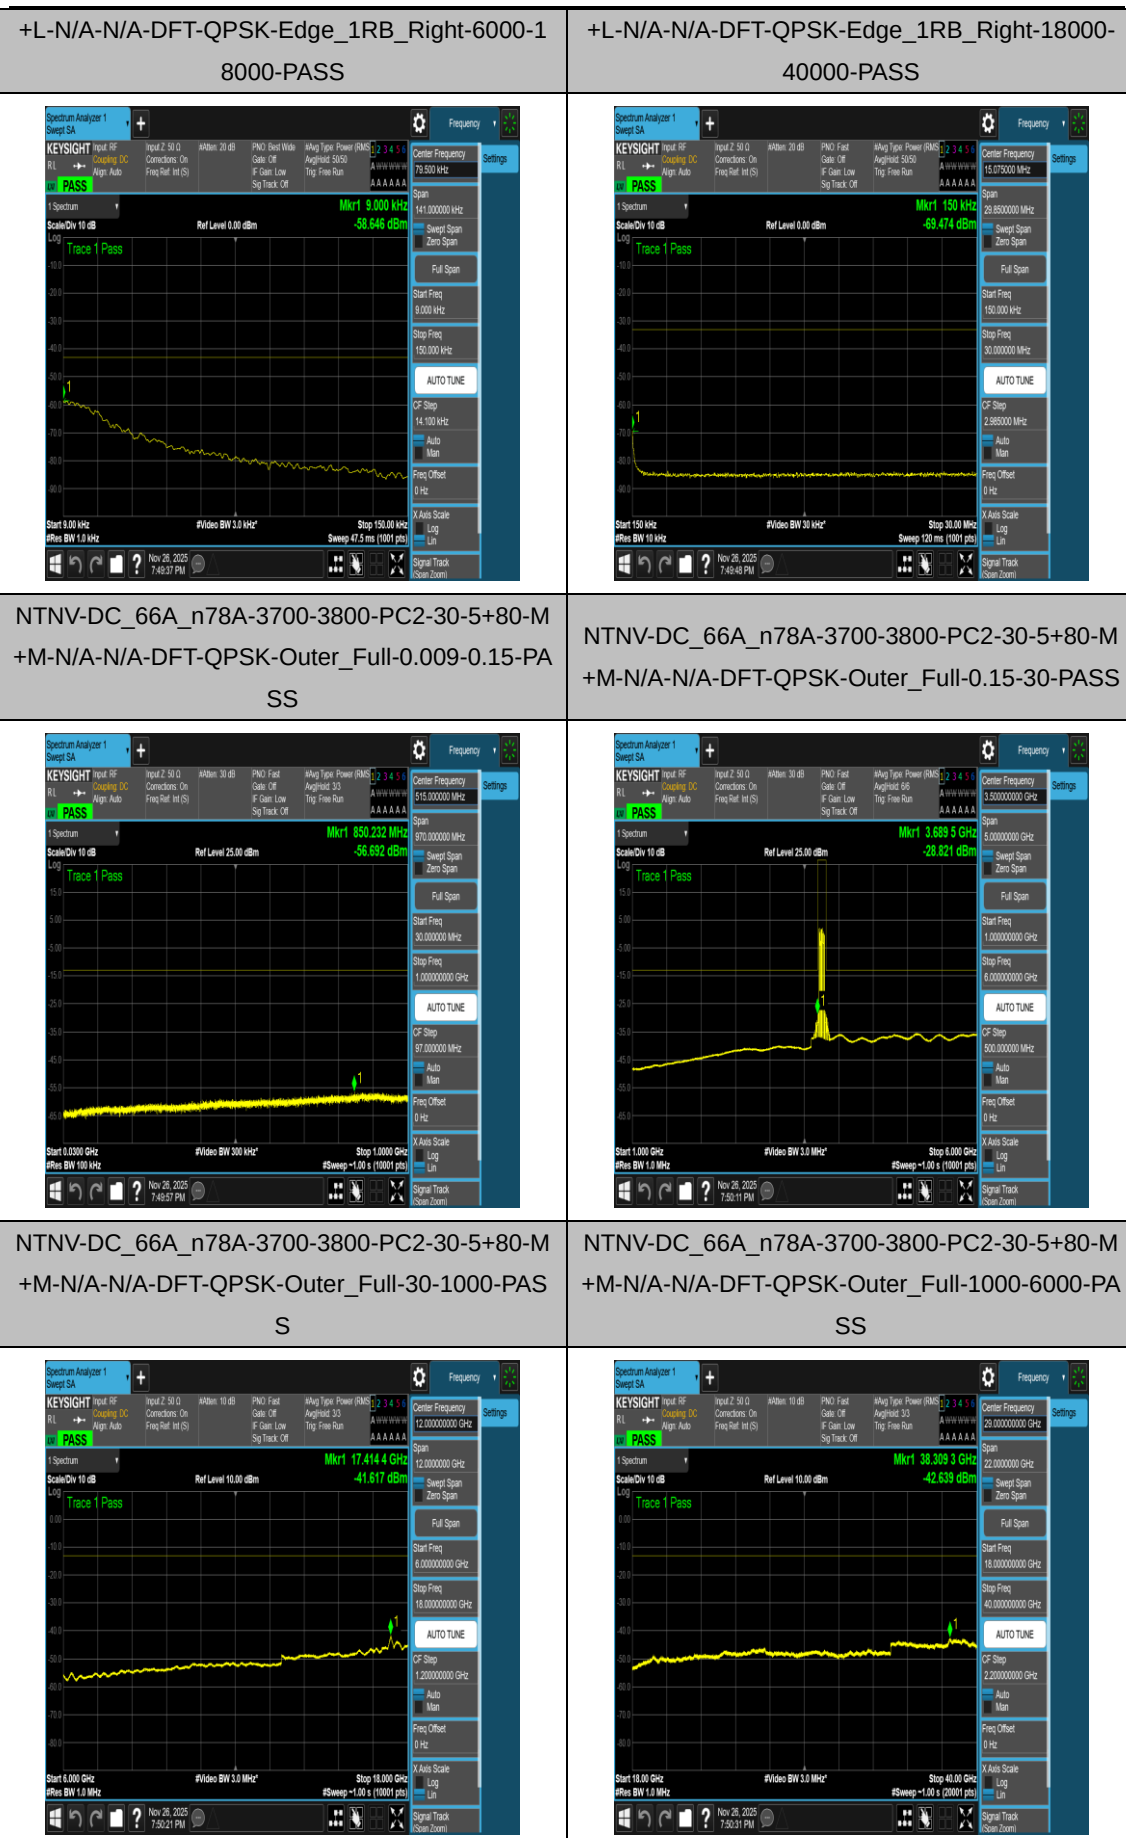 


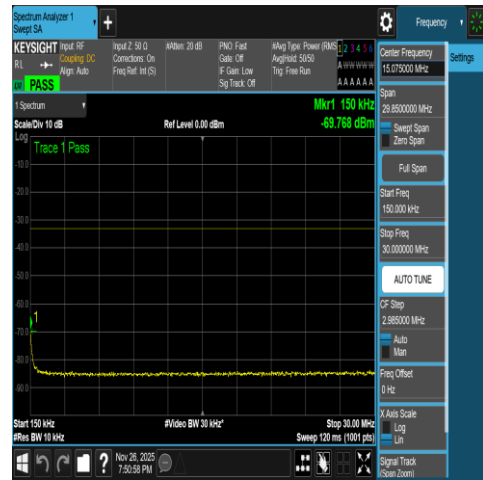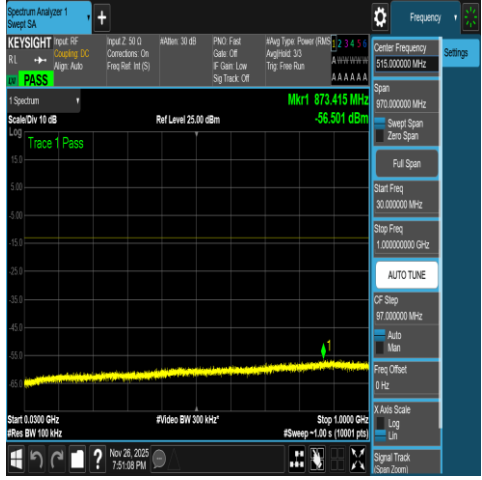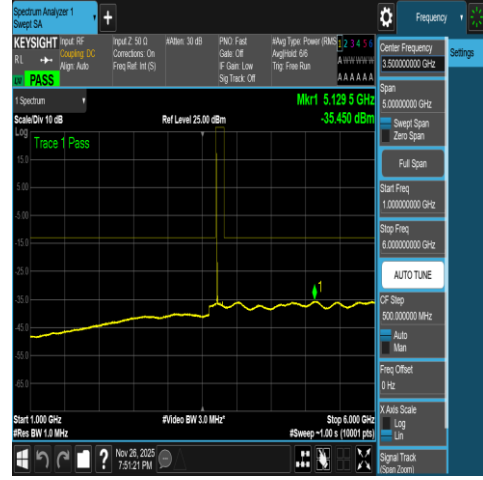   
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +M-N/A-N/A-DFT-QPSK-Outer_Full-6000-18000-P ASS	NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +M-N/A-N/A-DFT-QPSK-Outer_Full-18000-40000- PASS
	
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +M-N/A-N/A-DFT-QPSK-Edge_1RB_Left-0.009-0. 15-PASS	NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +M-N/A-N/A-DFT-QPSK-Edge_1RB_Left-0.15-30- PASS
	
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +M-N/A-N/A-DFT-QPSK-Edge_1RB_Left-30-1000 -PASS	NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +M-N/A-N/A-DFT-QPSK-Edge_1RB_Left-1000-60 00-PASS






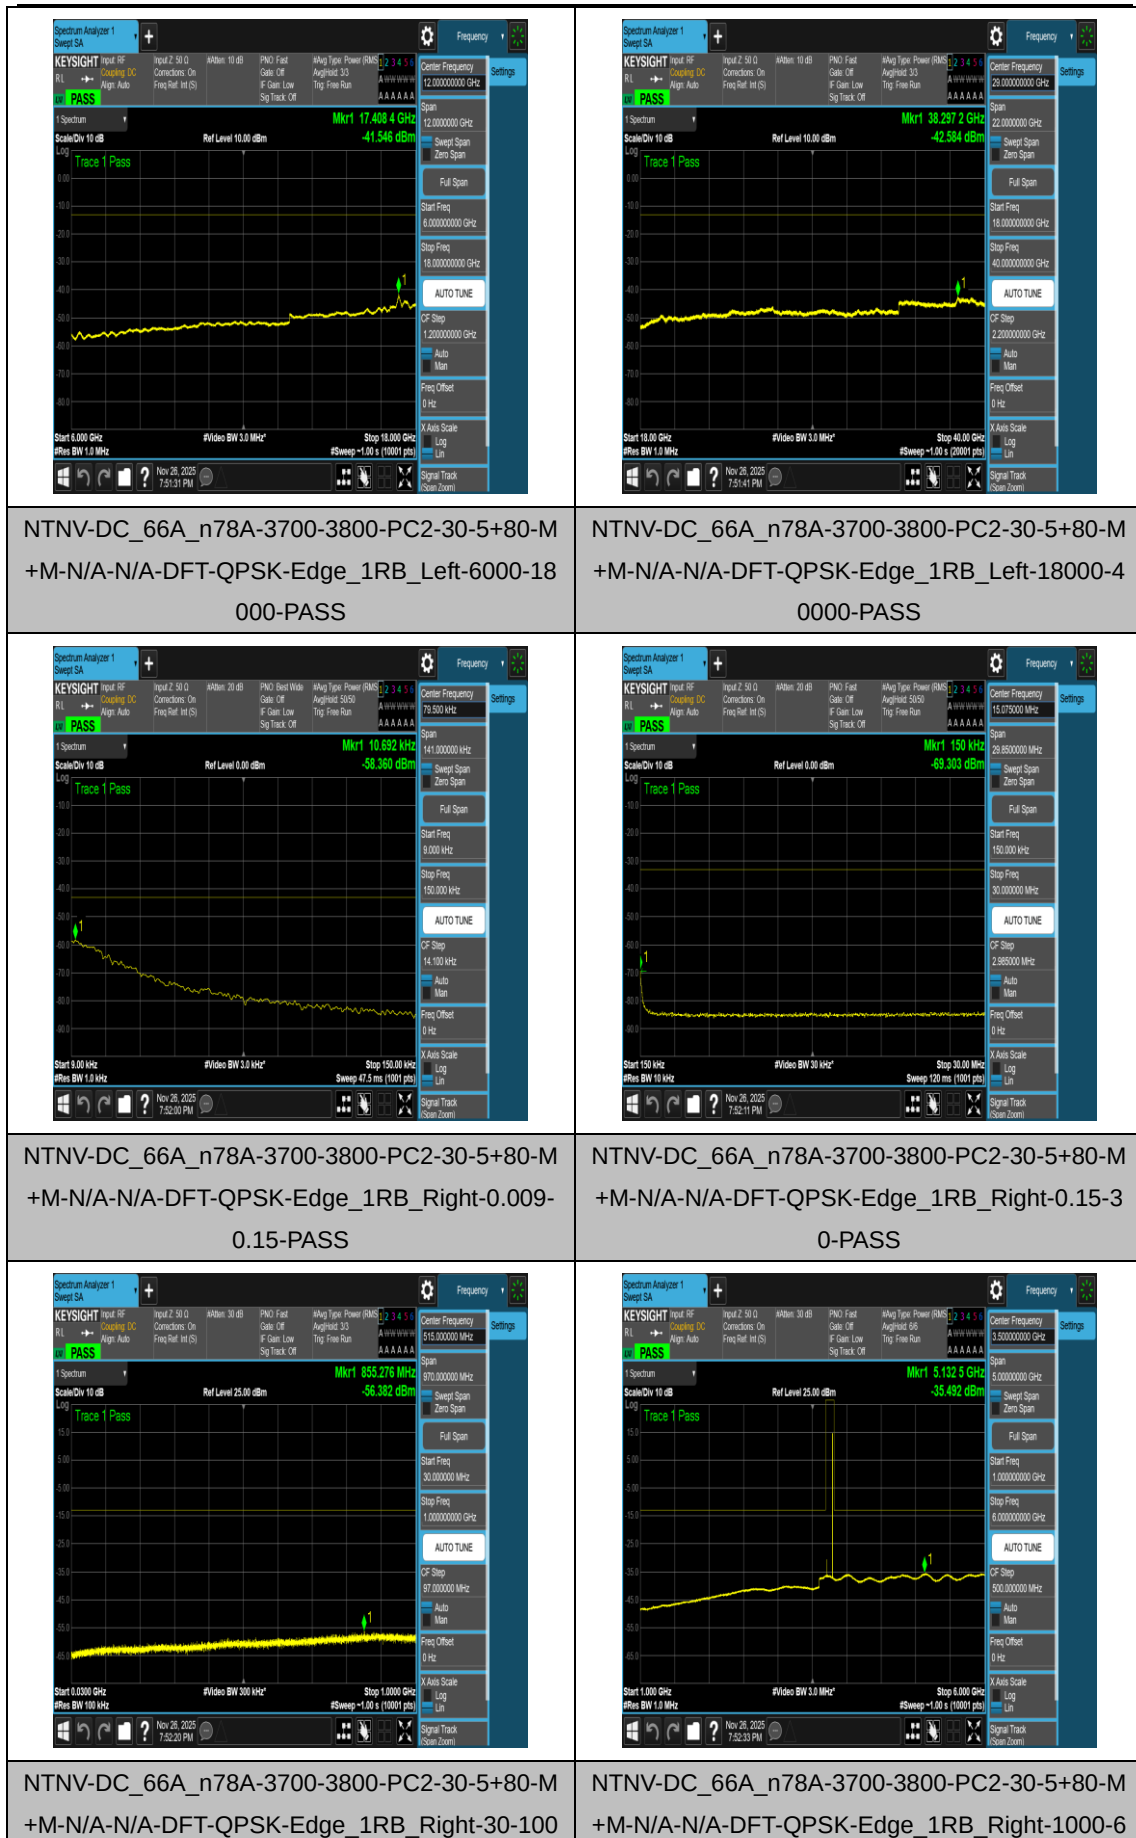 


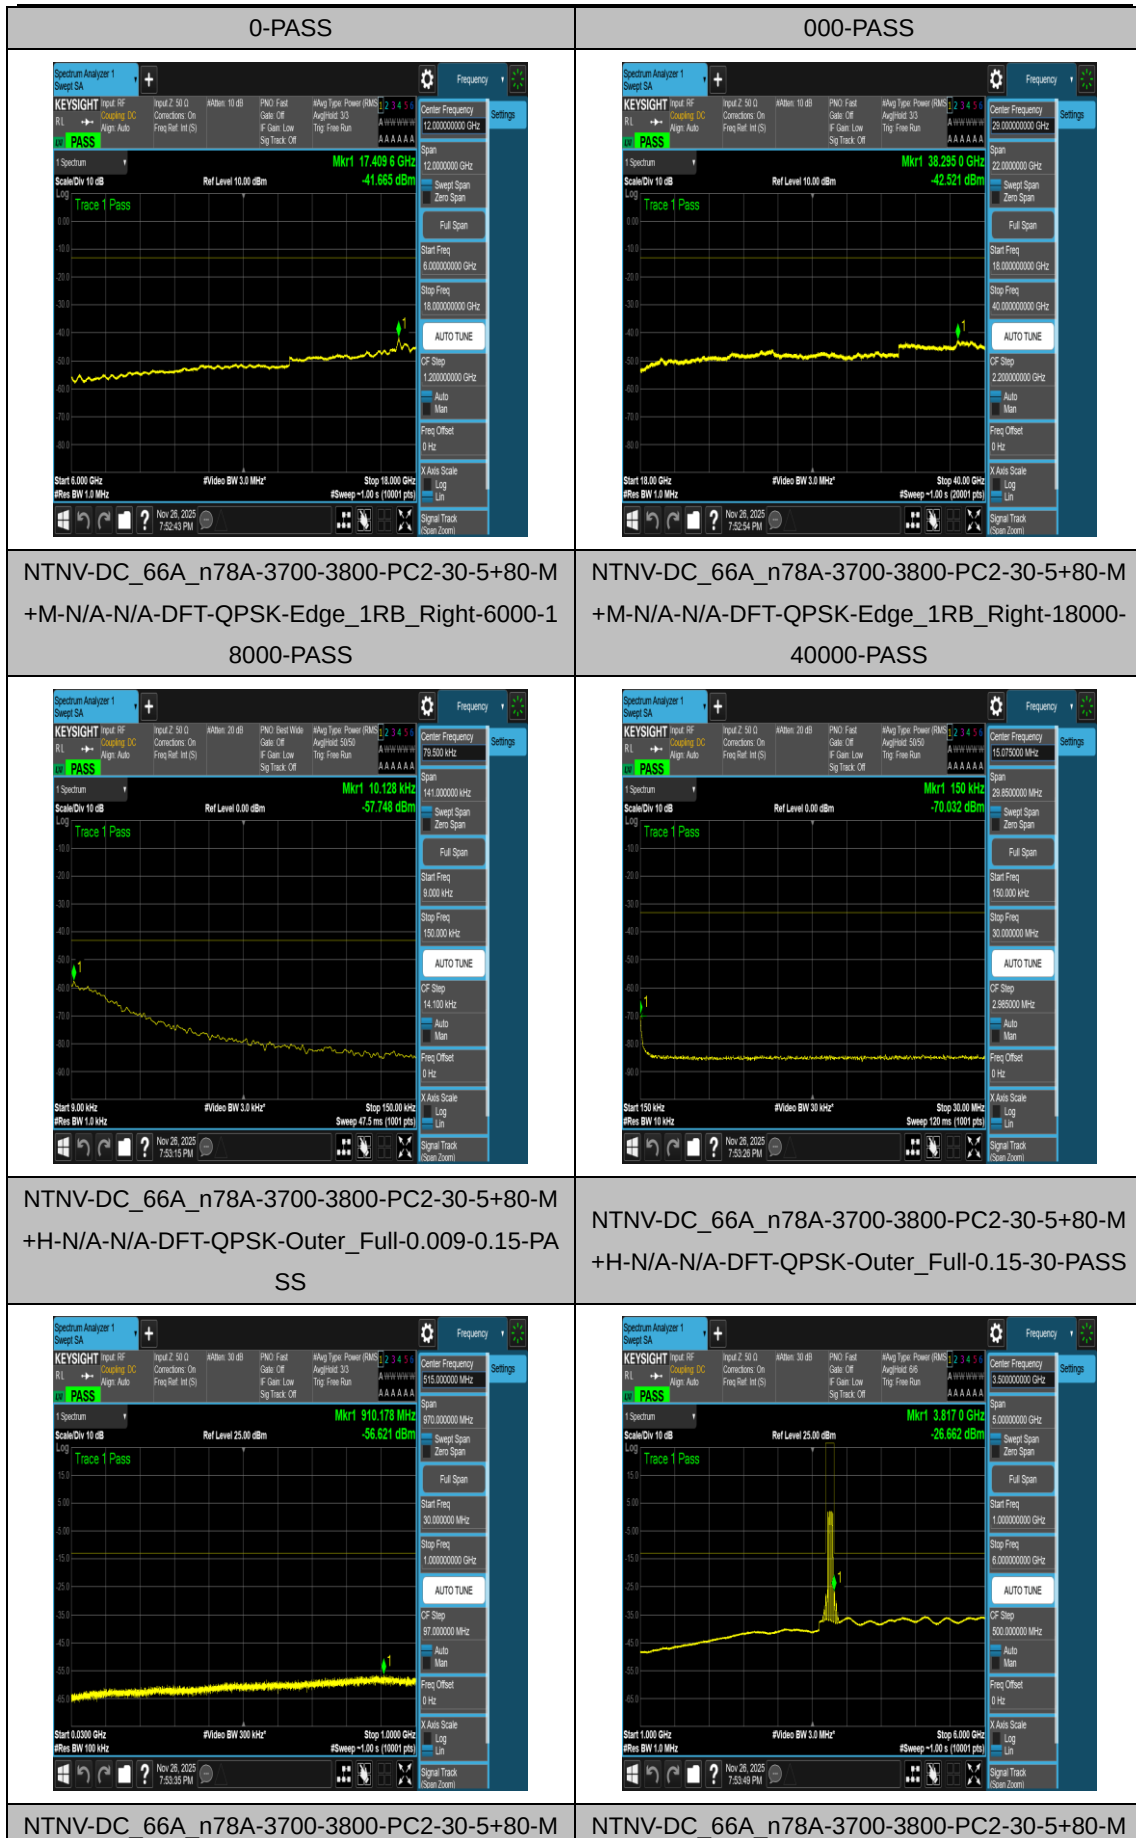 


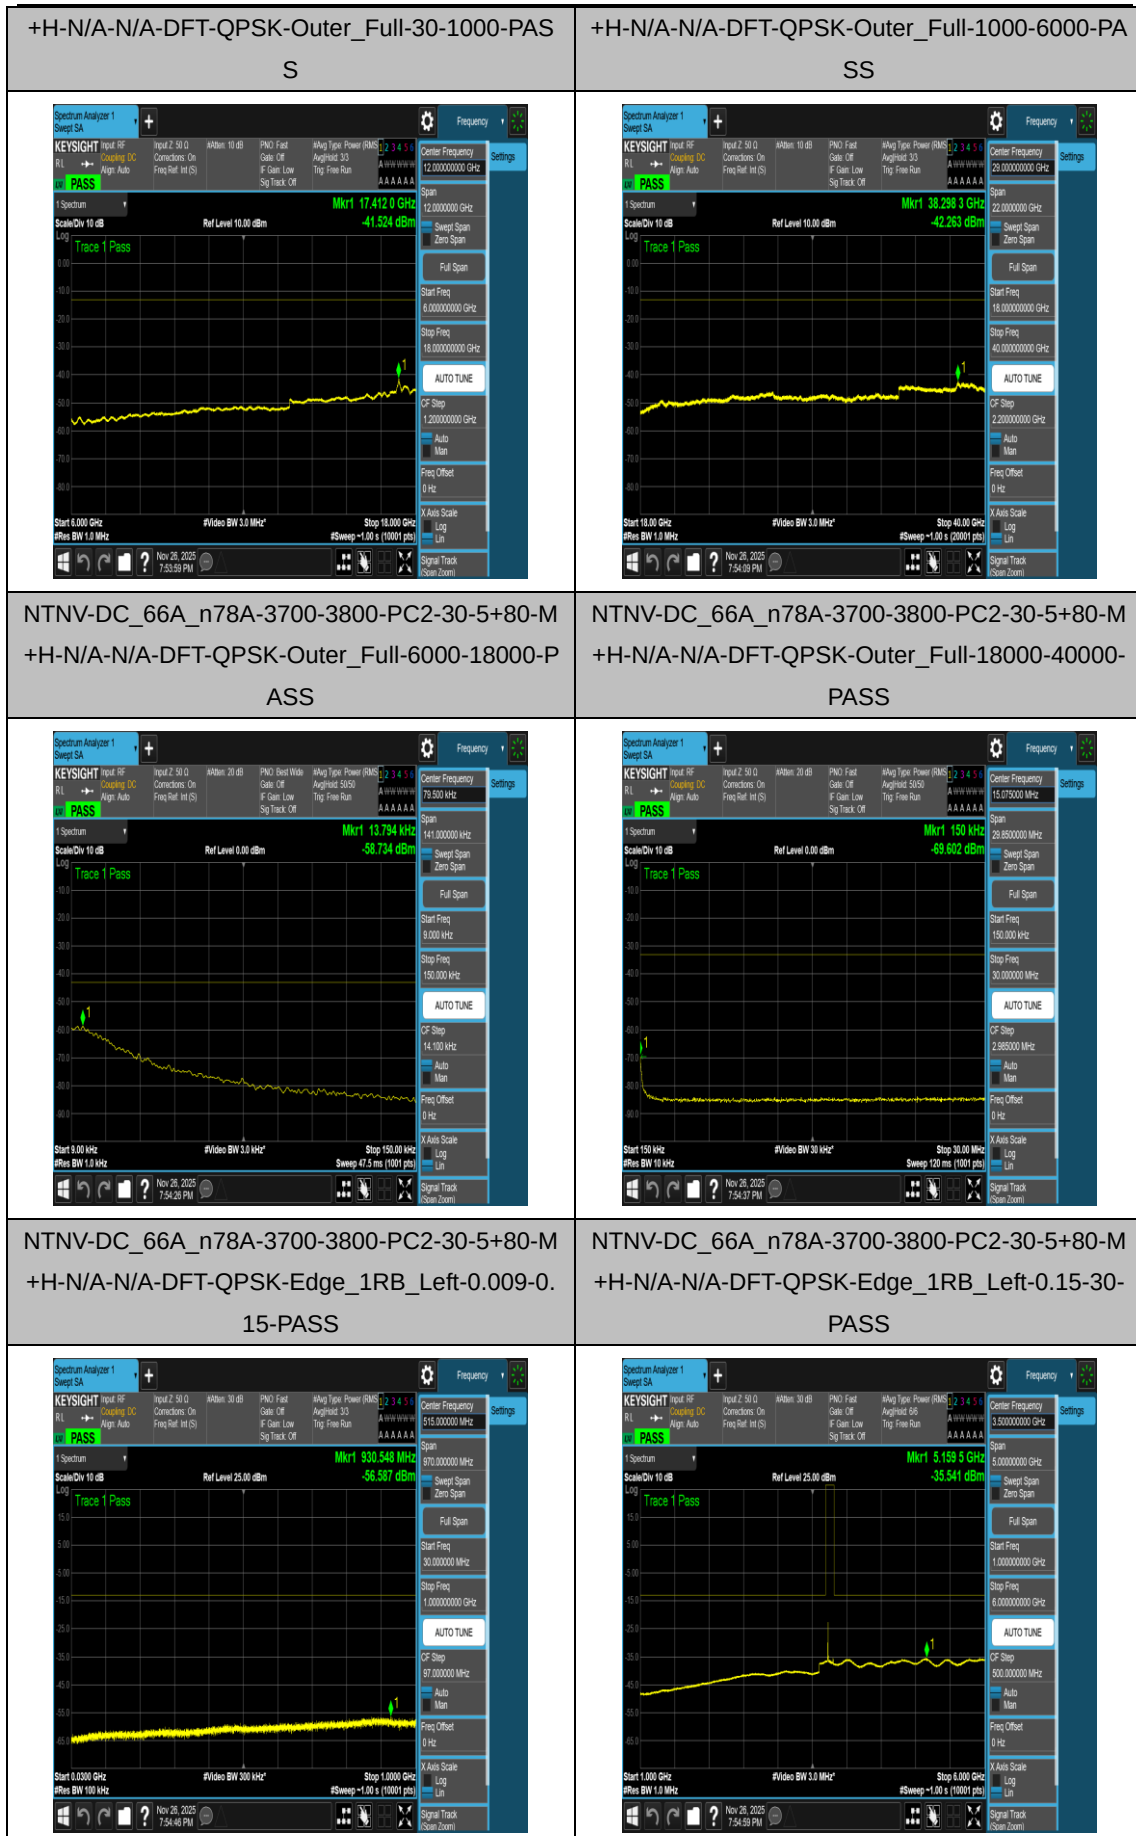 

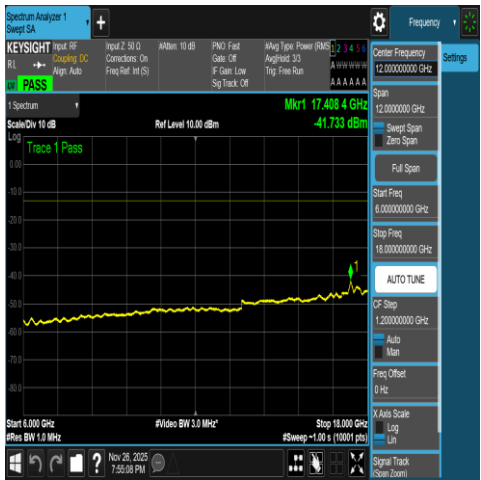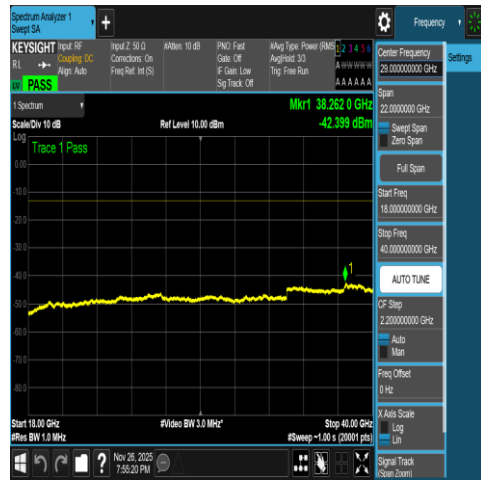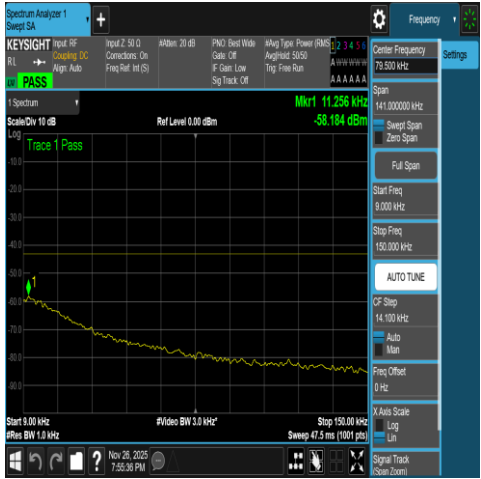   
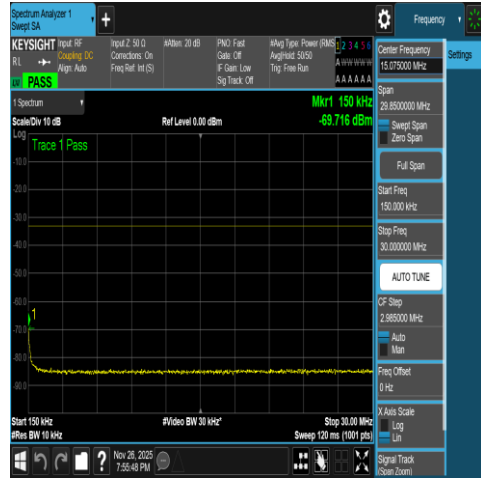 
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +H-N/A-N/A-DFT-QPSK-Edge_1RB_Left-30-1000- PASS	NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +H-N/A-N/A-DFT-QPSK-Edge_1RB_Left-1000-60 00-PASS
	
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +H-N/A-N/A-DFT-QPSK-Edge_1RB_Left-6000-18 000-PASS	NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +H-N/A-N/A-DFT-QPSK-Edge_1RB_Left-18000-4 0000-PASS
	
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +H-N/A-N/A-DFT-QPSK-Edge_1RB_Right-0.009-0 .15-PASS	NTNV-DC_66A_n78A-3700-3800-PC2-30-5+80-M +H-N/A-N/A-DFT-QPSK-Edge_1RB_Right-0.15-30 -PASS

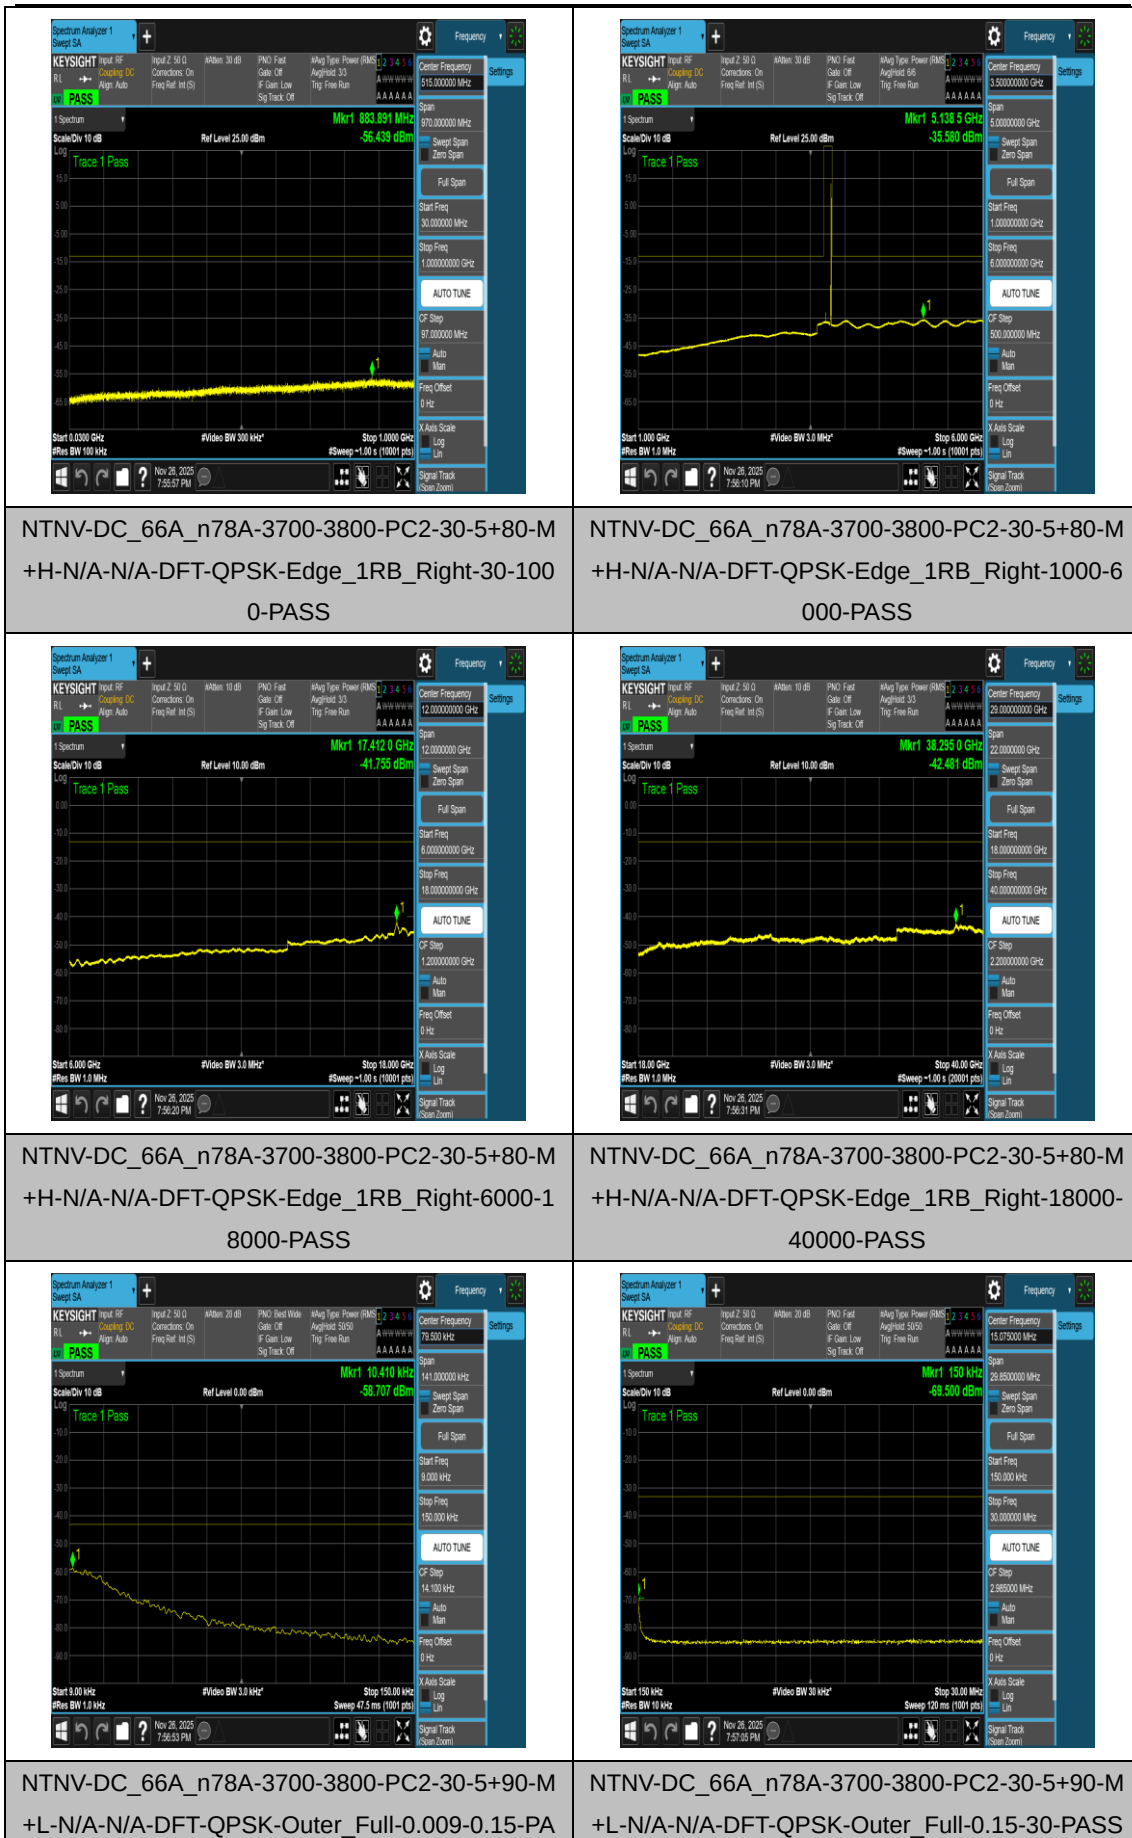 

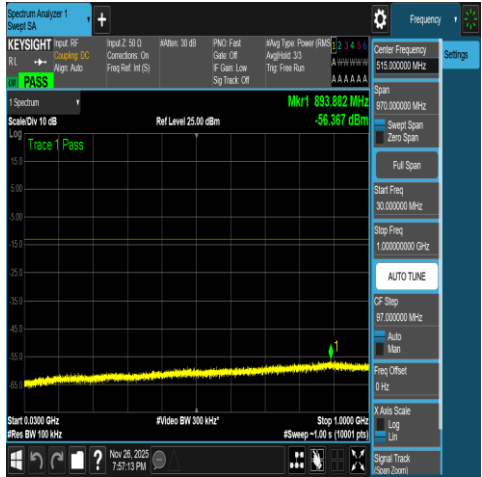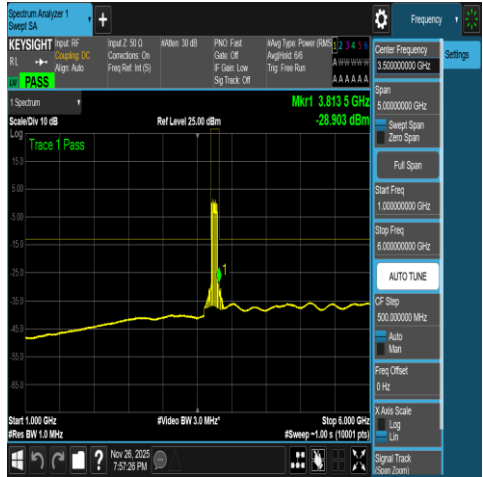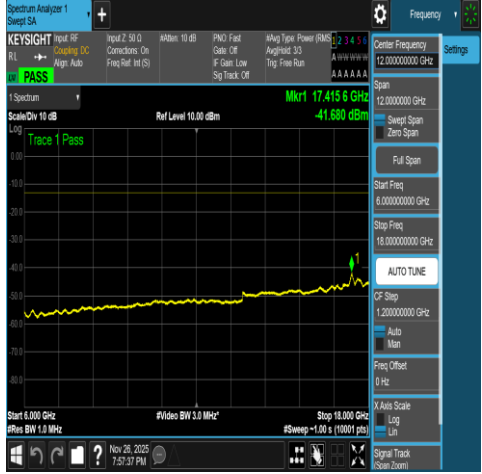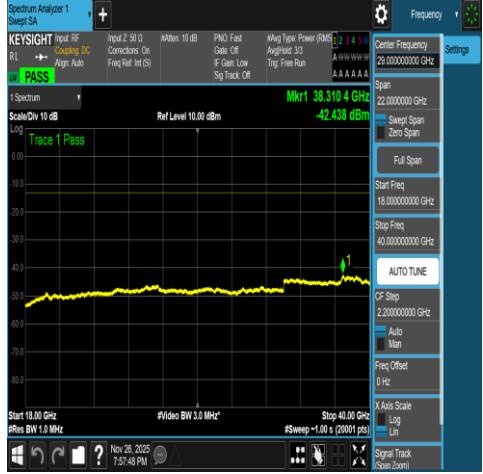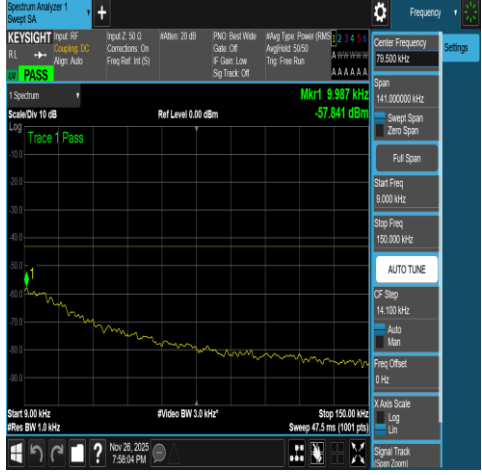     
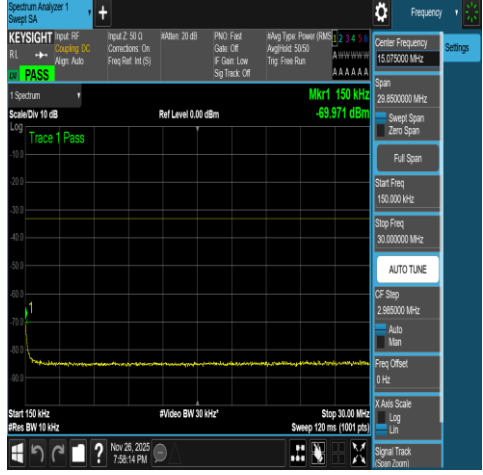 
SS 	
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+90-M +L-N/A-N/A-DFT-QPSK-Outer_Full-30-1000-PASS	NTNV-DC_66A_n78A-3700-3800-PC2-30-5+90-M +L-N/A-N/A-DFT-QPSK-Outer_Full-1000-6000-PA SS
	
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+90-M +L-N/A-N/A-DFT-QPSK-Outer_Full-6000-18000-P ASS	NTNV-DC_66A_n78A-3700-3800-PC2-30-5+90-M +L-N/A-N/A-DFT-QPSK-Outer_Full-18000-40000-PASS
	
NTNV-DC_66A_n78A-3700-3800-PC2-30-5+90-M	NTNV-DC_66A_n78A-3700-3800-PC2-30-5+90-M

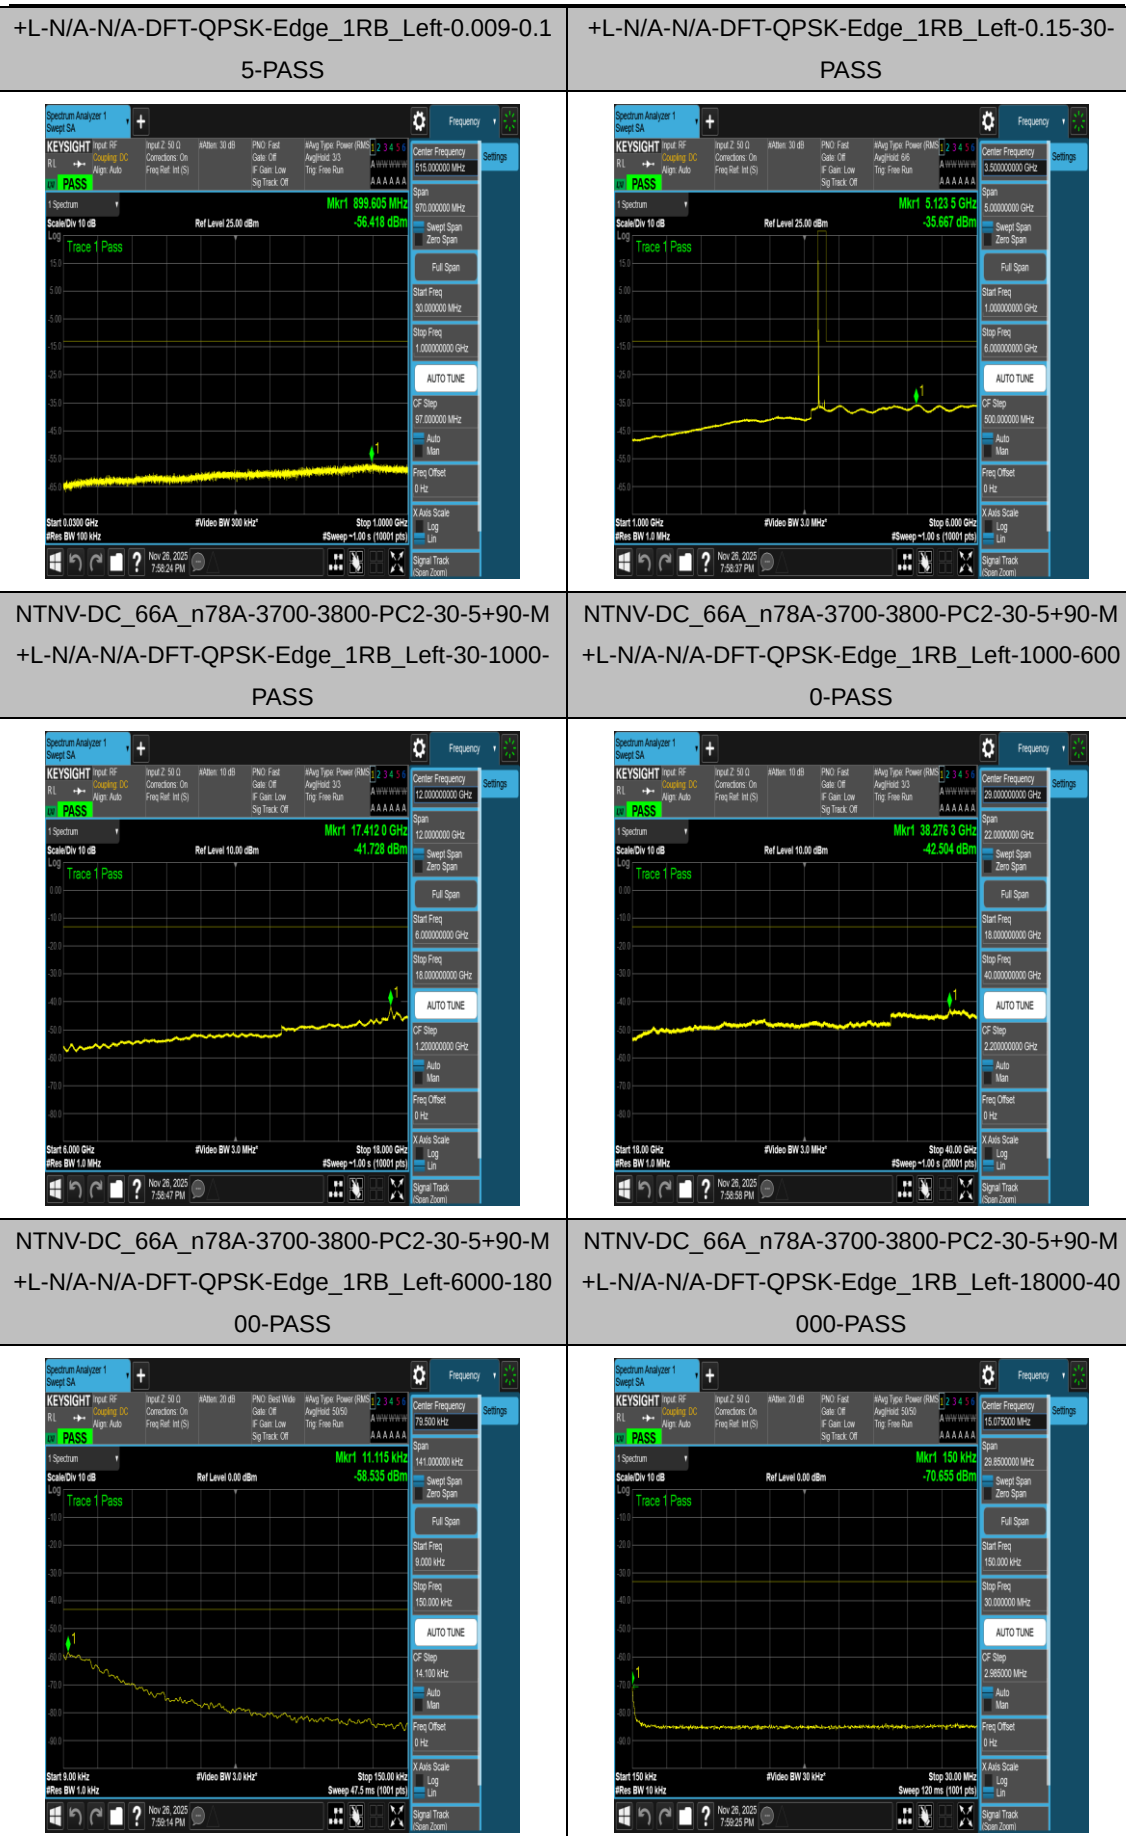 

NTNV-DC_66A_n78A-3700-3800-PC2-30-5+90-M +L-N/A-N/A-DFT-QPSK-Edge_1RB_Right-0.009-0 .15-PASS	NTNV-DC_66A_n78A-3700-3800-PC2-30-5+90-M +L-N/A-N/A-DFT-QPSK-Edge_1RB_Right-0.15-30 -PASS
--	---

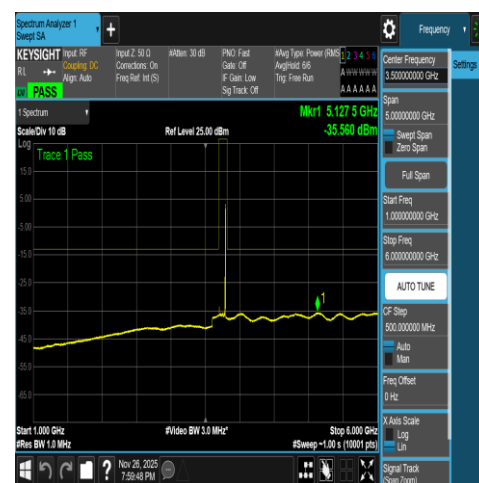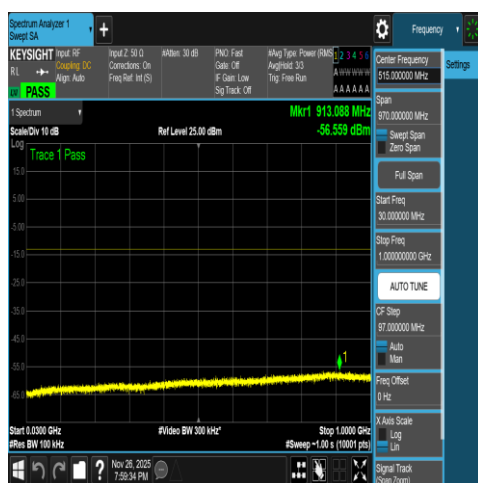  

NTNV-DC_66A_n78A-3700-3800-PC2-30-5+90-M +L-N/A-N/A-DFT-QPSK-Edge_1RB_Right-30-100 0-PASS	NTNV-DC_66A_n78A-3700-3800-PC2-30-5+90-M +L-N/A-N/A-DFT-QPSK-Edge_1RB_Right-1000-6 000-PASS
---	---

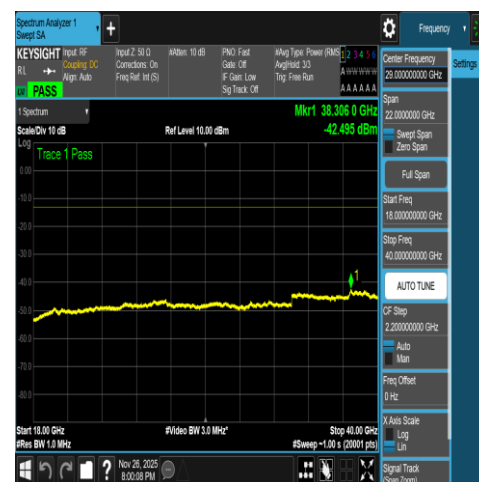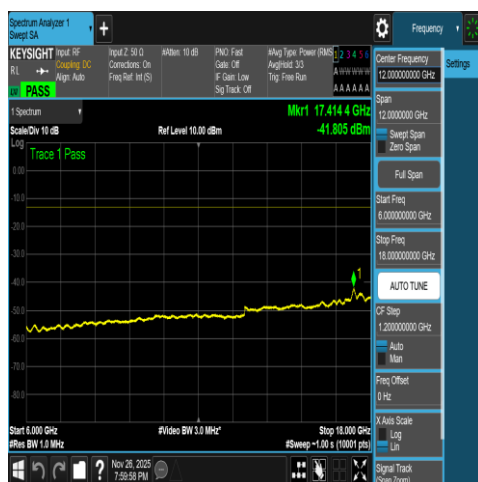  

NTNV-DC_66A_n78A-3700-3800-PC2-30-5+90-M +L-N/A-N/A-DFT-QPSK-Edge_1RB_Right-6000-1 8000-PASS	NTNV-DC_66A_n78A-3700-3800-PC2-30-5+90-M +L-N/A-N/A-DFT-QPSK-Edge_1RB_Right-18000- 40000-PASS
--	---

