

SBT524 User Manual

FRONT

 
**SHARPER
IMAGE**

High Definition Wireless Headphones



User Guide
SBT524

Location of Controls

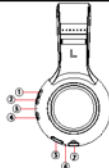

- [+] button:
 - Long press - skip to next song
 - Quick press - increase volume
- [-] button:
 - Long press - skip to previous song
 - Quick press - decrease volume
- LED indicator light
- [O] button:
 - Long press - power ON/OFF
 - Quick press - play/pause music
 - Quick press - answer/end call
- Micro USB charging port
- Microphone
- Aux-in jack

Pairing the Headphones


On a BlackBerry
 • Go to **SETTINGS/OPTIONS > BLUETOOTH**
 • Enable **BLUETOOTH**



On an Android Phone
 • Go to **SETTINGS > BLUETOOTH** MENU
 Search for devices (Make sure Bluetooth is turned ON)



On other Cell Phones/Devices
 • Review the instruction manual that came with your phone/device.

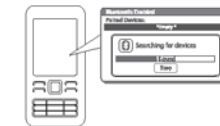

! If there is a device in range when the headphones are turned on, the headphones will connect to it automatically.

On an iPhone
 • Go to **SETTINGS > BLUETOOTH**
 (Make sure Bluetooth is turned ON)



- When your Bluetooth-enabled device finds the headphones, select "SBT524" from the list of found devices.
- If required, enter the password 0000. Select OK or YES to pair the two units.
- After a successful registration, a tone and the voice prompt "Pairing successful" will be heard, and the LED indicator light will slowly blink BLUE.

! The screenshots above are typical of many Bluetooth-enabled devices in the market today, and are used to assist in the explanation of the pairing process. Your Bluetooth-enabled device's interface and interaction with the headphones may slightly differ from the illustrations above.

In the box



High Definition Wireless Headphones



User Guide



3.5mm Auxiliary Cable



Micro USB Charging Cable

Charging the Headphones

- Plug the small end of the Micro USB charging cable into the Micro USB charging port on the headphones.
- Plug the large end of the Micro USB charging cable into a USB port on your computer or other USB charging device.
- The LED indicator light is RED when charging and turns BLUE when the headphones are fully charged.



! Make sure you charge the headphones for at least 3 to 4 hours before using it for the first time.

BACK

Using The Headphones

Powering ON/OFF

- Long press the [O] button to turn ON and OFF.
- Check that your Bluetooth features are turned ON. If you have already paired the headphones with a Bluetooth-enabled device, it will automatically connect.
- If you are using the headphones for the first time, go to the "PAIRING THE HEADPHONES" section of this User Manual, and pair the headphones to your desired Bluetooth device.

Answering/ending a call

- To answer a call, quick press the [O] button.
- To end a call, quick press the [O] button.

Adjusting the volume

- Quick press the [+] button to increase the volume.
- Quick press the [-] button to decrease the volume.

Muting a call

- Press the [-] button for 2 seconds to mute a call.
- Press the [-] button for 2 seconds to un-mute.

Playing Music

To enjoy listening to music wirelessly on your Wireless Headphones, make sure you are connected to a Bluetooth-enabled device (see "PAIRING THE HEADPHONES"). Once connected, press PLAY on your Bluetooth device. When playback starts, control the music and volume with your connected device or the buttons on the headphones.

Play/Pause

- Quick press the [O] button to pause the music.
- To resume music playback, quick press the [O] button again.

Skipping Songs

- Long press the [+] button to skip to the next song.
- Long press the [-] button to skip to the previous song.

Adjusting the volume

- Quick press the [+] button to increase the volume.
- Quick press the [-] button to decrease the volume.

Using As Wired Headphones

- Connect one end of the 3.5mm auxiliary cable to the aux in Jack on the headphones and the other end to an external device's headphone jack (smartphone, tablet, or MP3 player).
- Open a media player on your device and click on PLAY to start playing your music.
- Use the controls on your connected device to control music playback and volume.

Troubleshooting Tips (cont'd)

! I can pair the High Definition Wireless Headphones with my Bluetooth device, but I cannot hear any music.

- Make sure your Bluetooth device supports A2DP profile.
- Turn up the volume on your Bluetooth device.
- You may have to unpair the headphones, then re-pair to your device.

! My Bluetooth device is not able to pair with the High Definition Wireless Headphones.

- Press and hold the [O] button for approximately 7 seconds. A tone and the voice prompt "Pairing" will be heard, and the LED indicator light will flash RED and BLUE.
- Keep your Wireless Headphones and Bluetooth-enabled device within three feet of each other during the pairing process.
- Check that YOUR device's Bluetooth feature is turned ON.
- Try repeating the pairing process. See "PAIRING THE HEADPHONES."
- Make sure the headphones are fully charged.

! I cannot get the Headphones into pairing mode.

- Press and hold the [O] button for approximately 7 seconds. A tone and the voice prompt "Pairing" will be heard, and the LED indicator light will flash RED and BLUE.
- The headphones are now in pairing mode.

Legal Information

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Part 15:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) This device must accept any interference received, including interference that may cause undesired operation.

Notes: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Limited Warranty

90 Days Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Call the Customer Support number located below, or go to our website portal to receive an SRQ number.
- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equivalent value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier. The shipping address of the authorized service center is:
 © Southern Telecom Dept. 36
 100 Kennedy Drive
 Sayreville, NJ 08872

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
 Phone: 1-877-768-9481
 Monday-Friday 8AM-10PM (EST)

www.southern telecom.com
 Click on "Product Support"

Warranty service not provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:

THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY AT, INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations on exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

Sharper Image® name and logo are registered trademarks. SharpImage and SHARPER IMAGE are trademarks of Southern Telecom and/or its affiliates. © Sharper Image. All Rights Reserved.

SHARPER IMAGE

