

Contents

1. Important	1
Hearing Safety	1
Notice	2
Trademark notice	3
2. Your headset	4
What's in the box	4
Overview of your headset	4
3. Get started	5
Charge your headset	5
Pairing the headset	5
Connect with NFC device	6
4. Use your headset	7
Wear your headset	7
Connect with audio cable	7
Manage your music and calls	8
Folding and storing the headphone	9
Change your ear pads	9
5. Specification	10
6. Trouble shooting	11

1- Important

Hearing safety

Listening at a moderate volume:

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Notice

Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96 EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health. Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. When you see the crossed-out wheel bin symbol with the chemical symbol 'Pb', it means that the batteries comply with the requirement set by the directive for lead.

CE statement

The equipment is in compliance with the essential requirements and other relevant provisions of the Directive 1999/5/EC.

CE 2200

Compliance with FCC rules (U.S.A., only)

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement:

- This equipment complies with FCC radiation exposure requirement.
- The device can be used in portable exposure condition without RF striction.

Trademark notice

Android™ is a trademark of Google Inc.

The Bluetooth word mark and logo are owned by the Bluetooth SIG, Inc. and any use of such marks by Cleer Limited is under license.

Trademark are the property of Cleer Limited or their respective owners.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

2 – Your headset

 
What's in the box?

You should find these items upon opening the box

- Carrying pouch
- USB charging cable
- Audio cable with inline remote control (1.2m)
- User manual
- Quick start guide
- Warranty card
- Acoustic Certificate

Overview of the headset

1. Micro USB jack for charging
2. Battery level button
3. Battery level indicator
4. Next track / volume up button
5. Blue / Red LED indicator
6. Previous track/ volume down button
7. Multi-function button (MFB) /
Power on/off switch
8. NFC Zone
9. 3.5mm audio jack
10. Microphone

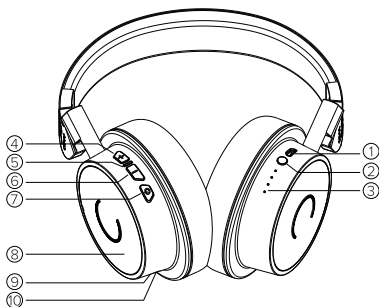


3 – Get started

Charge your headset

Connect the supplied USB charging cable to :

 - the USB connector of the headset and;
 - USB power source
- > Battery level indicator starts flashing during charging and all 4 LEDs turn on when the headset is fully charged
- > One LED flashes slowly during low battery

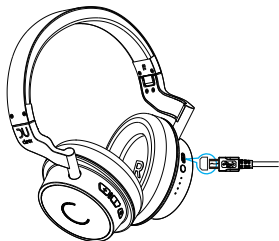

Notes

 
- Before you use your headset for the first time, charge the battery for 2.5 hours for optimum battery capacity and lifetime
- Use only the supplied USB charging cable to avoid any damage
- You can operate the headset normally during charging
- When the battery is empty, you can carry on listening music with an audio cable.

Pairing headset

Before you use the headset with your mobile phone / Bluetooth device for the first time, pair it with a mobile phone / Bluetooth device.

- Turn on your mobile phone/Bluetooth device
- Press and hold the Multi-function button (MFB) for 6 seconds

- > LED turns Blue / red flash light during pairing and turns blue flash light when the headset is paired
- > LED turns red flash light when disconnected
- > the headset is reconnect to the last connected mobile phone / Bluetooth device automatically. If the last one is not available, the headset tries to reconnect to the second last connected device.

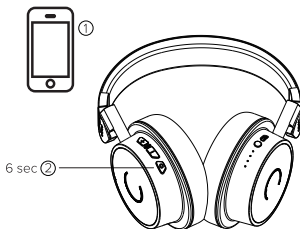

Connect with NFC device

- Turn on your NFC device
- Hold a NFC device against the NFC zone of the headphones (left ear cup)

Notes

- The size and sensitivity of NFC zone vary depending on devices

 


4 – Use your headset

Wear your headset

For good sound quality and best possible comfort, the headband has to be adjusted to properly fit your head. To do so, adjust the headband via its snap-in locking mechanism:

- Place headset on your ears by matching the L/R markers to your ears accordingly
- Adjust the length of the headband so that your ears are completely inside the earpads

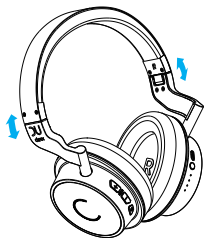


Connect with the audio cable

With the supplied audio cable, you can use the headset with non-bluetooth device or on airplane. Connect with the supplied audio cable to the headphone socket and the L-plug to your sound source such as MP3, PC, CD player, etc.


Notes

 - No battery power is required for the headset when you use it with audio cable.

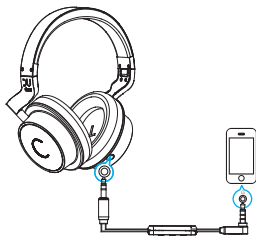

Manage your music and calls

 The audio cable is combined remote control and microphone that enables you to make or answer calls while wearing the headphones. The control also enables you to play and pause songs.

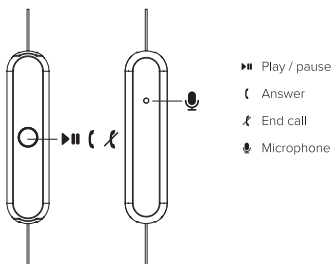

* Compatible with most Android™ devices

Notes

- Functions vary depending on your phone, tablets and application


Call-related function

Answer a call	When you receive an incoming call, press the answer/end call button
End a call	Press the answer/end call button
Use the voice control	Press and hold the answer/end call button

Media playback function

Play or pause a song	Press the play/pause button
----------------------	-----------------------------

 Vol + button
Vol - button
Multi function button(MFB)



Basic function

Power on	Press MFB for 2 seconds. The headset is reconnect to the last connected device automatically
Power off	Press MFB for 4 seconds

Call-related function

Answer a call	When you receive an incoming call, press MFB once
End a call	Press MFB once
Reject incoming call	Press MFB for 2 seconds
Cancel outgoing call	Press MFB once

Media playback function


Play or pause a song	Press MFB once
Increase volume	Press Vol + once
Decrease volume	Press Vol - once
Resume	Press MFB once
Next track	Press Vol + for 2 seconds
Previous track	Press Vol - for 2 seconds

Folding and storing the headphone

- Rotate the earcups inwards, then place the headphones in the pouch


Notes

 - The earcups rotate only in one direction. Incorrectly rotating the earcups can damage the headphones

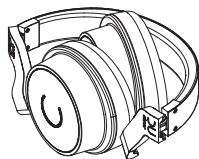

Change your earpads

 - Remove the ear pads from both ear cups by turning the ear pads in the direction of the arrow
- Lift the ear pads off the ear cups.

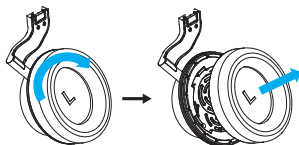

5 - Specifications

Frequency Response	20Hz to 20,000Hz
Sensitivity	102dB
Impedance	32 Ohm
Speaker driver	Customer dual driver,40mm
Magnet type	Neodymium
Distortion	<1%THD IEC3181mW @1KHz
Supported Codec	SBC, AAC, aptX
Music playback time	16 hours
Batteries charging time	2.5 hours
Battery type	Lithium ion polymer
Bluetooth version	4.0
Bluetooth range	33ft (10m)
Audio connection	3.5mm stereo jack socket
Dimensions (W x H x D)	155x 200 x 80mm
Weight	0.3kg

Note

- Product information is subject to change without prior notice

6 - Trouble shooting

Low or no volume

- Make sure the audio source is on and the volume is turned up
- Make sure the headphone volume is turned up
- Reconnect the headphone and the music source
- Check the audio cable if it is defective and replace the audio cable

LEDs are not light up

- Make sure the battery is not out of power

Sound is only coming from one earpiece

- Disconnect and re-connect the headphones to ensure the connection is secure.
- Try another audio source.
- Make sure the audio cable is properly connected
- Check the audio cable if it is defective and replace the audio cable

Headphone cannot be switched on

- Make sure the battery is not out of power