

Let's get started.

Quick Start

1. Make sure your Ring Alarm is disarmed.
2. In the Ring app, tap **Set Up a Device** and find the **Contact Sensor** in the **Security Devices** menu.
3. Follow the in-app instructions to complete setup.

Installation


1. Install the sensor and magnet on a door or window and frame.
2. Clean the area before you peel the backing and stick on the sensor and magnet.
3. Make sure there is no more than 1 inch (25.4 mm) between the sensor and magnet when the door or window is closed.

If you're using the Contact Sensor on a door you use often, choose Main Door as the placement option. Main doors have Entry and Exit Delays to prevent you from accidentally triggering the alarm.

ring

For additional help, visit:
ring.com/help


Spacing

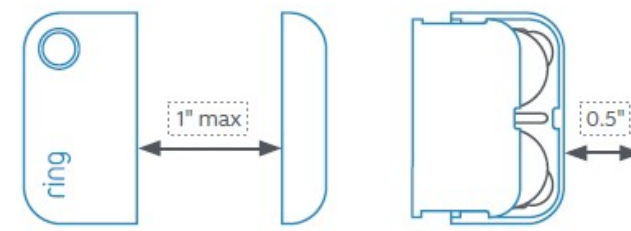

Ensure no more than 1 inch (25.4 mm) between sensor and magnet when the door or window is closed.

Leave at least a 1/2 inch (12.7 mm) space so you can open the battery compartment.

Placement

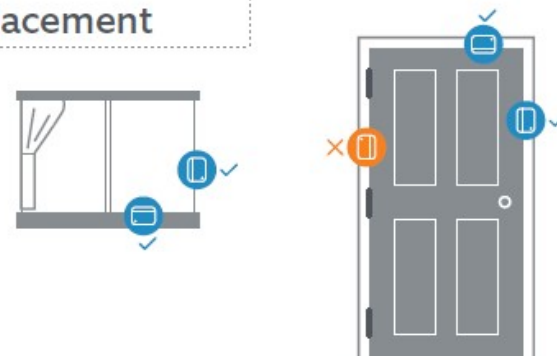

©2022 Ring LLC or its affiliates. Ring and all related marks are trademarks of Ring LLC or its affiliates.

For Z-Wave technical information, visit ring.com/z-wave.
23-005652-03