

CONGRATULATIONS ON YOUR PURCHASE OF THE SOUNDHAVEN® ANC.

Please read all instructions and warnings prior to use. Keep this manual as it contains important information for future reference.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Computers, tablets, Smart Phones, and music players must have built-in BLUETOOTH® wireless technology to connect. This product is not affiliated with or endorsed by any of the above mentioned, referenced or pictured trademarks, companies or devices.

SHARPER IMAGE® NAME AND LOGOS (INCLUDING THE 77 LOGO, TOMORROW'S TOMORROW) ARE TRADEMARKS OR REGISTERED TRADEMARKS. DISTRIBUTED BY AND © 2021 MERCHSOURCE, LLC. IRVINE, CA 92618. ALL RIGHTS RESERVED.

FOR CUSTOMER SUPPORT, PLEASE CALL 1-800-374-2744.

Printed in China.



FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: 2AEVM1014697

To check legal marking (FCC ID and IC ID), simply remove the earpads.

RECHARGEABLE BATTERY WARNINGS:

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not disassemble, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

SAFETY WARNINGS:

 
- Not a children's item. Keep out of reach of children.
- Listening to loud music for extended periods of time may damage hearing.
- Do not use earbuds while driving.
- Always pay attention to your surroundings while using your earbuds.
- Charge only with the included charging case and cables.
- Do not expose to extreme temperatures or leave in direct sunlight.
- Thoroughly inspect earbuds and case before every use. If items appear worn, frayed, splintered, cracked, or broken in any manner, discontinue use immediately.
- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
 - (1) This device must not cause interference.
 - (2) This device must accept any interference, including interference that may cause undesired operation of the device.
- L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
 - (1) L'appareil ne doit pas produire de brouillage.
 - (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC: 21808-1014697

CONTENTS

- SoundHaven® ANC headphones
- Carrying case
- 3.5mm cable
- USB-C charging cable

GETTING STARTED

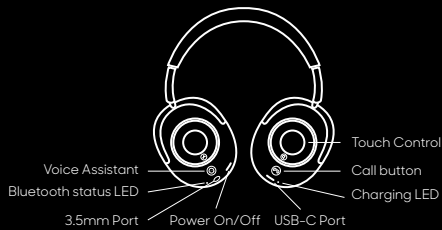

CHARGING

1. Connect the USB-C charging cable to a USB power adapter (not included).
2. Connect the other end of the USB-C charging cable to the USB-C port on the right side of the headphones. The LED will be orange when charging and green when fully charged.

ADJUSTING

- Adjust the headphones by carefully pulling or pushing the earcups in or out from the headband until you find the fit that feels most comfortable to you.

 
HOW TO USE

POWER

1. To power on the headphones, press and hold the power button for 5 seconds. The LED will glow blue and a power notification will play.
2. To turn off the headphones, press and hold the power button for 5 seconds. The LED will turn white and then the headphones will turn off.

WIRELESS PAIRING

1. Power on the headphones to automatically enter pairing mode the first time or automatically reconnect to the last paired device.
2. Enable Bluetooth® functionality on your compatible device and select "SOUNDHAVEN ANC" from the menu. A connected notification will play when the headphones have been successfully paired.
3. To manually disconnect, turn off Bluetooth on your onnected device or remove the headphones from the device list.
4. To connect to a new device, turn off the headphones and then hold the power button for 8 seconds.

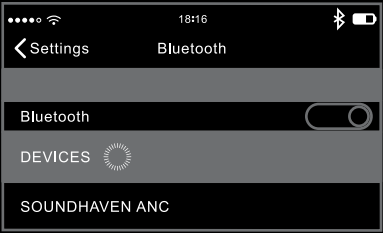


CALL FUNCTIONS

1. To answer an incoming call, press the call button on the right side of the headphones (Figure A).
2. To cancel a call, press the call button again.
3. To reject a call, press and hold the call button for 1 second.
4. To mute the call quickly double tap the touch control on the right side of headphones.
5. To end the call, press the call button.
6. To redial the last number called, press the call button twice.

MUSIC FUNCTIONS

 1. To play or pause music, tap the touch control on the right side of the headphones (Figure B).
2. To increase the volume, slide your finger around the touch control clockwise (Figure C).
3. To decrease the volume, slide your finger around the touch control counterclockwise (Figure D).

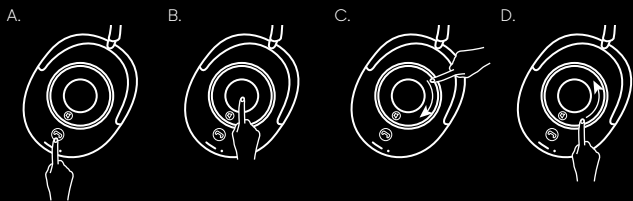

ACTIVE NOISE CANCELING

1. To turn ON or OFF ANC (Active Noise Canceling), single Tap the touch panel on the left side of the headphone.
2. When ANC is ON, double tap the touch panel on the left side of the headphone to cycle through the 4 ANC mode.
 - Mode 1: Blocks noise expected in airplane cabins
 - Mode 2: Blocks noise with bass and low frequency
 - Mode 3: Blocks noise in outdoor and windy environments
 - Mode 4: Blocks noise associated with offices and restaurants
3. To turn on or turn off transparency mode, press and hold the control panel for 2 seconds.
 - Transparency Mode: Allows you to hear others speak without needing to remove your headphones.

OTHER FUNCTIONS

1. To activate your voice assistant, press the voice assistant button on the left side of the headphones.
2. For wired audio, plug the 3.5mm cable (included) into the 3.5mm port on the headphones.

STORAGE

1. Always store the headphones in the included case when not in use.
2. To fit the headphones into the case, adjust the headband to the smallest size and swivel the earcups flat.