 




SHARPER IMAGE®

BED COOLING SYSTEM

ADJUSTABLE BED FAN

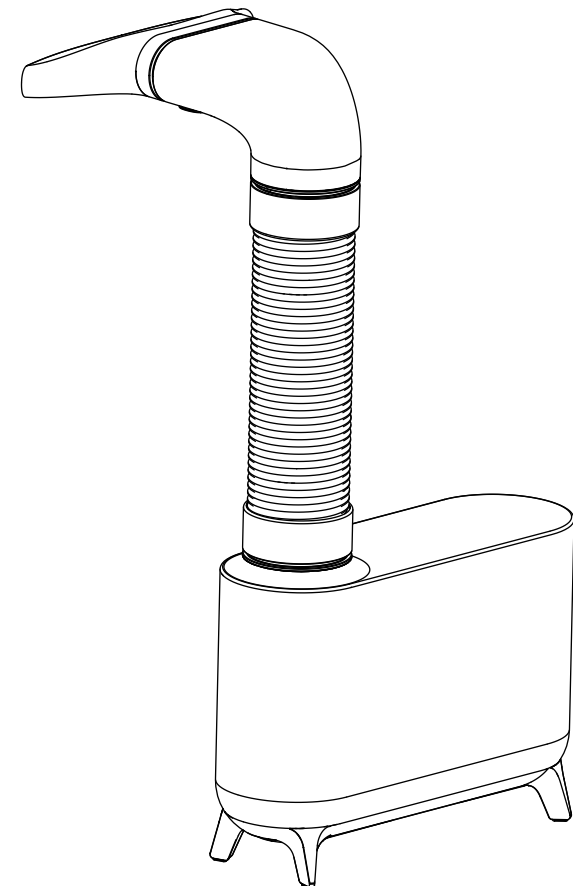

SHARPER IMAGE® NAME AND LOGOS (INCLUDING THE 77 LOGO) ARE
TRADEMARKS OR REGISTERED TRADEMARKS. DISTRIBUTED BY AND
© 2025 MERCHSOURCE, LLC. IRVINE, CA 92618. ALL RIGHTS RESERVED.

FOR CUSTOMER SUPPORT, PLEASE CALL 1-800-374-2744.

MODEL NO. : 1019668

Printed in China.

CONGRATULATIONS ON YOUR NEW BED COOLING SYSTEM.

Please read all instructions and warnings prior to use. Keep this manual as it contains important information for future reference.

TABLE OF CONTENTS

Important Safety Instructions	2
Polarization Instructions	2
User Servicing Instructions	2
Alkaline Battery Warnings	3
FCC Statement	3
What You Get	4
Getting Started	5
How To Use	7
Care Instructions	8
Troubleshooting	9
Limited Warranty	10
Guidelines For All Warranty Returns	11
Returns Process Guidelines	12

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ BEFORE USE.

⚠ WARNING: To reduce the risk of fire, electric shock, or injury to persons, do not use with replacement parts that have not been recommended by the manufacturer, such as but not limited to uncertified replacement parts or replacement parts made at home.

- Not a children's item. Keep out of the reach of children.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- For household use only.
- Indoor use only.
- Do not block air intake or outlet.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Keep away from water and moisture.
- Do not operate with damaged power cord.
- Not intended for use by children without supervision.
- Thoroughly inspect the product and all parts before every use. If the product or any parts appear worn, frayed, splintered, cracked, or broken in any manner, discontinue use and discard immediately.
- Do not put any object, fingers, or other body parts into any openings in this product or the fan grill. Do not use this product with any openings blocked. Keep free of dust, lint, hair, debris, or any other objects that may block or reduce airflow.
- Risk of fire. Do not replace plug. Plug contains a safety device (fuse) that should not be removed. Discard product if the plug is damaged.
- Do not modify this product, such as but not limited to installing supplemental air filters. This product is not intended to be used for air cleaning purposes.
- Do not use any cleaning agents or lubricants on this machine. Unplug before cleaning or carrying out any maintenance.

 
WARNING: REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK – DO NOT USE THIS DEVICE WITH ANY SOLID-STATE SPEED CONTROL DEVICES.

POLARIZATION INSTRUCTIONS


To reduce the risk of electric shock, this machine has a polarized plug (one blade is wider than the other) as a safety feature. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not attempt to defeat this safety feature and do not change the plug in any way.

This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.


USER SERVICING INSTRUCTIONS

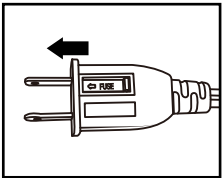

 
Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord. Slide open the fuse access cover on top of the plug towards blades.

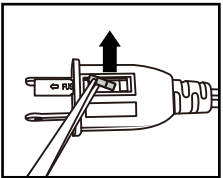

Remove fuse carefully.

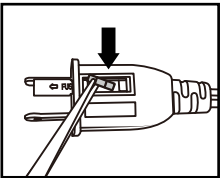 

 Risk of fire. Replace fuse only with 2.5A 125V fuse.

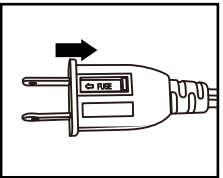

Close the fuse cover. Slide closed the fuse access cover on top of the attachment plug.

READ AND SAVE THESE INSTRUCTIONS

ALKALINE BATTERY WARNINGS

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not attempt to charge non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire: batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WHAT YOU GET


- Bed Cooling System Main Unit
- Flex Air Hose
- 90° Connector
- Cool Air Vent
- Magnetic Lock
- Bedside Remote

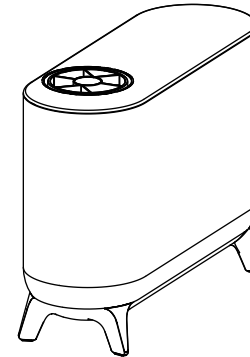


a.

 

b.

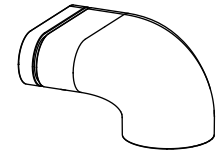 


c.

 

d.



 
e.

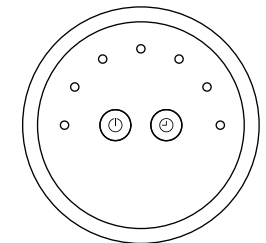


f.

GETTING STARTED

 
1. Place the Bed Cooling System main unit on the floor near the foot of your bed. The main unit can be placed vertically or on its side. The vent can be routed from the center or side of the bed.
IMPORTANT: Do not block the air intake or outlet on the main unit. Leave at least 2 in. (5 cm) of clearance around the main unit.

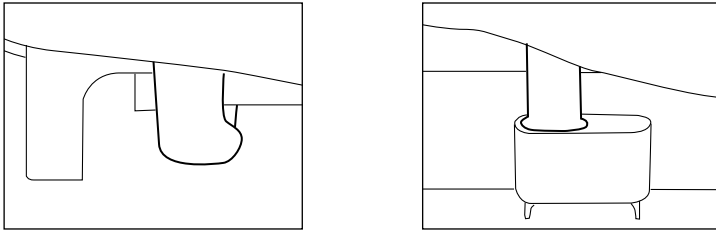

 
2. Connect the flex air hose to the top of the main unit. Next, connect the 90° connector to the other end of the flex air hose. Then, connect the cool air vent to the 90° connector. Press each connection together gently and firmly to secure and prevent air leaks.

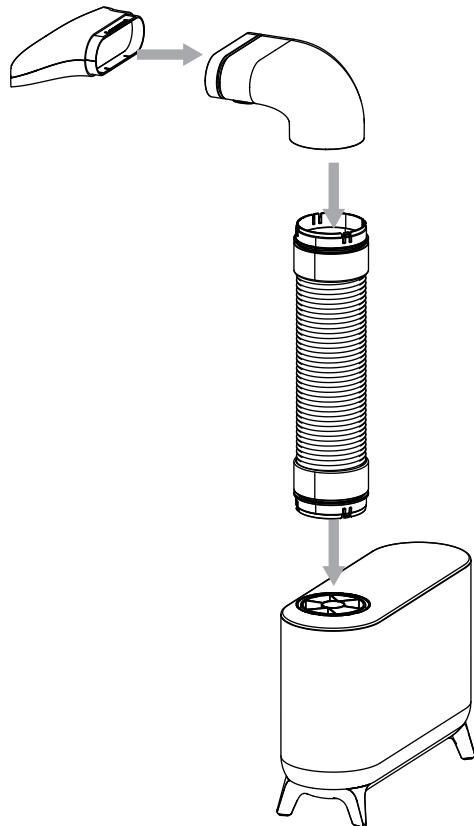

 3. Slide the magnetic lock under your fitted sheet to hold the 90° connector in place. The flex air hose can be stretched to fit multiple bed heights. For best results, place the cool air vent between the fitted sheet and top sheet at the middle of the foot of your bed.

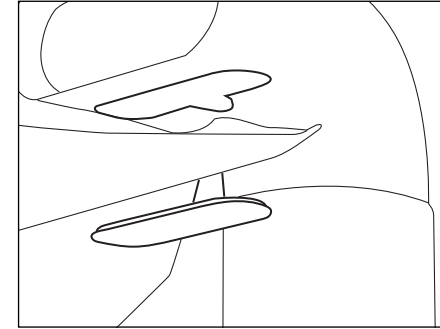

 
4. Plug the power cord on the Bed Cooling System main unit into a standard wall outlet. Route the power cord carefully to avoid creating a tripping hazard.
5. Twist the battery cover on the bedside remote counterclockwise to open the battery cover. Insert 2 AAA 1.5V batteries (not included) into the battery compartment. Replace the battery cover and twist it clockwise to secure it in place.

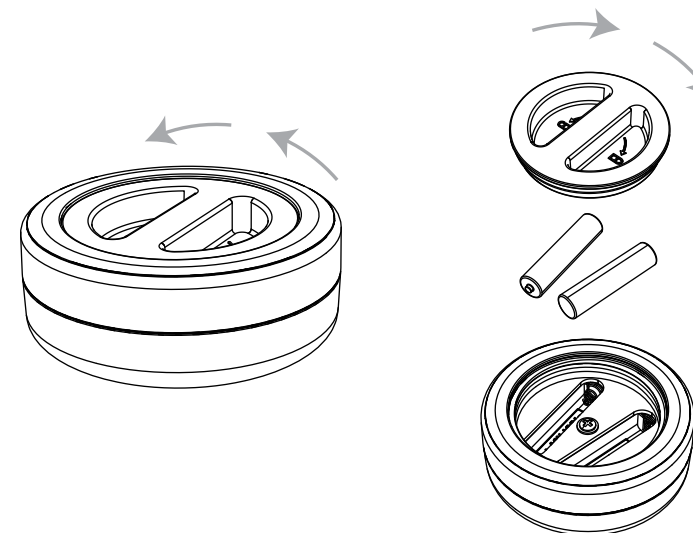


HOW TO USE

1. To power on the Bed Cooling System, press and hold the power button on the bedside remote or on the main unit. It will power on at the last intensity used or low if it is the first time it has been used since last plugged in.

 Note: If you use the power button on the main unit, the automatic shutoff timer will be disabled. If you use the power button on the bedside remote, the last timer setting will be active.

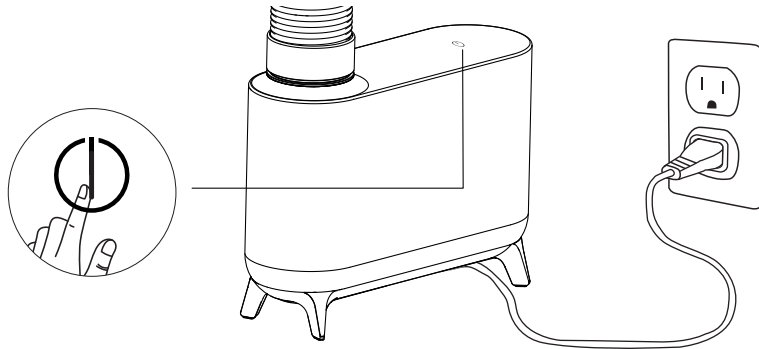

 
2. To adjust the air speed, twist the dial on the bedside remote clockwise to increase the air speed or counterclockwise to decrease the air speed. The Bed Cooling System features 7 air speeds. To adjust the air speed using the main unit, short press the power button to cycle through low, medium, and high air speeds.

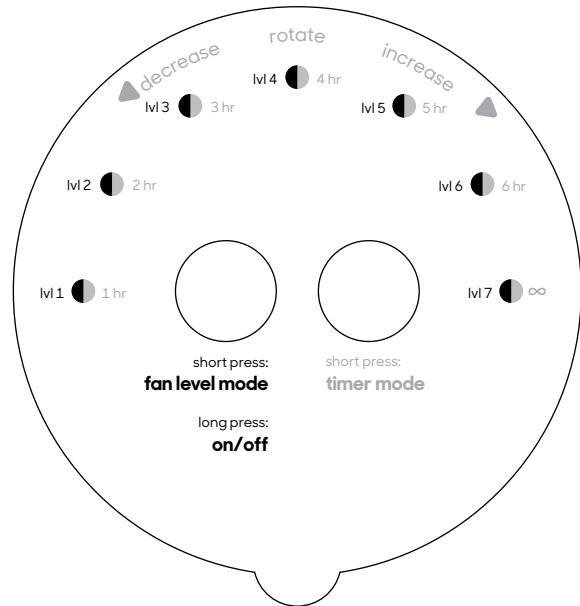

3. To set the automatic shutoff timer, press and release the timer mode button and then twist the dial to select the timer duration. The duration can be set from 1 to 6 hours or disabled for continuous operation.

CARE INSTRUCTION

 1. Always power off and unplug the main unit before performing routine maintenance.
2. Remove the air intake vent cover and clean the air intake regularly as needed. To remove the vent cover, slide a finger into the notch and then lift the cover away.
3. Wipe clean with a soft dry cloth as needed. Do not expose to water or moisture.

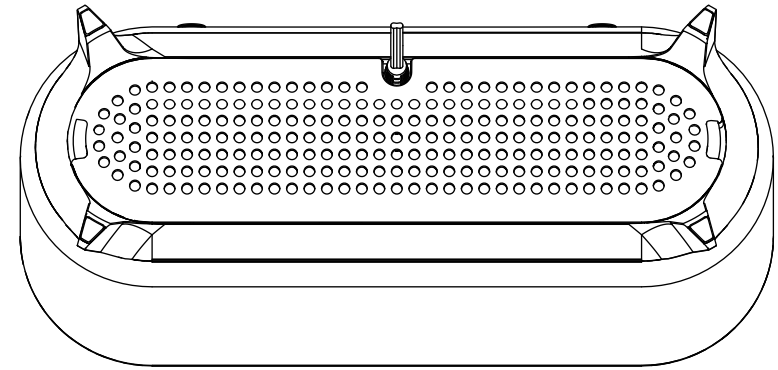

TROUBLESHOOTING

Issue: No power

Possible Cause: Disconnected power cord or wall outlet off

Solution: Make sure the main unit is plugged in and check the wall outlet

Issue: Weak airflow

Possible Cause: Hose blocked, bent or not properly connected

Solution: Power off unit, remove any blockages from hose and vent, and reconnect hose making sure to keep the hose straight

Issue: Shuts off

Possible Cause: Timer expired

Solution: Reset the timer or choose continuous mode

Issue: Bedside remote cannot be turned on

Possible Cause: Drained batteries

Solution: Change the batteries

LIMITED WARRANTY

Under this policy we are referring to the performance of the product. Over time, products will become worn and obsolete, and materials and parts will wear down or may become unusable due to advances in technology. This warranty ("Warranty") covers defects in materials or workmanship under normal residential use for a period of one (1) year from the date of purchase. If a defect arises during the Warranty period, MerchSource will, at its sole discretion, repair or replace the Product or any defective part. Warranty cannot be applied to the following: (a) to protective coatings that will diminish over time as mentioned above or to batteries, unless failure has occurred due to a defect in materials or workmanship; (b) to cosmetic damage, including but not limited to scratches, dents and broken plastic parts, ports unless failure occurred due to a defect in materials or workmanship; (c) to damage caused by use with a third-party component or product that does not meet MerchSource Product Specifications. Any alterations or modifications to our products will void all warranties. During Warranty if your product is serviceable with a replacement part such resolution will be taken. In some instances, the replacement or component may not be of same color but fit and function will be ensured as part of warranty validation process. MerchSource does not authorize anyone, including, but not limited to a MerchSource reseller or retailer to make any modifications to our warranty guidelines. To the greatest extent permitted by law, this warranty and the remedies set forth are exclusive and in lieu of all other warranties, remedies and conditions, whether oral, written, expressed or implied. MerchSource is not responsible for direct, incidental or consequential damages resulting from any breach of warranty, or under any other legal theory, including but not limited to loss of use; loss of revenue; loss of actual or anticipated profits; loss of goodwill; loss of reputation.

GUIDELINES FOR ALL WARRANTY RETURNS

1. Proof of purchase required from approved retailers.
2. Any products purchased at third-party marketplaces or retailers (e.g., eBay, Facebook Marketplace, etc.) are not covered under warranty or return policy.
3. Customer shall provide image of original receipt with matching SKU and product details.
4. No financial reimbursement shall be granted, only product replacements. If originally purchased product is out of stock or no longer available, Merchsource reserves the right to make product substitution to remedy. No refund is allowed.
5. All product shipments are shipped using ground service. No expedited shipping.
6. Any returned products must be received within 14 days.
7. Return the product to the original place of purchase is recommended.
8. Consumer information and all product details, including batch numbers, are required for warranty. Consumer information will not be shared or used for marketing.

RETURNS PROCESS GUIDELINES

If product has failed due to potential safety or potential injury concerns, the product must be returned directly to MerchSource. Not all cases will require that defective products, components, and accessories be returned, but customer must responsibly dispose of the product or render it fully inoperable as per customer support instruction to prevent further use.

- Product Mutilation (1): Consumer shall provide current image or product before and after mutilation. If charger cable is supplied – consumer shall disconnect charger and cut the cord. Image is required showing proof.
- Product Mutilation (2): Consumer is asked to dispose of the product and all its accessories (image is required of product in trash displaying proof of such action).