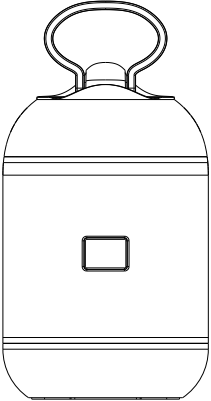 
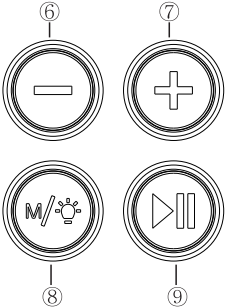 
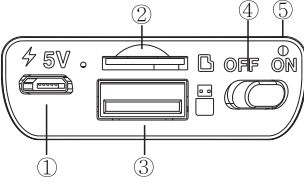 
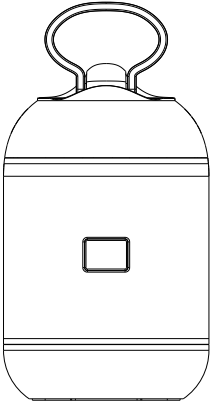 
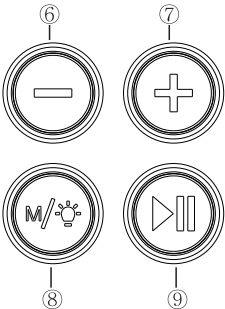 
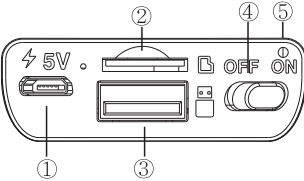 


使用说明书 	一、产品参数 无线传输范围：10M 音频性噪比：≥85db 电池容量：500mAh 电池电压：3.7V 正常音量播放：1H 喇叭规格：φ 52mm 喇叭功率：4Ω/5W 频率响应：120HZ-20KHZ 尺寸：72mm*72mm*119mm 单机重量：约258g 充电电压：5V/500mA 二、功能特点 1、采用先进的无线音频解码芯片，支持所有无线设备连接 2、音色柔和清晰有动感，各层次分明； 3、可直接连接手机/平板电脑/及电视无线配对播放音乐，无线接收距离长达10米；	4、支持AUX音频输入，为你提供电脑音箱功能； 5、支持U盘和TF卡音乐播放支持MP3格式的全码率播放； 6、FM自动搜索和存储电台内置FM收音模块，可自动搜索及存储电台，省时省力； 7、支持免提通话功能，内置高灵敏度麦克风，让手机通话拥有无比畅快的通话享受。 8、支持对箱TWS功能。 三、功能指示 ①DC 5V电源接口（Micro USB 充电接口）/AUX输入接口：3.5 音频头外音输入; ②TF卡输入接口：当TF卡插入时可解码MP3格式的音频播放; ③U盘输入接口：当U盘插入时可解码MP3格式的音频播放; ④电源开关 ⑤mic输入接口；	⑥音量减键：在音乐的模式下，短按为“上一曲/FM上一电台” 长按音量递减   ⑦音量加键：在音乐的模式下，短按为“下一曲/FM下一电台” 长按音量递加 ⑧模式按键：短按为各模式切换（U盘、TF卡、FM收音、无线、LINE IN）长按为“打开/关闭”彩色灯。 ⑨暂停按键：在音乐的模式下（U盘、TF卡、无线、LINE IN），短按为“播放、暂停”，在无线模式并配对手机情况下，来电话时短按一下为免提接听/挂断电话；在FM模式，短按为自动搜索电台/暂停搜索电台；两台音箱同时在开机蓝牙模式且未连接的状态下，长按其中一台音箱的暂停键2-3S后听到提示音即连TWS成功，再连接手机即可。 备注:在收音模式下，请插入充电线增加收音信号强度，收音效果会更好。
--	--	---	---

USER MANUAL 	PRODUCT SPECIFICATIONS: ●Working distance: 10M ●SNR: ≥85db ●Battery:3.7V 500mAh ●Normal volume playing time: 1H ●Speaker driver：Ø52 mm ●Power：4Ω/5W ●Unit size:72mm*72mm*119mm ●Unit weight:about 258g ●Charging:5V/500mAh PRODUCT FEATURE: 1.International advanced BT chip and circuit design techniques, support all BT device； 2.Built-in Low-freq radiators, Super dynamic low-frequency sound pressure gain, listening transparent and flexible. 3.Can play music after pairing with BT device .for example mobile/ MID/ TV, the working distance is more than 10M.	4.Support AUX IN audio input 5.Built-in MP3 decoding, can directly play TF card, USB disk 6.Build-in the FM radio module, convenient to auto scan and save radio channels. 7.With Mic for hands-free phone call function. 8.Support TWS. KEY & SLOT FUNCTION: 1.DC 5V charging slot:use the standard mini USB micro charging cable for power charging./ AUX：it can play audio via 3.5mm AUX cable to audio device 2.TF slot: it can decode and play MP3 format audio when put TF card into the slot. 3.USB slot: it can decode and play MP3 format audio when put USB card into the slot. 4.Power switch 5.MIC 6.When play music，press short	for last song/last FM station, press long to turn down the volume. 7.When play music, press short for next song/next FM station,   press long to turn up the volume. 8.when play music(USB card/ TF card/LINE IN/ BT), press short to switch USB/TF/FM / Wireless.(switch to “line in” if via AUX cable to audio device). press long to open/close the LED light 9.When play music(USB card/ TF card/LINE IN/BT), press short for "play/pause ". under BT mode with mobile paired , press short to answer a call , press again to hand up . in FM mode, press short to search station automatically, press again to stop searching) Keep the TWS speaker under BT mode without pairing ,press the “play/pause” key for 3 seconds either of the speaker until hear a hint“du du” for TWS mode ,then can paire the mobile. Note: Under FM mode, put in the AUX cable to get better FM radio station
---	---	---	--

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirement, the device can be used in portable exposure condition without restriction.