

W14079 JP339 说明书

105g双铜 过油



100W 15000mAh Wireless Power Bank
For laptops, smartphones, tablets, and more




JP339
User's Manual

Product Overview and Introduction

Component Introduction

 
1. **USB-C** Input/Output: Two-way charging.
2. **Power Switch**: Smart touch On/Off and activates charging.
3. **TFT Display**: Shows battery level and status.
4. **Magnetic Wireless Output**: Charges Qi2 compatible devices.

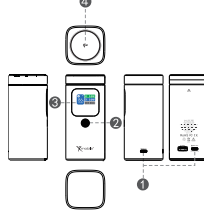

Recharge the Power Bank

This product features two USB-C port with two-way charging capability & 15W magnetic Qi2 wireless charging.

 
1. **Charge by power supply**: To achieve the fastest charging speed, it is recommended to use a 45W or higher fast charger (see Figure 1).
2. **Charge by USB C devices**: You can also use your own USB-C device like laptop to charge the power bank (see Figure 2).

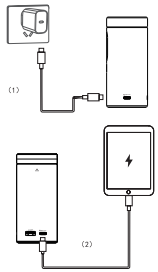


Charging Multiple Devices Simultaneously Important Tips

- When charging a laptop using the USB-C port, use the USB-A port to charge a second device to maintain maximum output power.
- If the USB-C port and the USB-A port are used simultaneously, the total output power will be limited to 15W.

 Single-port output

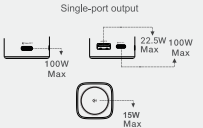


Three-port output

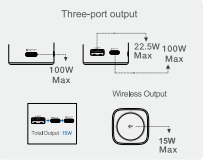 


Trickle Charging Mode

 Activate Trickle Charging Mode: Long press the button for 2 seconds to switch from standby mode to trickle charging mode.

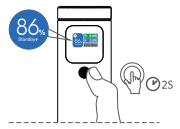


 Trickle Charging Mode for Low-Power Devices

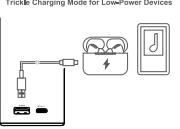


Exit Trickle Charging Mode

 Long press the button for 2 seconds again to return to standby mode.

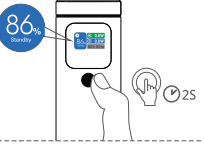

TFT Display Indicator Guide

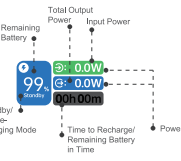 

Color Status Indicators

- Standby Mode**: 99% battery, 0.0W output, 00h00m time.
- Recharging Power Bank**: 100% battery, 22.5W input, 0.0W output, 02h31m time.
- Charging Your Devices**: 100% battery, 0.0W input, 22.5W output, 02h30m time.

Product Specifications

Model	JP339 100W
Item	Wireless Power Bank
Capacity	15000mAh / 55.5Wh
Input	USB-C Port: 5V/3A, 8V/3A, 12V/3A, 15V/3A, 20V/3.25A, 65W Max USB-A Port: 5V/3A, 8V/3A, 12V/3A, 15V/3A, 20V/3.25A, 65W Max
Output	USB-A Port: 5V/3A, 8V/3A, 10V/2.5A, 12V/1.75A, 22.5W Max USB-C Port: 5V/3A, 8V/3A, 10V/3A, 15V/3A, 20V/3A, 100W Max USB-C Port: 5V/3A, 8V/3A, 10V/3A, 15V/3A, 20V/3A, 100W Max
Wireless Output	15W (Max)
Total Output	5V/3A
Size	118*53*52.7mm
Net Weight	495g

TFT Display Indicator Guide

Simply press the button to activate the screen



Press the button to switch to the next screen



Press the button to switch to the next screen



 
Press the button to switch to the next screen



Screen Display time
Long press the button to switch


Always-On Mode: The screen stays on continuously.

30-Second Mode: The screen turns off automatically after 30 seconds.

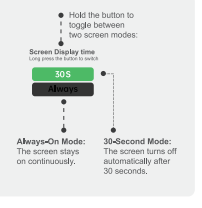

Wireless Charging Description

 Click the button of power bank the indicator will flash for 3 times, put your mobile phone in the center of the power bank to start wireless charging. And then the wireless charging indicator will turn on during charging. The maximum wireless output is 15W, compatible with 5V, 7.5W & 10W.

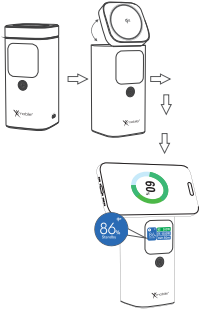

Important Notices

Initial Charging: Upon purchase, the power bank may arrive with a low battery. For optimal performance, fully charge it before first use to ensure it reaches its maximum capacity and reliability.

Regular Maintenance: To maintain battery health and prolong the device's lifespan, recharge the power bank at least once every three months if it remains unused for an extended period. This practice prevents deep discharge, which can impact long-term battery performance.

Avoid Overcharging: Overcharging can reduce battery efficiency and potentially damage the device. When the charging indicator light remains on steadily for a prolonged period, unplug the power bank. This step is essential for preventing excessive heat buildup and wear on the battery.

Usage Guidelines: Place the power bank on a stable, non-flip surface while in use to ensure safe and consistent power flow. Limit direct contact with your body, especially during active charging, to less than 10 seconds if handling is necessary. This reduces potential heat exposure and ensures safer operation.

Low Battery Notification: If the power bank displays a low battery warning while charging a device, it is recommended to recharge it promptly. Allowing the battery to drain completely can interrupt device charging and may impact the power bank's charging capacity over time.

Important Notices

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Trouble shooting

1. **What if the power bank fails to charge?**
Please check whether the adapter connection is secure or not. If the adapter does not function normally, please use your original data cable.
2. **What if the power bank fails to charge other devices?**
Please check that if the power bank voltage is compatible with the electronic device's required charge voltage.
3. **My power bank stops working after used for several times, why?**
Power bank is equipped with safety protection system. Improper use may cause the system protection, which leads your power bank to stop working. Please turn off the power bank and give it a full charge, and the problem will be solved.

RoHS FC CE 
Made in China

500 mm