



Using your Ready Treat Ver2 for the first time:

- 1.) Your Ready Treat requires (3) "AAA" batteries for the base unit and (1) 9 volt battery for the transmitter.
- 2.) It is necessary to pair your base unit to your transmitter. When the batteries are first installed, the red light on the base unit will begin flashing. While the light is flashing, depress the transmitter button for 3 seconds until the red light change from flashing to constant. This change indicates the base unit has successfully paired with the transmitter. The device can now be used by pressing the transmitter button, the base unit door will open.
- 3.) If needed, you can reset the pairing of a base unit and transmitter. While the base unit is on, hold the on/off button down for 2 seconds, the base unit will enter pairing mode and the on/off light will begin flashing. Follow the step 2 to pair the device with the transmitter.

Tips for use of your Ready Treat Ver2:

- 1.) Your Ready Treat has a range of 50+ feet and will work equally well indoors or outdoors; sunlight no longer affects its range.
- 2.) Never force the door open. Use only the transmitter to actuate the door.
- 3.) The device will automatically turn off if left unattended for 10 minutes.
- 4.) Take time to introduce your dog to your Ready Treat; some dogs can be startled by the door opening.
- 5.) Keep excess moisture/saliva wiped off the device as this can cause the door to stick.
- 6.) Do not use on a dirt surface. Dirt and sand will cause the door to stick. Try setting on a carpet square or mat if you're training on dirt.
- 7.) Do not use wet or sticky treats. Kibble, training treats, dried/cooked meat, or cubed cheese are good choices.
- 8.) Clean your Ready Treat with any kitchen safe cleaner. Never submerge the device in water.
- 9.) We recommend that the door be left in the open position when not in use.

Changes or modifications not expressly approved by Clip And Go Agility LLC for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Trouble shooting:

If the door does not open, try the following:

- 1.) Install fresh batteries and follow the steps to "pair" the base unit to the transmitter.
- 2.) Make sure the device is on (The red light should be on).
- 3.) If you have questions or concerns, please contact the manufacturer directly.

On/Off
Button Indicator
 Light



Clip and Go Agility
9396 Fenton Road
Grand Blanc, MI 48439 USA
810-516-9167
mark@ClipAndGoAgility.com

Transmitter



Treat
Compartment

