

FRONT PANEL LIGHTS

The light on the front of the unit displays status information.



Light Color	Description
Solid white	Router: device is connected to the internet Extender: device is connected to the router
Solid amber	Extender has a poor connection to the router
Blinking white	Device is powering up
Blinking blue	Router: device is attempting to connect to the internet Extender: device is attempting to connect to the router
Rapidly blinking blue	Device is updating firmware. Do not remove from power.

LIMITED WARRANTY

MTRLC LLC warrants this product against defects in material and workmanship for a warranty period of 2 years. To read the full warranty, please visit:
www.motorolanetwork.com/warranty.

SAFETY NOTICES

- Devices are intended to be placed indoors in an environment that's between 32° and 104° F (0-40°C)
- Marking Information is located on the bottom of the product.
- The power adapter plug is used as the disconnect device. The socket-outlet must be located near the equipment and be easily accessible.
- Avoid water and spills
- Leave room for airflow around the device; do not block the vents on the rear or bottom.

LABEL SYMBOLS

Symbol	Indicates
	DC voltage
	AC voltage
	For indoor use only
	Class II equipment
	Energy efficient marking

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Additional FCC and Regulatory Compliance information can be found at:
www.motorolanetwork.com/MH760X.

MH7601

HELLO THERE

Set up your device with the **motosync app**:
motorolanetwork.com/sync

Download on the App Store

GET IT ON Google Play



NEED HELP?

Web

motorolanetwork.com/support

Email

support@motorolanetwork.com

IN THIS PACKAGE

MH7601 router / extender

1st device set up will be the router



Power adapter

1 per device



Ethernet cable

1 per package



MH7601 BUTTONS AND PORTS



WAN/LAN Port

- For the router, connect the Ethernet cable from this port to your internet device (e.g. modem)
- For an extender, this port can be used as a second LAN port to connect wired devices



USB-C Power

- Connect the supplied USB-C 5V 15W AC adapter




LAN Port

- LAN port to connect wired devices

PLACEMENT TIPS

We recommend placing your extender midway between the router and the desired WiFi coverage area. If you have multiple extenders, evenly space them throughout your home. See the example below.

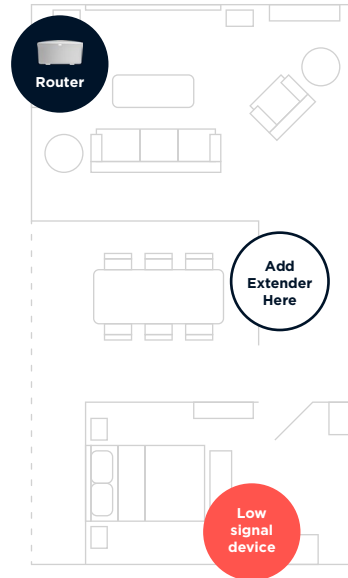

Avoid placement near large electronics like TVs and microwaves



Choose an elevated, uncovered location

