

VIDEO DOORBELL MANUAL Information to User




Information to User

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important: Change or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. RF Exposure Statement To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance of 20cm from the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

1. Appearance:

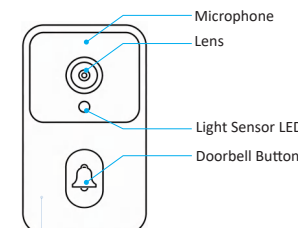

(Rear)Reset

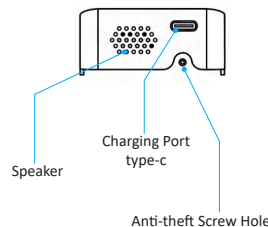


Download & Install the APP

Scan the QR code with your phone to download and install the app. After installation, register an account and sign in.(On IOS, download and install the app from the App Store.) App name: Elinko




 Register & Sign In

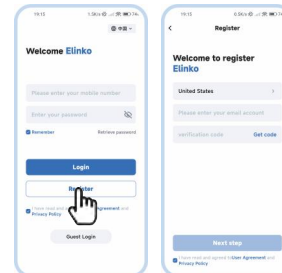

APP connection

 - (1) Open the APP and register to log in.
 - (2) Press and hold the doorbell button for 10 seconds, and you will hear the voice prompt: "The device has been reset. Please connect to the network!" (This enters the power distribution network mode.)
 - (3)Click the Add Device(+) and automatically scan devices (Picture 1) until the device is scanned,and click "Add" to bind immediately (Picture 2). Select 2.4GHz WiFi, and select your WiFi and enter WiFi password (Picture 3).
- (Note: 5G WiFi and Figure 3 are not supported).

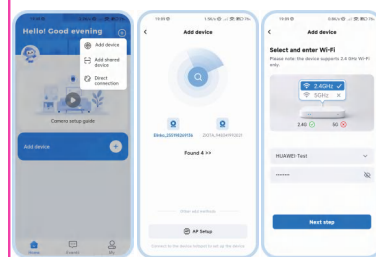


(Picture 1)

(Picture 2)

(Picture 3)

 - (4)There will be a voice prompt after successful binding : The device bound successfully!
- (5)Enter the device naming interface (Figure 4), After editing, you can view it on the APP homepage.

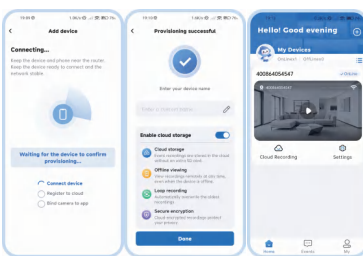

(Picture 4)


(Picture 5)

*If the equipment cannot be added for a long time, the device voice prompts:The networkconnection failed.Please reset the device! (Long press the doorbell key for 10 seconds to re-enter the distribution network mode)

3. APP Instruction


- (1) Video call: when visitor presses the doorbell, the APP will receive a message sent from the device, then can talk to visitor via video;
- (2) Doorbell sharing: the added device can be shared with others on the APP; The one to be shared needs to download the "Linklemon" APP and register to log in.
- (3) Low battery and charging: When the battery is low, the bound client-side will receive a low battery reminder (After receiving the low battery warning notice, please replace the battery in time to avoid affecting the use).

 Usage and Description of the DingDong Machine

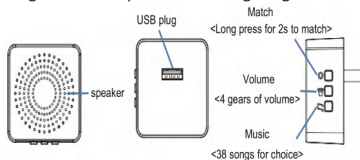


MATCHING OF DINGDONG MACHINE AND DOORBELL

 Step 1: Plug Ding dong machine into the 5V USB interface and get power(Diagram);

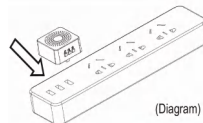


(Diagram)

Step 2: Power on the chime and hold Pair for 3 seconds. When the indicator turns blue, press the outdoor doorbell button to complete pairing.

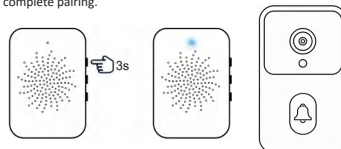


DEVICE INSTALLATION

1. Peel off the protective film from one side of the heavy-duty double-sided tape, then attach the tape to the back of the mounting plate.
2. Snap the mounting plate onto the back of the device.
3. Peel off the protective film from the other side of the adhesive, then attach the device to the wall.

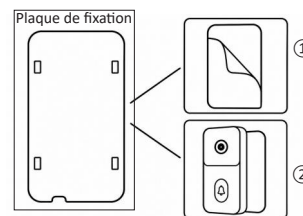

Plug the indoor chime into a wall outlet

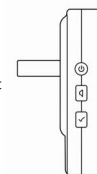

ATTENTIONS

1. Ensure the WiFi network is in good condition, and set permissions through the APP to use the product normally;
2. Try not to install it on metal door;
3. In the process of Ding dong matching, the doorbell should be as close to the Ding dong machine as possible;
4. Ensure doorbell battery is sufficient;
5. If the doorbell button is not pressed within 10 seconds after the Ding dong machine enters matching mode, matching mode will be finished and the light will off. If the matching fails, please try again;

* After the Ding dong machine is successfully connected to the doorbell, when visitor press the doorbell, Ding dong machine will ring and immediately send a response to the APP in your phone.