

blink outdoor **2K+**

Quick Start Guide

Getting started with Blink is easy

1. Open your Blink app.
2. Add your Outdoor 2K+ camera to an existing Blink system by tapping the plus sign (+).

We'd love to hear from you at
feedback@blink.com

IMPORTANT PRODUCT INFORMATION

SAFETY INFORMATION

READ ALL SAFETY INFORMATION BEFORE USING THE DEVICE. FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS COULD RESULT IN FIRE, ELECTRIC SHOCK, OR OTHER INJURY OR DAMAGE.

BATTERY SAFETY

The lithium batteries accompanying this device cannot be recharged. Do not open, disassemble, bend, deform, puncture, or shred the battery. Do not modify, attempt to insert foreign objects into the battery or immerse or expose to water or other liquids. Do not expose the battery to fire, explosion, high temperature or other hazard. Fires involving lithium batteries can usually be controlled with flooding with water, except in confined spaces where a smothering agent should be used.

If dropped and you suspect damage, take steps to prevent any ingestion or direct contact of fluids and any other materials from the battery with skin or clothes. If a battery leaks, remove all batteries and recycle or dispose of them in accordance with battery manufacturer's recommendations. If fluid or other material from the battery comes into contact with skin or clothes, flush skin or clothes with water immediately.

An open battery should never be exposed to water, as fire or explosion may result from exposure to water.

Insert the batteries in the proper direction as indicated by positive (+) and negative (-) markings in battery compartment. Always replace with non-rechargeable AA 1.5V Lithium batteries (lithium metal batteries) like those provided with and specified for this product.

Do not mix used and new batteries or batteries of different types (for example, Lithium and alkaline batteries). Always remove old, weak, or worn-out batteries promptly and recycle or dispose of them in accordance with applicable laws and regulations.

Other Safety Considerations

Your device can withstand outdoor use and contact with water under certain conditions. However, your device is not intended for underwater use and may experience temporary effects from exposure to water. Do not immerse your device in water. Do not spill any food, oil, lotion, or other abrasive substances on your device. Do not expose your device to pressurized water, high velocity water, or extremely humid conditions (such as a steam room). Do not expose your device or batteries to salt water or other conductive liquids. To protect against electric shock, do

not place cord, plug, or device in water or other liquids. If your device gets wet from immersion in water or high pressure water, carefully disconnect all cables without getting your hands wet and wait for them to dry completely before powering it on again. Do not attempt to dry your device or batteries with an external heat source, such as a microwave oven or a hair dryer. To avoid risk of electric shock, do not touch your device or batteries or any wires connected to your device during a lightning storm while your device is powered. If your device or batteries appears to be damaged, discontinue use immediately.

Protect your device from direct sunlight.

Use only accessories supplied with your device, or specifically marketed for use with your device, to power your device. Use of third-party accessories may impact your device's performance. In limited circumstances, use of third-party accessories may void your device's limited warranty. In addition, use of incompatible third-party accessories may cause damage to your device or the third-party accessory. Read all safety instructions for any accessories before using with your device..

WARNING: Small parts contained in your device and its accessories may present a choking hazard to small children.

CAUTION: When mounting this device in elevated locations, use precautions to ensure that the device does not fall and harm bystanders.

Protection Against Water

To reduce the risk of damage to your device, follow these instructions:

- Do not intentionally immerse your device in water or expose it to seawater, salt water, chlorinated water or other liquids (such as beverages).
- Do not spill any food, oil, lotion or abrasive substances on your device.
- Do not expose your device to pressurized water, high-velocity water or extremely humid conditions (such as a steam room).

If your device is dropped or otherwise damaged, the waterproofing of the device may be compromised.

For more information concerning care instructions and the waterproofing of your device, please see amazon.com/devicesupport

PRODUCT SPECIFICATIONS

Outdoor Camera 2K+

Model Number: BCM00900U

Electrical Rating: 2 x 1.5V AA Lithium Metal batteries, 5V DC, 1A
Operating Temperature: -4°F to 113°F (-20°C to 45°C)
IP65-Rated

FOR USA CUSTOMERS

Supplier's Declaration of Conformity

Device Name: Outdoor 2K+ Camera

Model: BCM00900U

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party and Party issuing Supplier's Declaration of Conformity: Amazon.com Services LLC, 410 Terry Avenue North, Seattle, WA 98109, U.S.A [**blink.com/contact-us**](https://blink.com/contact-us)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution, pursuant to Section 15.21 of the FCC rules, user changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with FCC radio frequency radiation exposure limits set forth for an uncontrolled environment. Information is on

file with the FCC and can be found by inputting such Product's FCC ID (which can be found on the app) into the FCC ID Search form available at fcc.gov/oet/ea/fccid. To access the e-label information in the app, choose: Device Settings > General Settings.

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other product antenna or transmitter.

RECYCLING YOUR DEVICE PROPERLY

In some areas, the disposal of certain electronic devices is regulated. Make sure you dispose of, or recycle, your device in accordance with your local laws and regulations. For information about recycling your device, go to amazon.com/devicesupport

ADDITIONAL SAFETY & COMPLIANCE INFORMATION

For additional safety, compliance, recycling and other important information regarding your device, please refer to the Legal and Compliance section of the About Blink menu in the Settings in your app or on the Blink website at: blink.com/safety-and-compliance

TERMS & POLICIES

By purchasing or using the product, you agree to the Terms of Service found at: [**blink.com/terms-of-service**](https://blink.com/terms-of-service)

LIMITED WARRANTY

For information on our warranty and any other applicable policy, visit: [**blink.com/blink-terms-warranties-and-notices**](https://blink.com/blink-terms-warranties-and-notices)

©2025 Amazon.com, Inc. or its affiliates.
Amazon, Alexa, Blink, and all related marks are
trademarks of Amazon.com, Inc. or its affiliates.

