

规格130x85MM 105克铜版纸 骑马钉



JUST ENJOY

MiFA MIFA INNOVATIONS LLC
www.mifa.net Designed in US Made in China

Copyright © MIFA. All rights reserved.
MIFA, the MIFA logo and other MIFA marks are all owned and registered by MIFA INNOVATIONS LLC. All other trademarks are the property of their respective owners. The information contained here is subject to change without prior notice.

MiFA



A3
Bluetooth Speaker

USER MANUAL ▶

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AFTA-A3

 
01 Warnings



- ◆To ensure proper use and trouble-free operation, please carefully read this user manual first. For the first use, a full charge is recommended.
- ◆Please use and store the product at room temperature.
- ◆Do not throw and drop the product to avoid damages.
- ◆Do not expose the product to fire, high temperature, direct sunlight, etc.
- ◆Do not use organic solvents or other chemicals to clean the product.
- ◆Do not allow small particles to get into the product.
- ◆Please charge the product with a rated power adapter.
- ◆Please keep volumes of the speaker moderate to avoid temporary or permanent hearing impairment.
- ◆Do not dissemble the product, or make any modifications to the structure or any parts of it.
- ◆Keep the product out of children's reach.

English

02 Packing Contents

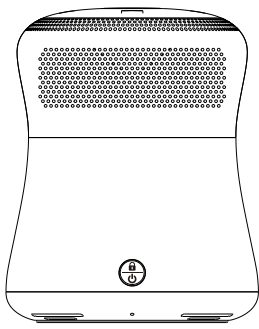


1 × A3 Bluetooth Speaker



1 × Micro USB Cable



 
1 × 3.5 mm Audio Cable

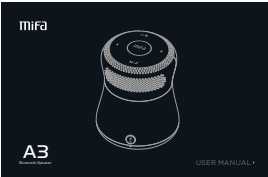

1 × User Manual

English

 03 Touch Buttons

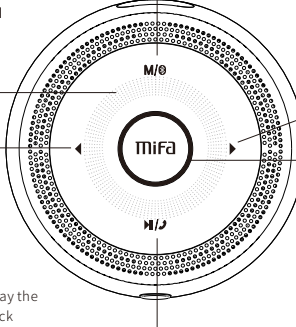

Mode Button
Press it to change modes in turns as followed:
Bluetooth mode -- Micro SD card mode -- AUX-in mode (when working with a Micro SD card and an Audio cable)

Bluetooth Button
Press and hold it for 3 seconds to disconnect the speaker with the paired device and then the speaker can be detected by other devices; Press  to reconnect it with the last paired device.

NEXT
Press it to play the next track.

 
Status LED Indicator
Bluetooth connection indicator: it flickers when no devices connect with the speaker; it keeps on when a device connects with the speaker.
Volume indicator: it flickers when the volume reaches the highest or the lowest.
Charging Indicator: it flickers in red when charging; it goes out upon completion of charging.
Other: it flickers when the playing is paused.

Pause/Call Answer Button
Press it to pause / continue the music.
When a call comes: press it to answer or hang up the call; press and hold it to reject the call.


Prompt: The LED Indicator will go out automatically if there are no manual operations for 1 minute and will be on when touched again.

English

04 Power Button + Volume Control

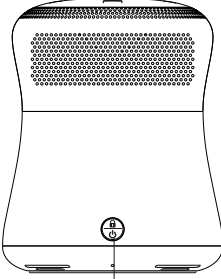

 Power Button
Press and hold it to turn on / off the speaker
Press it to lock / unlock the touch buttons

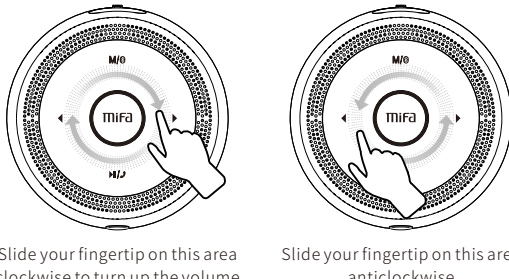


Slide your fingertip on this area clockwise to turn up the volume
Slide your fingertip on this area anticlockwise to turn up the volume

Prompt: please smoothly and continuously slide your fingertip when adjusting the volume and do not stop your fingertip on other buttons.

English

 05 Interfaces Function

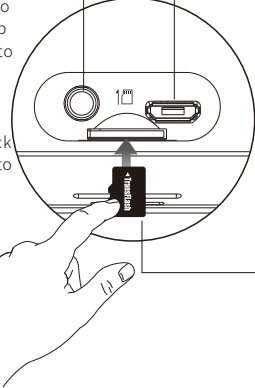

AUX-in Jack
Connect it with an external audio device with an audio cable. There will be a beep and the speaker enters into Aux Mode automatically

Reset Button in the jack
Press the button in the jack with a needle-like object to reset the speaker

Charging
Charge the speaker with a DC 5V--1A USB adapter

Data Transmission
In the power-off status, insert a Micro SD card in the slot and connect the speaker to a computer via the USB cable, and then press the power button. After a beep, you can copy files into the card.

Music Play with Micro-SD Card
In the power-on status, insert a Micro-SD card in the slot. There will be a beep and then the speaker will play

English

 
06 Bluetooth Connection

1. Power on the speaker
Press and hold the power button for 2 seconds to turn on the speaker. It will issue a sound of *Ding* indicating that the speaker can be detected and the status LED flickers indicating that it's waiting for connection.

2. Connect with a Bluetooth device
Activate the Bluetooth of your mobile device and search for MiFa_A3. Select it for connection. Upon the completion of connection, it will beep and the status LED will keep on. Then it's ready for playing music.

It will automatically reconnect to the last paired Bluetooth device next time if the Bluetooth keeps activated.


Connect with another device
Press and hold the button  for 2 seconds to disconnect the current device. It then can be detected by other devices.

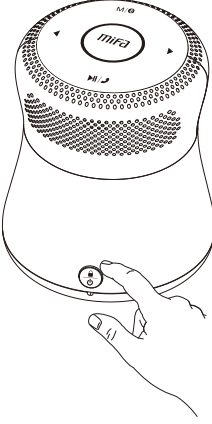

English

07 Specifications

Basic Parameters	
Speaker Type	Bluetooth Speaker
Control Mode	Button
Supported Storage	Up to 32 GB Micro SD card (FAT32)
Power Source	Built-in 1800 mAh Lithium battery DC5V--1A USB Adapter
Technical Parameters	
Loudspeaker	2.5 inches + Low frequency amplifier
Output Power	10W
Frequency Response	150Hz~18KHz
Bluetooth Standard	4.2
USB Standard	USB 2.0 (compatible with USB 1.1)
Playing Parameters	
Supported Media Type	APE,FLAC,WAV,WMA,MP3

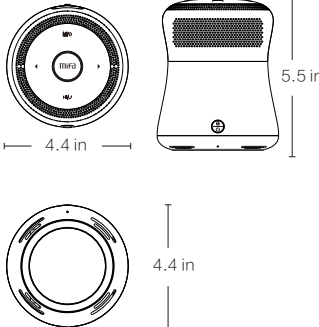 

Size: 4.4 × 4.4 × 5.5 in / 112 × 112 × 140 mm
Weight: 15.6 oz / 443 g (including the built-in Lithium battery)

English

08 Troubles Shooting

FAQ	Solutions
Not able to connect to your device	1. Restart the speaker and try again 2. If your device requires a Pin Code, please enter 0000
Keeps cutting out when playing	Please ensure the speaker is within the operating range and there are no obstacles between the speaker and the device
Not able to play the music in Micro SD card	1. Please ensure the format of the Micro SD card is FAT32. It only supports FAT32 Micro SD card 2. Please ensure the formats of the music files are APE, FLAC, WAV, WMA or Mp3
No sound when playing.	1. Please adjust the volume of the speaker 2. Please adjust the volume of your device 3. Please check if the speaker is paused
No sound in AUX-in mode	Please ensure the audio cable is connected well
Not able to turn on	Please try to charge the speaker for about 3 hours
No respond to any operation	Please try to reset the speaker by pressing the reset button in the AUX-in jack

MiFA MIFA INNOVATIONS LLC
www.mifa.net Designed in US Made in China

Copyright © MIFA. All rights reserved.
MIFA, the MIFA logo and other MIFA marks are all owned and registered by MIFA INNOVATIONS LLC. All other trademarks are the property of their respective owners. The information contained here is subject to change without prior notice.

English