

	01 - 10	English
	01 - 10	簡體中文
	11 - 19	日本語
Table of Contents	20 - 29	Deutsch
	30 - 39	Français
	40 - 49	Español
	50 - 59	Italiano
	01	Warnings
		 ● To ensure proper use and trouble-free operation, please carefully read this user manual first. ● For the first use, a full charge is recommended. ● Please use and store the product at room temperature. ● Do not throw and drop the product to avoid damages. ● Do not expose the product to fire, high temperature, direct sunlight, etc. ● Do not use organic solvents or other chemicals to clean the product. ● Do not allow small particles to get into the product. ● Please keep volumes of the speaker moderate to avoid temporary or permanent hearing impairment. ● Do not disassemble the product, or make any modifications to the structure or any parts of it. ● Keep the product out of children's reach.

Alarm



Activate the alarm

- Press and hold the Mode button. The screen will display **OFF** and the alarm icon flickers.
- Press the PREV or NEXT button to activate the alarm and the screen displays **ON**.
- Press the Alarm button to choose how long the alarm will sound.
- Press the PREV or NEXT button to turn the alarm on or Minute and then press the Alarm button to save it and go to the next interface. After setting, the alarm can keep on.



Turn off the alarm

- Press and hold the Mode button. The screen displays **OFF** and the alarm icon flickers.
- Press the PREV or NEXT button to turn off the alarm and the screen displays **OFF**.
- Press the Alarm button to save the setting and stop.

Other instructions:

When the alarm rings, press any button except the Alarm button to enter snooze mode. Then the alarm will pause and ring again after 20 minutes.

Press the Alarm button to stop the alarm when it rings and you will hear a beep.

Interfaces Functions

Ask in Jack

Connect it to a device on an audio cable and it is a sound of Ding Ding indicating the Ask in Jack Mode.

Reset button

There is a reset button in the jack. It can be pushed by a small object like a pen tip to reset the speaker.



Charging

Charge the speaker with a DC-5V 2A 1A USB cable.

Data Transmission

When the screen is turned off, insert a Micro-SD card and then connect the cable. Press the power button and then the screen displays the Micro-SD card. You can copy or save files from the Micro-SD card.



Micro-SD Card Playing

Turn on the screen and insert a Micro-SD card. There is a sound of Ding Ding and then the movie file automatically.

Power Buttons: Press and hold them for 5 seconds to turn on the screen. Pressing Brightness Adjustment buttons will adjust the brightness. It provides 7 levels of brightness.



Bluetooth Connection

1. Turn on the speaker

Press and hold the Power button for 2 seconds. It shows a sound of Ding Dong and the Bluetooth icon flickers on the screen indicating it can be detected.



2. Pair the Bluetooth device

Activate the Bluetooth on your device and search for **WA_A30**. Select device to connect the clock. It keeps and the Bluetooth icon comes on the case during a successful.

The speaker will be connected to the device nearby automatically if the Bluetooth is activated in the future.

Other instructions:

If you want to pair the speaker with another device, press and hold the Bluetooth button to disconnect the current device and the speaker becomes detectable.

TWS Function

1. Set up the TWS system

Turn on the A20 speakers and connect two of them with a timing with automatic device. Press and hold the speaker's Bluetooth button. It shows Ding Dong and the speaker begins to connect with the other one. After a sound of Ding Dong, the TWS system has been set up successfully.

**For the first time setting up the TWS system, this speaker will act as the main speaker and the other will act as the corresponding speaker.*



2. Connect to Bluetooth device

Activate the Bluetooth of your device and search for **WA_A30**. Select device to connect. It keeps and the Bluetooth icon comes up indicating a successful connection between the device and the speakers.

3. Disable the system

Press and hold the speaker's Bluetooth button to disconnect the device and disable the TWS system. Press the Bluetooth button to set up the TWS system.

Other instructions:

- The TWS system supports two speakers only.
- The main speaker is the left channel and the corresponding speaker is the right channel.
- Under the TWS system, you just need to operate either speaker. The other will do the same operation simultaneously.
- Under the TWS system, you can play music on the speaker at an AEC mode. The TWS system does not support music 32 code mode.

1 Specifications	English	1 Troubles Shooting	English																																								
<table border="1"> <thead> <tr> <th data-bbox="517 1845 639 1850">Basic Information</th></tr> </thead> <tbody> <tr> <td data-bbox="517 1850 639 1854">Speaker</td></tr> <tr> <td data-bbox="517 1854 639 1861">Type Bluetooth Speaker</td></tr> <tr> <td data-bbox="517 1861 639 1865">Supported Device iPhone/iPad/Android/iOS and PC/Laptop</td></tr> <tr> <td data-bbox="517 1865 639 1870">Supported Storage</td></tr> <tr> <td data-bbox="517 1870 639 1874">Built-in 4GB/8GB ROM (firmware storage)</td></tr> <tr> <td data-bbox="517 1874 639 1879">Memory Card</td></tr> <tr> <td data-bbox="517 1879 639 1883">SD/TF (Micro SD) (max. 32GB) (not for voice recorder)</td></tr> <tr> <th data-bbox="517 1883 639 1888">Technical Parameters</th></tr> <tr> <td data-bbox="517 1888 639 1892">Localization</td></tr> <tr> <td data-bbox="517 1892 639 1897">Supports internal memory playback + external speaker + external frequency amplifier</td></tr> <tr> <td data-bbox="517 1897 639 1901">Power Output</td></tr> <tr> <td data-bbox="517 1901 639 1906">Power Frequency Response</td></tr> <tr> <td data-bbox="517 1906 639 1910">Frequency Response</td></tr> <tr> <td data-bbox="517 1910 639 1915">Bluetooth Standard</td></tr> <tr> <td data-bbox="517 1915 639 1919">USB Standard</td></tr> <tr> <td data-bbox="517 1919 639 1926">Supported Media Type</td></tr> </tbody> </table>	Basic Information	Speaker	Type Bluetooth Speaker	Supported Device iPhone/iPad/Android/iOS and PC/Laptop	Supported Storage	Built-in 4GB/8GB ROM (firmware storage)	Memory Card	SD/TF (Micro SD) (max. 32GB) (not for voice recorder)	Technical Parameters	Localization	Supports internal memory playback + external speaker + external frequency amplifier	Power Output	Power Frequency Response	Frequency Response	Bluetooth Standard	USB Standard	Supported Media Type		<table border="1"> <thead> <tr> <th data-bbox="834 1845 930 1850">FAQ</th><th data-bbox="930 1845 1082 1850">Solutions</th></tr> </thead> <tbody> <tr> <td data-bbox="834 1850 930 1854">No sound connects to phone</td><td data-bbox="930 1850 1082 1854">1. Bluetooth speaker and phone again.</td></tr> <tr> <td data-bbox="834 1854 930 1861">No sound connects to PC/laptop</td><td data-bbox="930 1854 1082 1861">2. Press down speaker's BT+CAW button after 3000.</td></tr> <tr> <td data-bbox="834 1861 930 1865">Audio cutting when playing</td><td data-bbox="930 1861 1082 1865">1. Press down speaker's BT+CAW button when there are no obstacles between the speaker and the device</td></tr> <tr> <td data-bbox="834 1865 930 1870">No sound when playing</td><td data-bbox="930 1865 1082 1870">1. Press down speaker's BT+CAW button when there are no obstacles between the speaker and the device</td></tr> <tr> <td data-bbox="834 1870 930 1874">No sound when playing</td><td data-bbox="930 1870 1082 1874">2. Press down the button of the music file (MP3, FLAC, WAV, etc.) on the speaker</td></tr> <tr> <td data-bbox="834 1874 930 1879">No sound when playing</td><td data-bbox="930 1874 1082 1879">3. Press down the button of the music file (MP3, FLAC, WAV, etc.) on the speaker</td></tr> <tr> <td data-bbox="834 1879 930 1883">No sound when playing</td><td data-bbox="930 1879 1082 1883">2. Press down the button of the music file (MP3, FLAC, WAV, etc.) on the speaker</td></tr> <tr> <td data-bbox="834 1883 930 1888">No sound when playing</td><td data-bbox="930 1883 1082 1888">3. Press down the button of the music file (MP3, FLAC, WAV, etc.) on the speaker</td></tr> <tr> <td data-bbox="834 1888 930 1892">No sound when playing</td><td data-bbox="930 1888 1082 1892">Please check the audio (not a corrupted file)</td></tr> <tr> <td data-bbox="834 1892 930 1897">No sound when playing</td><td data-bbox="930 1892 1082 1897">Please check the audio (not a corrupted file)</td></tr> <tr> <td data-bbox="834 1897 930 1901">No sound when playing</td><td data-bbox="930 1897 1082 1901">Please try to reset the speaker by pressing the reset button on the back again</td></tr> </tbody> </table>	FAQ	Solutions	No sound connects to phone	1. Bluetooth speaker and phone again.	No sound connects to PC/laptop	2. Press down speaker's BT+CAW button after 3000.	Audio cutting when playing	1. Press down speaker's BT+CAW button when there are no obstacles between the speaker and the device	No sound when playing	1. Press down speaker's BT+CAW button when there are no obstacles between the speaker and the device	No sound when playing	2. Press down the button of the music file (MP3, FLAC, WAV, etc.) on the speaker	No sound when playing	3. Press down the button of the music file (MP3, FLAC, WAV, etc.) on the speaker	No sound when playing	2. Press down the button of the music file (MP3, FLAC, WAV, etc.) on the speaker	No sound when playing	3. Press down the button of the music file (MP3, FLAC, WAV, etc.) on the speaker	No sound when playing	Please check the audio (not a corrupted file)	No sound when playing	Please check the audio (not a corrupted file)	No sound when playing	Please try to reset the speaker by pressing the reset button on the back again
Basic Information																																											
Speaker																																											
Type Bluetooth Speaker																																											
Supported Device iPhone/iPad/Android/iOS and PC/Laptop																																											
Supported Storage																																											
Built-in 4GB/8GB ROM (firmware storage)																																											
Memory Card																																											
SD/TF (Micro SD) (max. 32GB) (not for voice recorder)																																											
Technical Parameters																																											
Localization																																											
Supports internal memory playback + external speaker + external frequency amplifier																																											
Power Output																																											
Power Frequency Response																																											
Frequency Response																																											
Bluetooth Standard																																											
USB Standard																																											
Supported Media Type																																											
FAQ	Solutions																																										
No sound connects to phone	1. Bluetooth speaker and phone again.																																										
No sound connects to PC/laptop	2. Press down speaker's BT+CAW button after 3000.																																										
Audio cutting when playing	1. Press down speaker's BT+CAW button when there are no obstacles between the speaker and the device																																										
No sound when playing	1. Press down speaker's BT+CAW button when there are no obstacles between the speaker and the device																																										
No sound when playing	2. Press down the button of the music file (MP3, FLAC, WAV, etc.) on the speaker																																										
No sound when playing	3. Press down the button of the music file (MP3, FLAC, WAV, etc.) on the speaker																																										
No sound when playing	2. Press down the button of the music file (MP3, FLAC, WAV, etc.) on the speaker																																										
No sound when playing	3. Press down the button of the music file (MP3, FLAC, WAV, etc.) on the speaker																																										
No sound when playing	Please check the audio (not a corrupted file)																																										
No sound when playing	Please check the audio (not a corrupted file)																																										
No sound when playing	Please try to reset the speaker by pressing the reset button on the back again																																										

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.