

G7 PRO

PC & Mobile Wireless,
Xbox Wired Tri-Mode Controller

Scan the code for more tutorials
https://gamesir.com/pages/tutorials-manuals



G7 PRO

PC & Mobile Wireless,
Xbox Wired Tri-Mode Controller

掃碼獲取更多教程
https://gamesir.com/pages/tutorials-manuals



G7 PRO

PC & Mobile Wireless,
Xbox Wired Tri-Mode Controller

Code für weitere Anleitungen scannen
https://gamesir.com/pages/tutorials-manuals



G7 PRO

PC & Mobile Wireless,
Xbox Wired Tri-Mode Controller

Scannez le code pour plus de didacticiels
https://gamesir.com/pages/tutorials-manuals



G7 PRO

PC & Mobile Wireless,
Xbox Wired Tri-Mode Controller

Scansiona il codice per accedere a più tutorial
https://gamesir.com/pages/tutorials-manuals



 
G7 PRO

PC & Mobile Wireless,
Xbox Wired Tri-Mode Controller

Escanee el código para obtener más tutoriales
https://gamesir.com/pages/tutorials-manuals




DEVICE LAYOUT

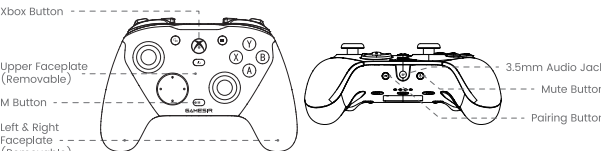


設備佈局



 
GERÄTELAYOUT

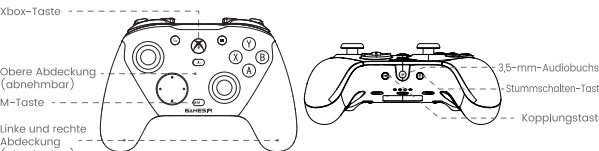


PRÉSENTATION DE L'APPAREIL

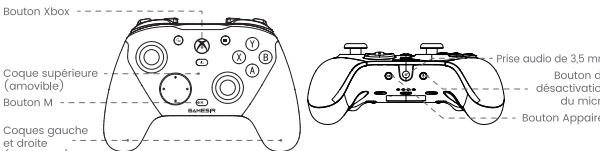 

LAYOUT DEL DISPOSITIVO

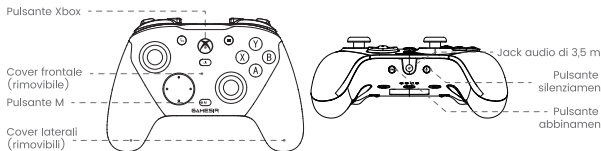 

DISPOSICIÓN DEL DISPOSITIVO

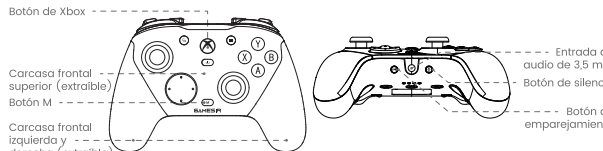 

BASIC FUNCTION INTRODUCTION

CONNECTION STATE

Xbox Indicator	Description
Breathing	Reconnecting State *It can connect to previously paired devices.
Running Light Effect (Sequentially lighting up)	Pairing State (Bluetooth Mode) *In this state, it can be discovered and paired with devices.
Solid	Connection Successful
Off	Power-off State *The controller will enter power-off state after 10 minutes of inactivity in 2.4G or Bluetooth mode.

OPERATING INSTRUCTIONS

Description	Operation
Power On/Off	Short press the Xbox button to power on. While powered on, press and hold the Xbox button for 5 seconds to power off.
Pairing	In Bluetooth mode, press and hold the pairing button for 2 seconds to enter forced pairing mode.
Preset Configuration Switching	M+Y Default Configuration M+B Configuration 1 M+A Configuration 2 M+X Configuration 3
Hair Trigger Mode	Enable/disable hair trigger mode Press and hold the M button + LT/RT button for 2 seconds
Low Battery	When the battery is below 15%, the Xbox indicator will flash red. You can charge the controller via the Type-C port or the charging station.
Charging	

WINDOWS CONNECTION TUTORIAL

WIRED CONNECTION
1. Use the included Type-C cable to connect the controller to your computer, then press the Xbox button briefly to power on.
2. Once connected successfully, the Xbox indicator will remain solid.

RECEIVER CONNECTION
1. Insert the receiver into the computer.
2. Toggle the controller's mode switch to the 2.4G mode, and press the Xbox button briefly to power on. Wait for the controller to connect.
3. Once connected successfully, the Xbox indicator will remain solid.

ANDROID CONNECTION TUTORIAL

BLUETOOTH CONNECTION
1. Toggle the controller's mode switch to the Bluetooth mode, and press the Xbox button briefly to power on.
2. Open the Bluetooth list on your phone, find the device named Gamesir-G7 Pro, and click to connect.
* If the connection is unsuccessful, press and hold the pairing button on the controller to re-enter pairing status.

XBOX CONNECTION TUTORIAL

WIRED CONNECTION
1. Use the included Type-C cable to connect the controller to the Xbox console, then press the Xbox button briefly to power on.
2. Once connected successfully, the Xbox indicator will remain solid.
* Only supports wired connection.

CUSTOMIZATION VIA "GAMESIR NEXUS" SOFTWARE

Download the "Gamesir Nexus" software from the Microsoft Store on Xbox/PC or from gamesir.com.

PLEASE READ THIS PRECAUTIONS CAREFULLY

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in direct sunlight or dusty environment.
- DO NOT touch the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT use any liquid or other fluids to clean the product.
- Use a soft, dry cloth when cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact Gamesir or your local distributor.

WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION

CORRECT DISPOSAL OF THE PRODUCT (WASTE ELECTRICAL & ELECTRICAL EQUIPMENT)
Applicable in the European Union and other European countries with separate collection systems.

This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your product to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment. If you do so, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

DECLARATION OF CONFORMITY

FCC WARNING
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--- Reorient or relocate the receiving antenna.
--- Increase the separation between the equipment and receiver.
--- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--- Consult the dealer or an experienced radio/television technician for help.
Be aware that any changes or modifications to the equipment may result in permanent damage to the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable reception without restriction.

IC CAUTION

This device contains licence-exempt transmitter(s) and/or receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

STATEMENT OF COMPLIANCE WITH EU DIRECTIVE

Guangzhou Chicken Run Network Technology Co., Ltd. declares that this Gamesir G7 Pro Controller is in compliance with Directive 2014/53/EU, 2014/53/EU & 2011/65/EU and its amendment (EU) 2015/863.



The power provided by the charger is between the minimum 1W required by the radio device and the maximum 5W to achieve the maximum charging speed.

WARNINGS AND SAFETY INFORMATION
All information regarding the use of the products can be found in the attached user manual. Before using the product, please read the manual carefully and follow the manufacturer's recommendations. Also, please review the following safety information and warnings before use:

JUST IN GAME.

Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X, Xbox Series S, Xbox Series X|S, Xbox One, Xbox Game Pass, Windows 10/11 are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.



JUST IN GAME.

Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X, Xbox Series S, Xbox Series X|S, Xbox One, Xbox Game Pass, Windows 10/11 are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.



JUST IN GAME.

Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X, Xbox Series S, Xbox Series X|S, Xbox One, Xbox Game Pass, Windows 10/11 are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.



JUST IN GAME.

Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X, Xbox Series S, Xbox Series X|S, Xbox One, Xbox Game Pass, Windows 10/11 are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.



JUST IN GAME.

Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X, Xbox Series S, Xbox Series X|S, Xbox One, Xbox Game Pass, Windows 10/11 are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.



JUST IN GAME.

Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X, Xbox Series S, Xbox Series X|S, Xbox One, Xbox Game Pass, Windows 10/11 are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.

