

GAMESIR X5s

Wireless Game Controller

Scan the code for more tutorials →

<https://www.gamesir.com/pages/manuals-gamesir-x5s>




PACKAGE CONTENTS

X5s Controller *1 Type-C Cable (1 m) *1 Silicone Pad *2 User Manual *1
Thank You & After-sale Service Card *1 GameSir Sticker *1 Certification *1

COMPATIBILITY

• Android 8.0 or above • iOS 13 or above • Switch • Windows 10 or above

DEVICE LAYOUT

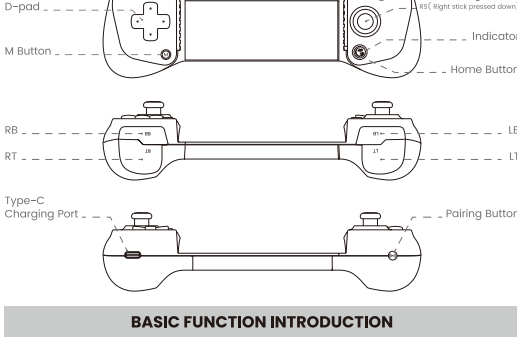

BASIC FUNCTION INTRODUCTION

BASIC OPERATION

POWER ON	Press and hold the Home button for 1 second when the controller is stretched or retracted.
POWER OFF	Press and hold the Home button for 5 seconds to power off.
STANDBY	The controller will automatically power off if there is no operation while in connection status for 10 minutes.
LOW BATTERY	When the battery is below 15%, the indicator will flash in red.
CHARGING	The controller can be charged via the Type-C cable. When charging while the controller is off, the indicator will indicate the charging progress with a breathing light effect.
CHECK MODE	Press and hold the M button to view the current mode through the color of the Home indicator.

CONNECTION STATUS

STATUS	INDICATOR	DESCRIPTION
Connection Successful	Solid	The device is connected successfully.
Pairing Status	Flash Rapidly	In pairing status, it can be discovered and connected by new device.
Reconnecting Status	Flash Slowly	In reconnecting status, it automatically connects to the last successfully connected device. Press and hold the Pairing button to forcefully switch to pairing status.

PLATFORM AND MODE

PLATFORM	MODE	INDICATOR	SWITCH METHOD
Android	Android Mode	Yellow	Hold for + 2s
PC/Android/iOS	DS4 Mode	Dark Blue	Hold for + 2s
Switch/iOS	Switch Mode	Red	Hold for + 2s
Android	G-Touch Mode	Light Blue	Hold for + 2s

SWITCH CONNECTION TUTORIAL

BLUETOOTH CONNECTION

- Go to Switch main menu, then select Controller--Change Grip/Order to enter pairing status.
 - Press and hold + until the indicator flashes rapidly in red, then wait for the connection.
 - A solid indicator indicates that the connection is successful.
- *If the connection is unsuccessful, press and hold to re-enter pairing status.

ANDROID CONNECTION TUTORIAL

- Press and hold + until the indicator flashes rapidly in yellow.
 - Open the Bluetooth list on your phone, select "GameSir-X5s", and click to connect.
 - A solid indicator indicates that the connection is successful.
- *If the connection is unsuccessful, press and hold to re-enter pairing status.

G-TOUCH MODE CONNECTION TUTORIAL

- Press and hold + until the indicator flashes rapidly in light blue.
 - Open the Bluetooth list on your phone, select "GameSir-X5s_G", and click to connect.
 - A solid indicator indicates that the connection is successful.
- *If the connection is unsuccessful, press and hold to re-enter pairing status.

iOS CONNECTION TUTORIAL 1

- Press and hold + until the indicator flashes rapidly in red.
 - Open the Bluetooth list on your phone, select "Pro Controller", and click to connect.
 - A solid indicator indicates that the connection is successful.
- *If the connection is unsuccessful, press and hold to re-enter pairing status.

iOS CONNECTION TUTORIAL 2

- Press and hold + until the indicator flashes rapidly in dark blue.
 - Open the Bluetooth list on your phone, select "DUOLSHOK 4 Wireless Controller", and click to connect.
 - A solid indicator indicates that the connection is successful.
- *If the connection is unsuccessful, press and hold to re-enter pairing status.

CONNECT TO A DEVICE VIA WIRED CONNECTION

- Use the included Type-C cable to connect, and the controller will automatically recognize the device.
 - After connecting, the controller will automatically switch to the corresponding mode and can be used normally. Press and hold + to switch between Xbox/Switch/DS4 mode in sequence.
- *For Switch: After connecting to the Switch via wired connection, go to "System Settings - Controllers and Sensors - Pro Controller Wired Communication" and enable this feature.
- *This mode switching method is only supported when using a receiver or a wired connection.

ADVANCED TUTORIAL

BUTTON COMBINATION FUNCTION

FUNCTION	BUTTON COMBINATION	DESCRIPTION
Toggle Stick's Dead Zone	+ LS/RS	Press and hold the M button and push down on the left /right stick to toggle the corresponding stick's dead zone.
Activate Turbo Function	+ Button	While holding the M button, press A/B/X/Y/LB/RB/LT/RT to activate the Turbo function for that button. Repeat this operation to deactivate. *Press and hold the M button and Home button for 2 seconds to clear all Turbo settings.
Adjust Vibration Intensity	+	While holding the M button, press D-pad Up/Down to increase/decrease the vibration intensity level.
Toggle Hair Trigger Mode	+	Press and hold the M button + LT/RT trigger to toggle the hair trigger mode.
Switch Layout	+	Press and hold the M button and A button to swap button values of A-B and X-Y.
Adjust Volume	+	While holding the Home button, press D-pad Up/Down to increase/decrease volume. *Only works in Android mode.

CALIBRATION

STICKS & TRIGGERS

Hold + + simultaneously to enter calibration mode. The indicator will flash slowly in white during this process. At this point, push both sticks all the way to their limits and rotate them 2-3 times. Press both triggers fully down with appropriate pressure for 3 times. Finally, press to exit. The indicator will return to its normal state.

GYROSCOPE

Place the controller on a stable, flat surface. Hold + simultaneously, and the gyroscope will automatically begin calibration. During calibration, the indicator will flash in red and blue alternately. When the indicator returns to its original light effect, the calibration is complete.

SILICONE PAD REPLACEMENT

GameSir-X5s features a swappable silicone pad design on both sides, allowing users to customize the pad thickness based on their device. When installing, ensure the thicker side of the silicone pad faces upward and the thinner side faces downward.

- For devices like mobile phones, use the or silicone pads based on the camera size.
- For devices like Switch, use the silicone pads.
- Ensure the edges of the silicone pads fit securely against the controller to prevent them from falling off.

*The ABXY buttons feature a detachable design, allowing users to pull them out and switch the layout between and .



CUSTOMIZE CONFIGURATION VIA THE "GAMESIR" APP

Go to the [gamesir.com](https://www.gamesir.com) website on your phone or scan the QR code on the right to download the "GameSir" app



PLEASE READ THIS PRECAUTIONS CAREFULLY

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.



WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION

CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRICAL EQUIPMENT)

This mark on the European Union and other European countries with separate collection systems. This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier for further information. If you do so, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

DECLARATION OF CONFORMITY



FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



STATEMENT OF COMPLIANCE WITH EU DIRECTIVE

Hereby, Guangzhou Chicken Run Network Technology Co., Ltd. declares that this GameSir-X5s Controller is in compliance with Directive 2014/30/EU, 2014/53/EU & 2011/65/EU and its amendment (EU) 2015/863.



The power provided by the charger is between the minimum 1W required by the radio device and the maximum 5W to achieve the maximum charging speed.

Just in Game

[CUSTOMER SERVICE]

www.gamesir.com/pages/we-are-gamesir-global

