

F

E

D

C

B

A

F

E

D

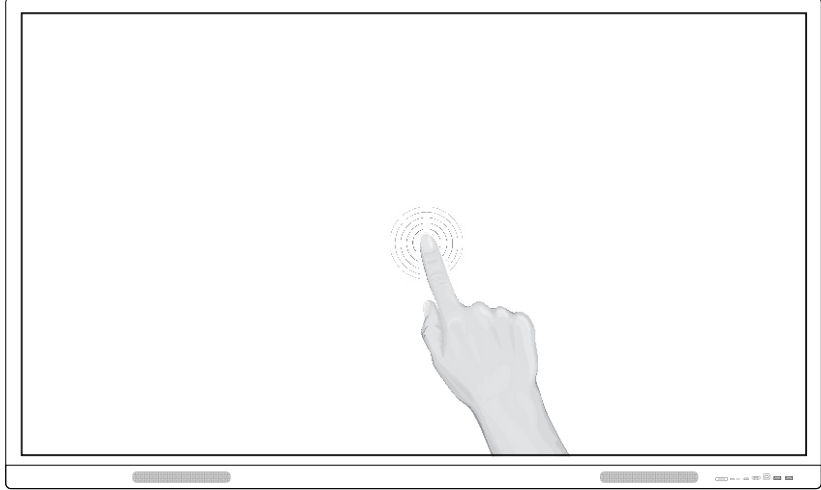 
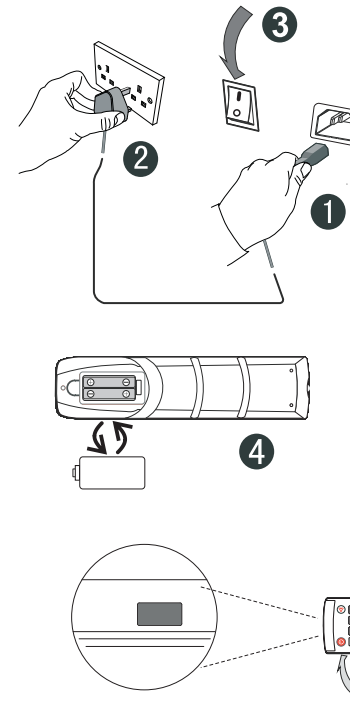 
C

B

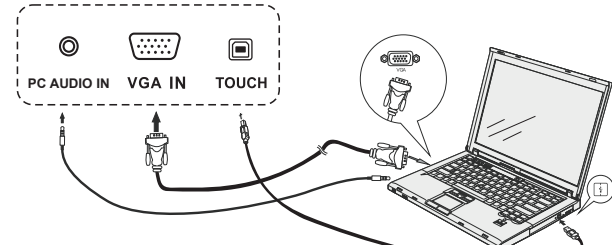 
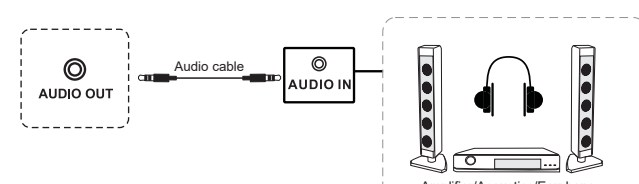 
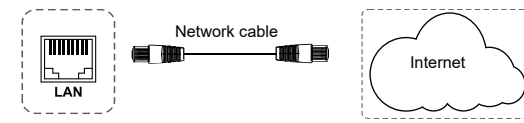 
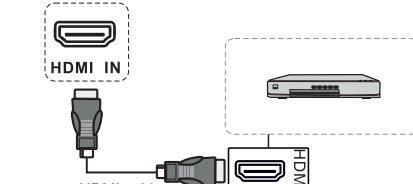 
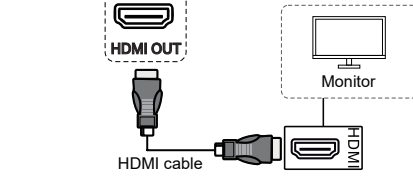 
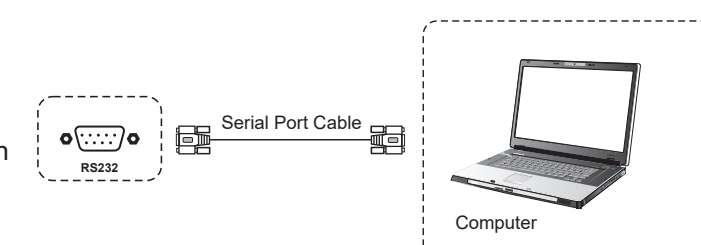 
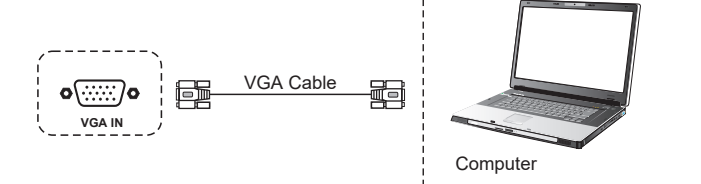 
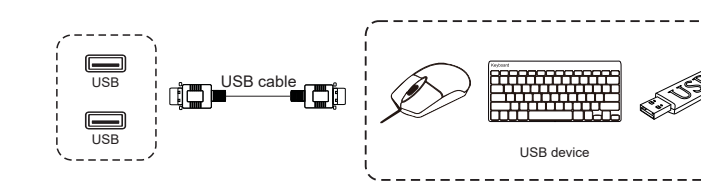 
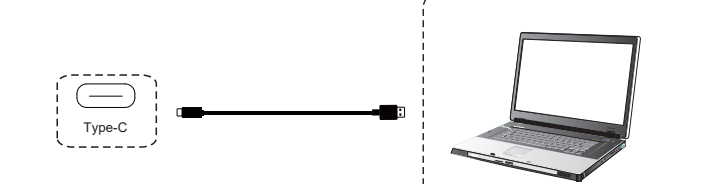 
A

87654321

REVISIONS RECORD			
REVISION	DESCRIPTION	DATE	REVISED BY
V1.2	增加垃圾桶警语	2023/05/02	刘建东
V1.3	增加接地警语	2024/01/04	刘建东
			刘建东

Quick Start Guide Interactive Intelligent Panel  *Image shown here is indicative only. If there is any inconsistency between the image and the actual product you receive, the actual product will govern.	2/8		3/8	4/8
	Thank you for supporting this product. This quick user guide will help you safely connect and use Interactive Intelligent Panel. If you have any question, please refer to the instruction. Safety Warning Placement Do not place the unit on an unstable cart, stand, tripod, bracket, table, or shelf. Do not expose the unit to direct sunlight and other sources of heat. Do not put the unit near appliances that generate magnetic fields. Do not handle liquids near or on the unit. Never spit liquid of any kind into the unit. Do not put heavy objects on top of the unit. Power Supply Check that the unit's operating voltage is identical with the your local power supply. Please unplug power supply and aeral plug when the weather is thunder-storm or lightning. Please unplug power supply, when there is nobody at home or don't use over a long period of time . Please keep power cord from physical or mechanical damage. Please use exclusive power cord, don't modify or lengthen it. Please check and ensure AC source is connected with the ground. LED Screen Never use any other hard or sharp object to replace the written pen. Unplug the power supply before cleaning. Clean the screen with a soft , dustless and dry cloth. Never use water or the spray type detergent to clean the unit. For deep clean, contact an authorized service center. Please don't display the high brightness image on the screen for a long time. Sight Distance The best distance between audience and screen is 3-4 times that of screen diagonal length. The best watching angle between audience and screen as top and bottom, or so inside 176 degrees. Temperature Do not place the unit near or over a radiator or a heater register. If your unit is suddenly moved from a cold to a warm place, unplug the power cord for at least two hours to let that moisture may have formed inside the unit can dry completely. Normal operating temperature is 0~40℃. Humidity Do not expose the unit in rain, damp or place near water .		Ventilation Keep the ventilation smoothly. Ensure that the unit has enough space for ventilation Around: left, right and back >10cm, top> 20cm. Earphone It will effect the hearing while using the earphone listen to noisy sound for a long time. Before using earphone, please turn down the volume in advance. Standby It will enter standby mode but not turn off the unit when press the standby key. Battery Accurate transaction and recall scrap battery after using. To avoide dangerous, do not let kid touch the battery. Notes for Cleaning There are heat sinking hose on back cover, do not spray water. Power Switch Status Signs "I" means power on, "O" means power off. Notes for Maintenance This machine can only be maintained by certified engineer. Disclaimer When any of the following cases occurs, the company does not guarantee the liability of free maintenance. A. Product damages caused by violating the user guidance. B. Hardware damages caused by improper assembly. C. Product damages caused by unauthorized modification or maintenance. D. Product damages caused by using in unpermitted environment. E. Product damages caused by abnormal external force. F. Product damages caused by natural disasters or other force majeure. G. Privately tear off or damage disassembly tabs. H. Unable to provide effective purchase certificate.	On/Off the machine  1 Plug the power cable into the power socket of the unit. 2 Plug the power cable to the power supply. 3 Press the on/off button to startup the unit. "I" means power on, "O" means power off. 4 Remove the cover on the rear of the remote control as shown,insert two AAA equivalent batteries. 5 Press the POWER button on the remote control the indicator at the right bottom shows blue that means the unit start. Note>Please use the INPUT button on the remote control or using touch menu is enter the built-in computer's PC channel (The usage of touch menu please refer to the user manual.) The product is a CLASS I device. Please use the power cable delivered with the device. Before powering on the system, ensure that the power supply system is properly grounded. If the product is not grounded, there may be a risk of leakage, abnormal function, or performance degradation. 1 Don't use the refresh battery,such as nickel-cadmium cell For it is different from shape and function it is hard to ensure the operate accuracy Please handle the scrap battery in environmental way. 2 Press the power button on the remote control or press the power button for three seconds on the keypad and wait for the unit to shut down. Only after the indicator light turns red, turn off the power switch and disconnect the main power To avoid disconnecting the power switch or main power when the unit is in normally open mode or the indicator light turning blue.Directly power off may cause damage to the hardware of machines. 3 This device comes standard with a power cord for the device use only, please do not use it for other device. This symbol, affixed to the product or its packaging, indicates that the product must not be processed with household waste. It must be brought to an electric and electronic waste collection point for recycling and disposal. By the appropriate disposal of this product you also help in preventing potentially negative consequences for the environment and human health. The recycling of materials helps preserve our natural resources. For further information regarding the recycling of this product, please contact your municipality, local waste disposal centre or the store where the product was purchased.

正面

5/8	6/8	7/8	8/8				
External touch connection  Using VGA cable,USB cable,Audio cable to connect an external computer and Interactive Intelligent Panel devices' corresponding interface separately as shown.Then switch the computer's image to the plate output,it can achieve the touch function. Key & Port Description The number of buttons and the screen contents of the device,please prevail in kind. <table><tr><td></td><td>Power on/off button Press into energy-saving,press this button for three second into standby condition</td></tr><tr><td>USB</td><td>USB interface of Android & PC system</td></tr></table>		Power on/off button Press into energy-saving,press this button for three second into standby condition	USB	USB interface of Android & PC system	Connection of common ports For the number and type of the equipment port, please refer to the actual product. The input source as follow is used just for example. AUDIO OUT  LAN  HDMI signal input  HDMI signal output  *Note: This interface is optional, please refer to the actual product.	RS232 Connection  VGA  USB  TYPE-C 	Maintenance Proper maintenance can prevent many failures in early stage.Regular careful cleaning can keep the brand new appearance of the unit. Please unplug the power line before cleaning and maintenance in case of electric shock. Clean screen 1 Please evenly mix some fabric softener or detergent with alcohol. 2 Please saturate a piece of soft cloth in the mixture above mentioned. 3 Take out the cloth and wring it to half dry and then clean the screen. 4 Repeat the procedures above. Attention: do not drop water into the unit while cleaning. Clean front frame Please choose dry, soft and non-fluff cloth to clean the face frame. Non-use of the unit for a long term If the machine is not used for a long term, please pull out the plug lest lightning or other power supply ripples damage the unit.
	Power on/off button Press into energy-saving,press this button for three second into standby condition						
USB	USB interface of Android & PC system						

背面

技术要求:

1. 材质：105g双铜纸
2. 印刷：双面单黑印刷
3. 成型尺寸：145*210mm，展开尺寸：580*210mm，风琴折，三折
4. 所有材质及油墨均需符合RoHS

TOLERANCE UINLESS OTHERWISE SPECIFIED		 广州视源电子科技股份有限公司 GUANGZHOU SHIYUAN ELECTRONIC CO.,LTD.				
		DRAWING No.	CEXXGA-G07-Q53401-V1.3-快速使用指南-英文中性-HDMI OUT 兼容版			
	N/A	PART NAME	快速使用指南-中性	SCALE	1:1	NOTES:
T	N/A	MATERIAL	SEEDRAWING	SIZE	N/A	
MAT'L SEE NOTES: 		TECHNOLOGY	SEEDRAWING	SHEET	1/1	郭阳丽
		DRAWN	刘建东	UNIT	mm	
		CHK'D	刘雅静	APP'D		

87654321