

VPA-583 Manual - DO NOT PRINT RED DIELINE

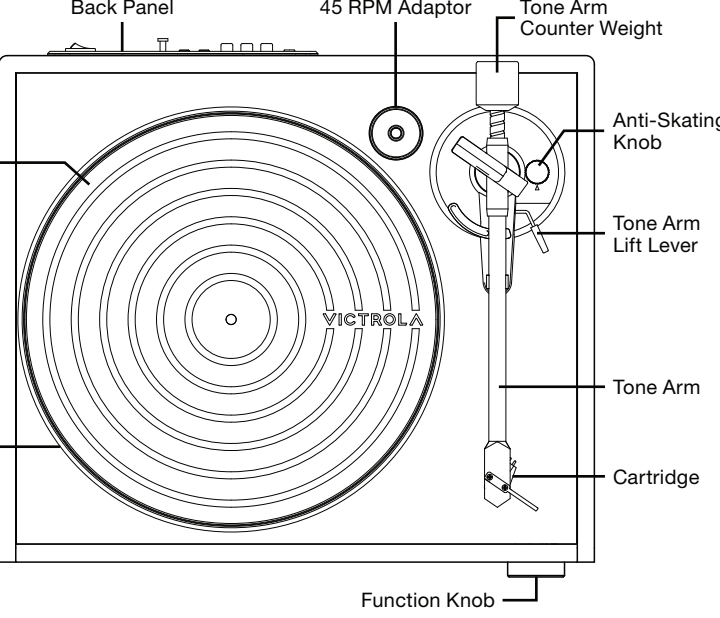 
Manual Page Size: 5.25" W x 7" H




V1 STEREO TURNTABLE

VPA-583


Top View



Back View

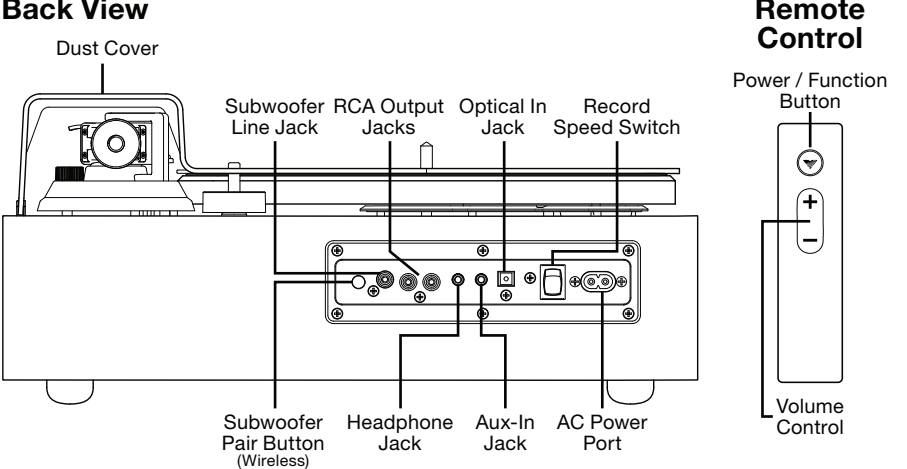 






Remote Control

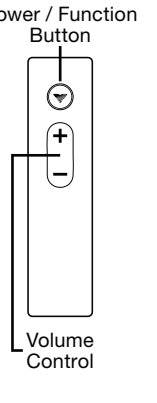 


OVERVIEW

FUNCTION KNOB - BASIC OPERATION
POWER: Press and hold for 1-2 seconds to turn the unit ON or OFF.
VOLUME: Rotate to raise or lower volume.

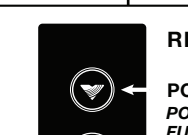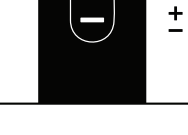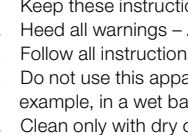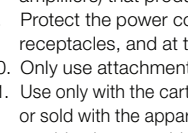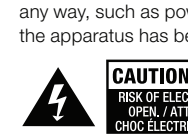     FUNCTION KNOB - TO CYCLE THROUGH FEATURES
VINYL: Press to enter record player function mode.
VINYL STREAM: Press to connect the unit to an external Bluetooth speaker.
BLUETOOTH: Press to pair the unit with a Bluetooth device (smartphone).
OPTICAL IN (TV): Press to play audio from a connected TV.
AUX-IN: Press to play audio from a connected auxiliary device.

OPERATION	RING COLOR	FUNCTION & VOICE PROMPT
	WHITE	POWER ON: Press and hold for 1-2 seconds.
	WHITE	POWER OFF: Press and hold for 1-2 seconds. When powering back ON, the unit will return on the last used function mode.
	WHITE	Press for: VINYL PLAYING: "Vinyl"
	WHITE	Press for: VINYL STREAM: "Vinyl Stream" "Vinyl Stream" Dial will FLASH when searching. When connected, prompt will say "Connected" & dial will turn SOLID. In Vinyl Stream mode, internal speakers will be disengaged.
	BLUE	Press for: BLUETOOTH: "Bluetooth" Dial will FLASH when searching. When connected, prompt will say "Connected" & dial will turn SOLID.
	WHITE	Press for: (TV) OPTICAL IN: "TV Optical"
	WHITE	Press for: AUXILIARY IN: "Auxiliary"
	WHITE	RAISE VOLUME: Rotate dial CLOCKWISE. Dial will brighten when in use.
	WHITE	LOWER VOLUME: Rotate dial COUNTER-CLOCKWISE. Dial will brighten when in use.

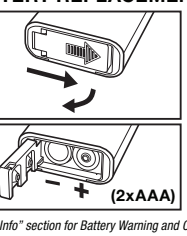 REMOTE CONTROL FUNCTIONS
POWER / FUNCTION BUTTON
POWER ON / OFF: Press and hold for 1-2 seconds.
FUNCTION CONTROL: Quickly press to cycle through each feature.
VOLUME CONTROL
+ Press to raise volume.
- Press to lower volume.

REMOTE CONTROL BATTERY REPLACEMENT

(2xAAA)

See "Safety Info" section for Battery Warning and Cautions.

QUICK START GUIDE

SIMPLE SETUP

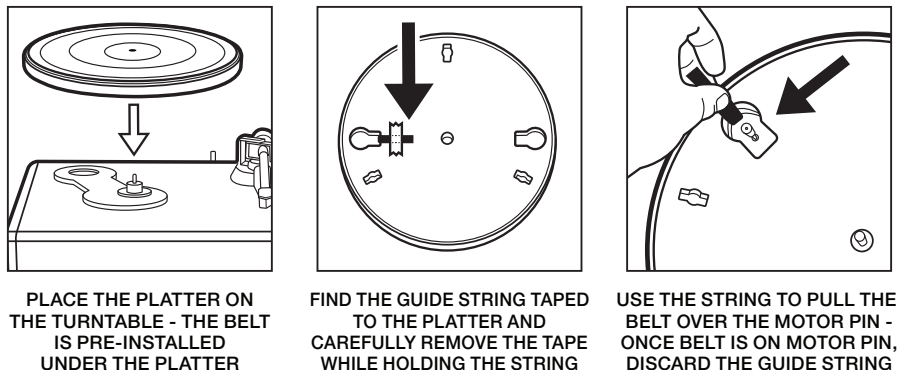 
GETTING STARTED
Remove the needle cover, by gently pulling towards the front of the unit. Carefully plug in the unit, install platter and tone arm weight.
Note: It is recommended that this product should be operated only from the type of power source indicated on the rating label. This unit uses AC power and is powered by a standard wall outlet.

BASIC OPERATION
Using the Function Knob, press and hold for 1-2 seconds to turn the unit ON or OFF. Cycle through the Function Knob to select from the following playing modes:
VINYL: Playing a Vinyl record.
VINYL STREAM: Connecting to an external Bluetooth speaker or headphone.
BLUETOOTH: Connecting and playing music from a Bluetooth device (smartphone).
OPTICAL IN (TV): Connecting and playing audio from a connected TV.
AUX-IN: Connecting and playing music from an auxiliary device.

VOLUME: Rotate to raise or lower the volume.

RCA LINE OUT: Use the red & white plugs on the back of the unit to connect to an amplifier/stereo device. Be sure to first reduce the volume to a minimum level on the record player (RCA cord not included).

HEADPHONE: Use the headphone jack on the back of the unit to connect your headphones/earbuds. Be sure to first reduce the volume to a minimum level on the record player.

PLATTER / BELT DRIVE INSTALLATION

PLACE THE PLATTER ON THE TURNTABLE - THE BELT IS PRE-INSTALLED UNDER THE PLATTER
FIND THE GUIDE STRING TAPED TO THE PLATTER AND CAREFULLY REMOVE THE TAPE WHILE HOLDING THE STRING
USE THE STRING TO PULL THE BELT OVER THE MOTOR PIN - ONCE BELT IS ON MOTOR PIN, DISCARD THE GUIDE STRING

TO NE ARM SETUP

VINYL PLAYING

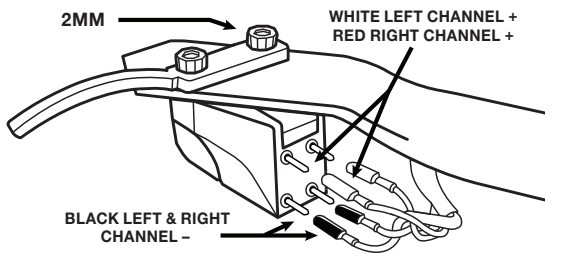 
VINYL STREAM

BLUETOOTH PAIRING

 **BLUETOOTH:** Connecting and playing music from a Bluetooth device (Smartphone). Using the Function Knob, press and hold for 1-2 seconds to turn the unit ON. Simply press the Function Knob to make sure it is in Bluetooth mode (the dial will flash blue). On your device, turn Bluetooth ON. Then search for / select **"V1 STEREO TURNTABLE"** in the settings menu. The unit will chime and say "Connected", while the Function Knob will remain blue. Use your external device to control playback. Rotate the Function Knob to adjust the volume if needed.
Note: -Make sure the unit is within 10m (33ft) from your external device for the strongest connection.
-If no sound is playing, the unit may be in Vinyl Stream mode, cycle through the function knob to make sure it is in Bluetooth mode.

CARTRIDGE REPLACEMENT

REPLACEMENT CARTRIDGE:
VICTROLA VPC-190
The VPC-190 Cartridge is rated in excess of 1000 hours of normal use. As soon as you notice a change in sound quality or damage to the stylus, it is recommended that it be changed.



2MM
WHITE LEFT CHANNEL + RED RIGHT CHANNEL +
BLACK LEFT & RIGHT CHANNEL -

- Unplug the unit and put the needle cover on the old cartridge.
- Carefully remove all the wire leads from the back of the old cartridge.
- Loosen the 2 allen head screws (you need a 2mm hex key, not included) on the top of the tone arm / cartridge. Remove old cartridge.
- Mount the new cartridge, and adjust the position to ensure it will track parallel to the record grooves and tighten the screws.
- Connect the wire leads to the new cartridge by pushing them firmly on to the connector pins.
WHITE Left channel positive (L+)
RED Right channel positive (R+)
BLACK Left and Right channel negative (L- & R-)

For best results, use a cartridge alignment protractor or download our Cartridge Alignment Protractor at victrola.com/cartridgealignment

WARNING

Important Safety Instruction

- Read these instructions - All the safety and operating instructions should be read before this product is operated.
- Keep these instructions - The safety and operating instructions should be retained for future reference.
- Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions - All operating and use instructions should be followed.
- Do not use this apparatus near water - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

CAUTION/ATTENTION:
DANGER: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT OPEN THE COVER.
ATTENTION: RISQUE D'INCENDIE OU DE CHOC ELECTRIQUE. NE PAS OUVRIR LE COUVERCILE.

- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- a. Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- b. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
- c. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
- The use of the equipment in moderate climate.
- WARNING: Please refer the information on exterior bottom/back enclosure for electrical and safety information before installing or operating the apparatus.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Do not install this equipment in a confined space such as a book case or similar unit.

SPECIFICATIONS

GENERAL	
Power Requirements	AC 100-240V-50/60Hz
Power Consumption	20 W
Speaker power	2 x 10W(RMS), (PMPO 40W)
Dimensions (W x D x H)	350mm x 420mm x 120mm (approx)
Weight	6.15 kgs
RECORD PLAYER	
Motor	DC servo motor
Drive System	Belt Drive
Speeds	OFF/3-1/3 rpm, 45 rpm
Cartridge Type	Moving Magnetic Cartridge
Moving Magnetic Cartridge	Victrola VPC-190
BLUETOOTH	
Bluetooth Version	Bluetooth V5.0
Bluetooth Profiles	A2DP, AVRCP
Bluetooth Frequency range	2.402GHz-2.480GHz
Operating Distance	10 meters (33 ft.)
INCLUDED:	
V1 Music System & Dust Cover, 45 RPM Adaptor, Remote Control (Batteries Included), Silicone Slip Mat, Digital Optical Cable, Power Cable, Instruction Manual, Quick Setup Guide	

SUBWOOFER PAIRING

 **WIRELESS PAIRING THE S1 SUBWOOFER (Sold Separately):**
Turn on the S1 Subwoofer. Press the MODE button on the back of the unit until the LED turns BLUE. The LED will slowly flash BLUE indicating it is in Wireless Mode. Press and hold the MODE button for 1-2 seconds to enter Pairing Mode. The LED will begin to quickly flash BLUE.
On the V1, Press and hold the PAIR button on the back of the unit for 1-2 seconds. You will hear the pairing notification from the V1. Once both the V1 and S1 are paired, you will hear a connection chime. The BLUE LED on the back of the S1 remain solid.

SAFETY INFO

Safety Information

- In order to shut off power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time, such as during a vacation.
- Use of controls, adjustments and performance of procedures other than those specified herein may result in hazardous radiation exposure.
- To prevent electric shock, never use wide blade of plug to wide slot, fully insert.
- If this product is experience problems during operation, contact qualified service centers, and do not use the product in defective states.

Before Use

- Choose unit installation location carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, cold or moisture. Keep away from sources that hum, such as transformers or motors.
- Do not open the cabinet as this may result in damage to the circuitry or electrical shock. If a foreign object should get into the set, contact Customer Service.
- Be sure not to handle record with dirty fingers. Never play a record that has a crack on the surface.
- When removing the power plug from the wall outlet, always pull directly on the plug, never pull the cord.
- To protect the stylus, don't forget to put on the white protective needle cover after use.
- Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
- In order to shut off the power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time, such as a vacation.
- Keep this manual in a safe place for future reference.

Battery Safety Information:
This unit uses 2x "AA" batteries. Make sure that they are oriented so their polarity markings, "+" and "-" match the remote's markings. When the distance required between the remote control and main unit decreases, it is necessary to replace the battery with new ones.

Battery Precautions
Be sure to insert the batteries with correct positive "+" and negative "-" orientation. ALWAYS use batteries of the same type. Never mix different types of batteries together. Caution: There is a risk of explosion if the battery is replaced by an incorrect battery type. When using rechargeable batteries, refer to the precautions on their labels. When the remote control unit is not to be used for a long time (more than a month), remove the batteries to prevent them from leaking. Do not heat or disassemble batteries, and NEVER dispose of old batteries by throwing them in a fire. Do not dispose device into standard garbage disposal sites. Dispose of device at available Battery Recycling Sites after fully discharging battery. Not doing so may violate disposal laws and regulations. Please refer to local regulations for proper battery disposal.

FCC STATEMENT
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

WARRANTY

Victrola is a registered trademark of Innovative Technology Electronics, LLC.

United States

Victrola (Innovative Technology Electronics, LLC) warrants to the original retail purchaser that this product will be free from defective materials and workmanship for one (1) year from the date of purchase, subject to the limitations below. This warranty period is not extended if we replace the product.

To obtain a replacement under the terms of this warranty, you must contact the dealer from which it was purchased with your original receipt. If assistance from the dealer from which it was purchased is impossible, you may contact our customer service for warranty assistance at victrola.com/contact.

Except as limited below, if the product proves defective in either material or workmanship within one (1) year from the date of purchase, Victrola will replace the product at no charge. If the product model is no longer available and cannot be replaced with an identical model, Victrola will issue a merchandise credit for the purchase price to be redeemed at victrola.com.

Limitations:

- This limited warranty does not cover failure of the product arising, in whole or in part, from improper installation, storage, transportation, misuse, abuse, accident, neglect, mishandling etc.
- Unauthorized repair, modification, or wear from ordinary use or environmental deterioration.
- This limited warranty does not cover cosmetic damage, including paint damage, or consequential damage to other components or premises which may result for any reason from the failure of the product.
- This limited warranty will be null and void for products not used in accordance with Victrola's instructions.
- This limited warranty terminates if the original retail purchaser sells or otherwise transfers this product.
- This limited warranty is null and void for defects or damage caused by installation or repair performed by any person or entity other than a Victrola authorized installer or dealer.

WARRANTY

Canada and US Territories

The Warranty on this product shall comply with applicable law when sold to a consumer in Canada or a US Territory. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt. If assistance from the dealer from which it was purchased is impossible, you may contact our customer service for warranty assistance at victrola.com/contact.

If this product proves defective in either material or workmanship, Victrola will replace the product at no charge. If the product model is no longer available and cannot be repaired effectively or replaced with an identical model, Victrola at its sole option may replace the unit with a current model of equal or greater value.

Outside the U.S. Canada, and US Territories

The Warranty on this product shall comply with applicable law when sold to a consumer outside of the United States, Canada, and US Territories. To obtain any applicable warranty service, please contact the dealer from which you purchased the product, or the distributor that supplied the product, with your original receipt.

VPA583-08XX21