 


Manual Cover Dieline
Assembled / Folded size: 7.5" x 7.5"

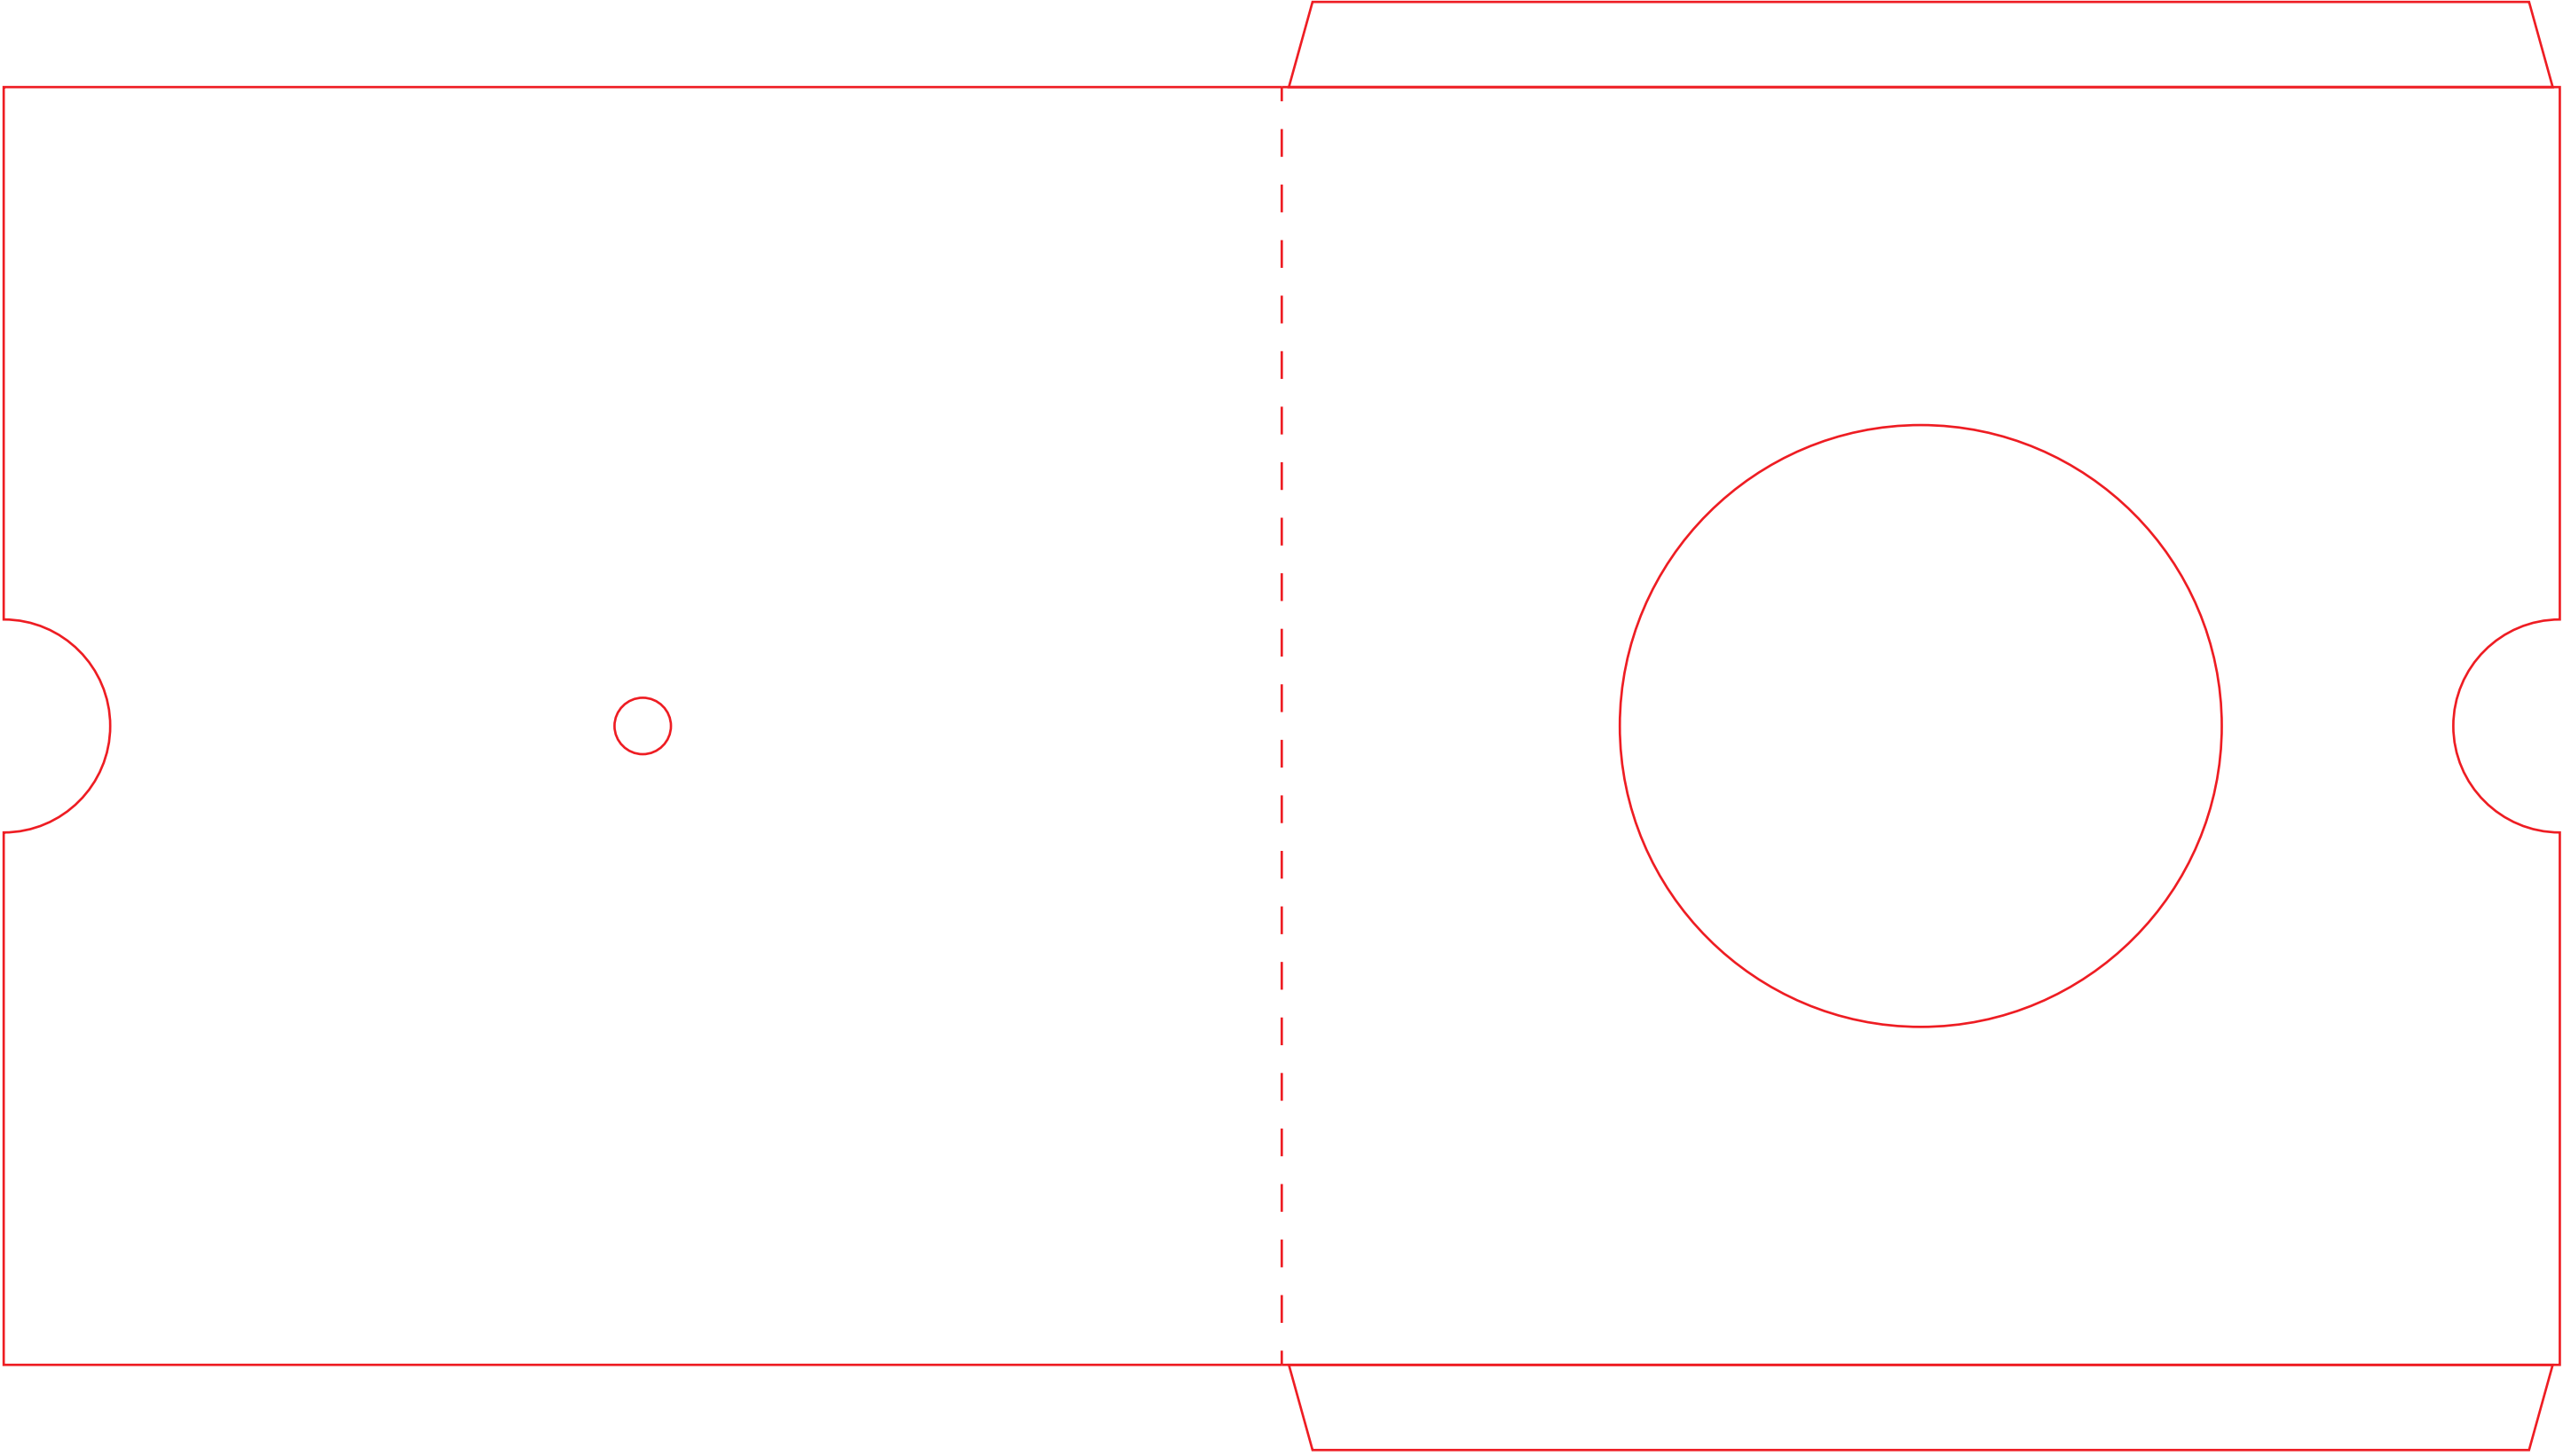 


Cover & Manual Assembled Example - DO NOT PRINT





DO NOT PRINT RED DIELINE





FRONT of Manual

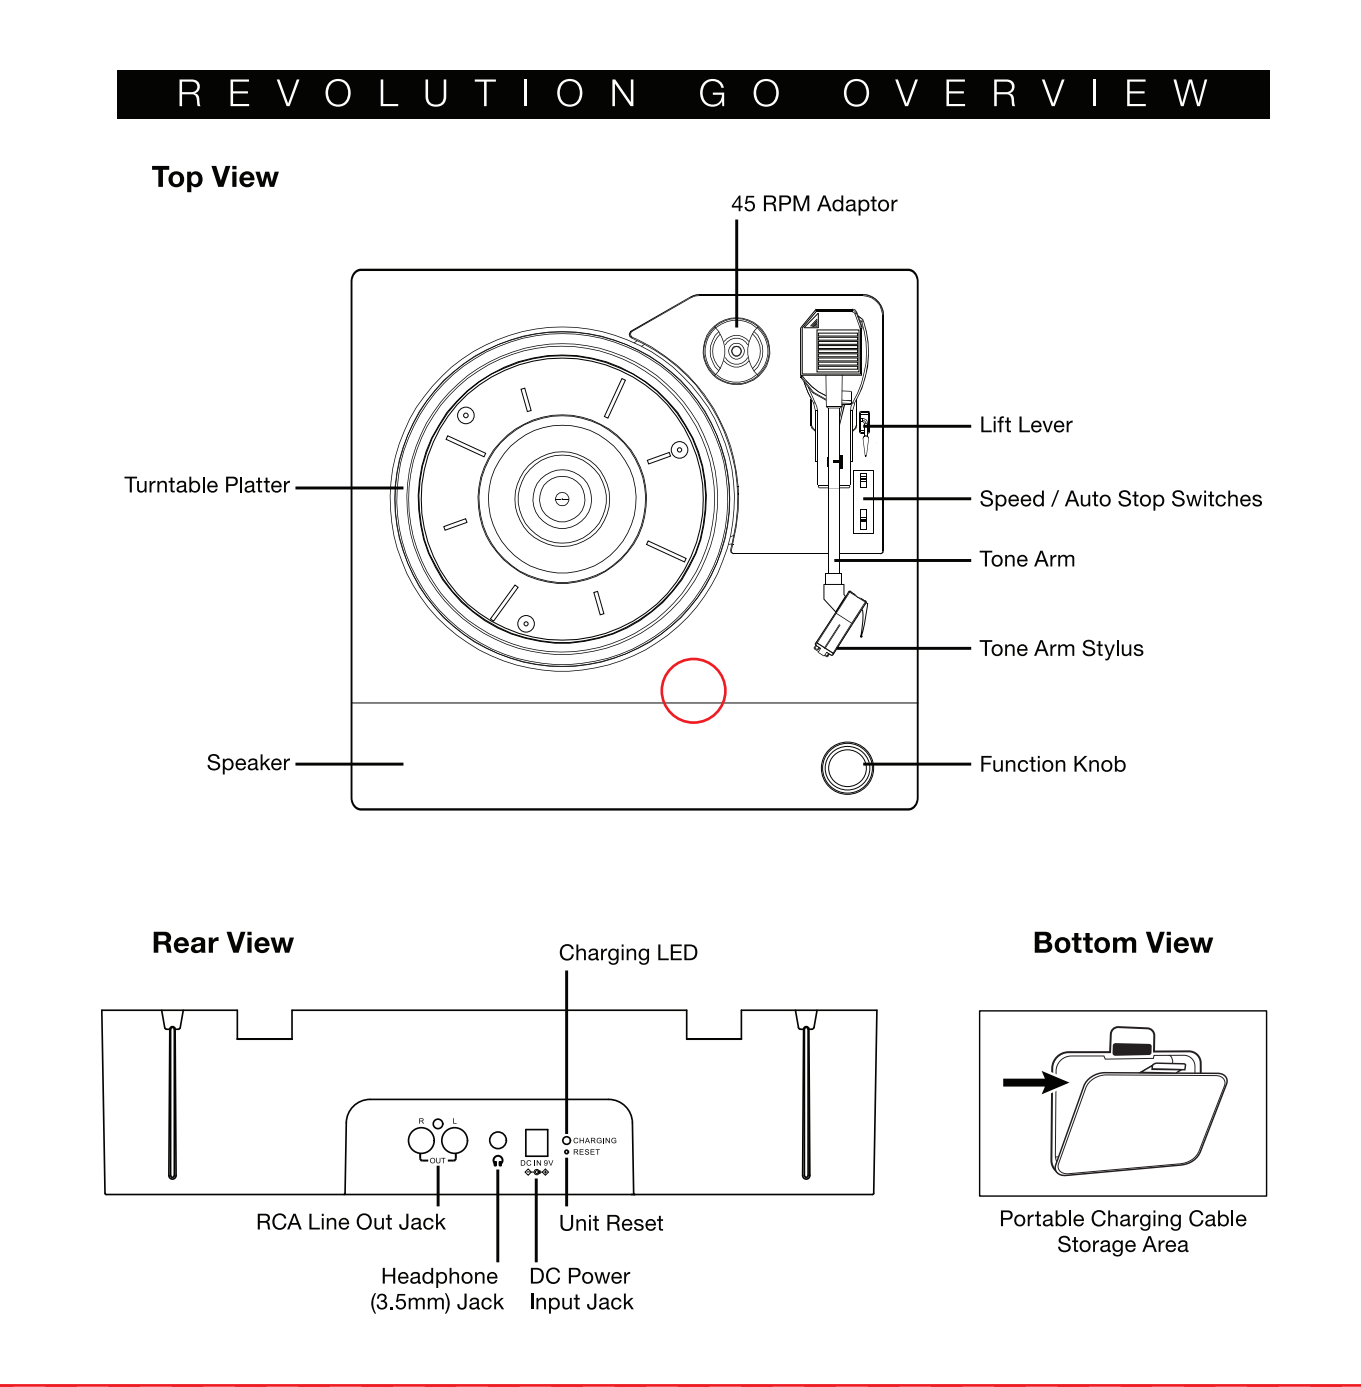

BACK of Manual

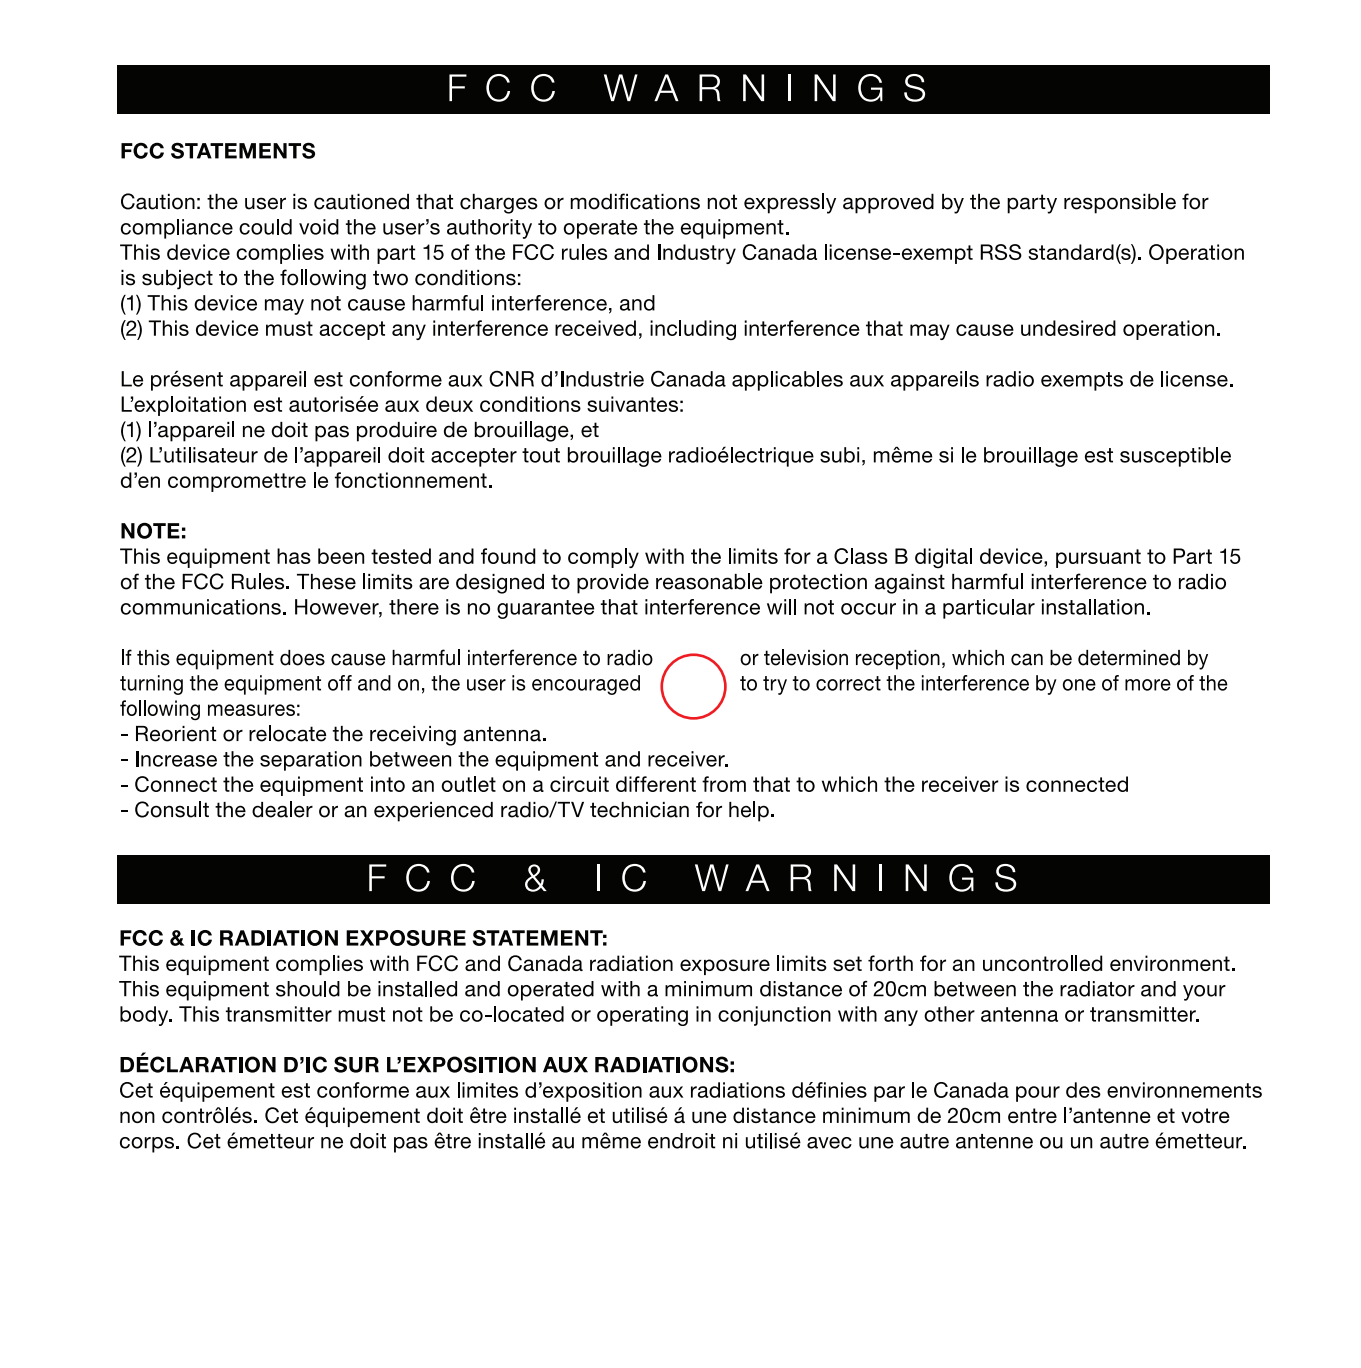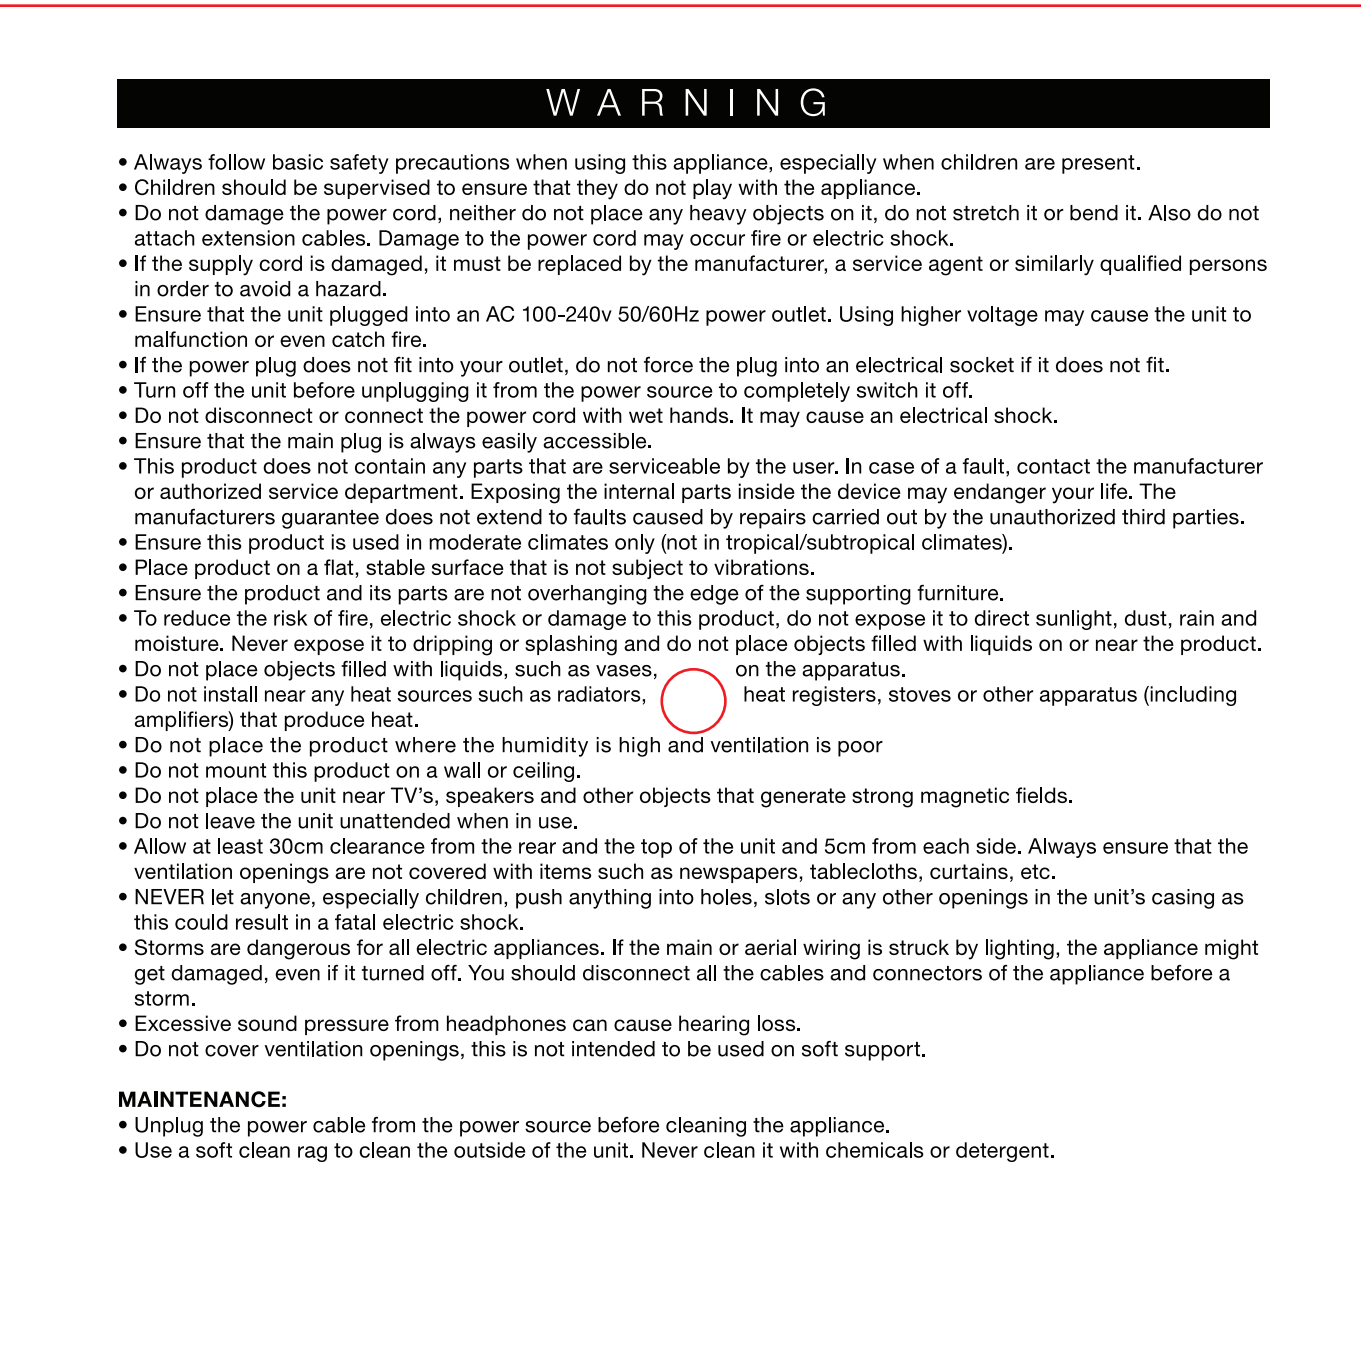  

QUICK START GUIDE		
FUNCTION KNOB - BASIC OPERATION POWER: Press and hold for 1-2 seconds to turn the unit ON or OFF. VOLUME: Rotate to raise or lower volume. FUNCTION KNOB - TO CYCLE THROUGH FEATURES VINYL: Press to enter record player function mode. VINYL STREAM: Press to connect the unit to an external Bluetooth speaker. BLUETOOTH: Press to pair the unit with a Bluetooth device (smartphone).		
OPERATION	RING COLOR	FUNCTION & VOICE PROMPT
	WHITE	POWER ON: Press and hold for 1-2 seconds. POWER OFF: Press and hold for 1-2 seconds. When powering back ON, the unit will return in the last used function mode.
	WHITE	Press for: VINYL PLAYING: "Vinyl" Press for: VINYL STREAM: "Vinyl Stream" When connected, prompt will say "Connected" & dial will turn SOLID. In Vinyl Stream mode, internal speakers will be disengaged.
	BLUE	Press for: BLUETOOTH: "Bluetooth" Dial will FLASH when searching. When connected, prompt will say "Connected" & dial will turn SOLID.
	WHITE	RAISE VOLUME: Rotate dial CLOCKWISE. Dial will brighten when in use. LOWER VOLUME: Rotate dial COUNTER-CLOCKWISE. Dial will brighten when in use.
		BATTERY VOICE PROMPTS -80% "Battery Full" 26%-79% "Battery Medium" -25% "Battery Low" -10% "Low Battery"
WHEN THE UNIT IS DISCONNECTED FROM A POWER SOURCE, battery level will prompt is needed.		

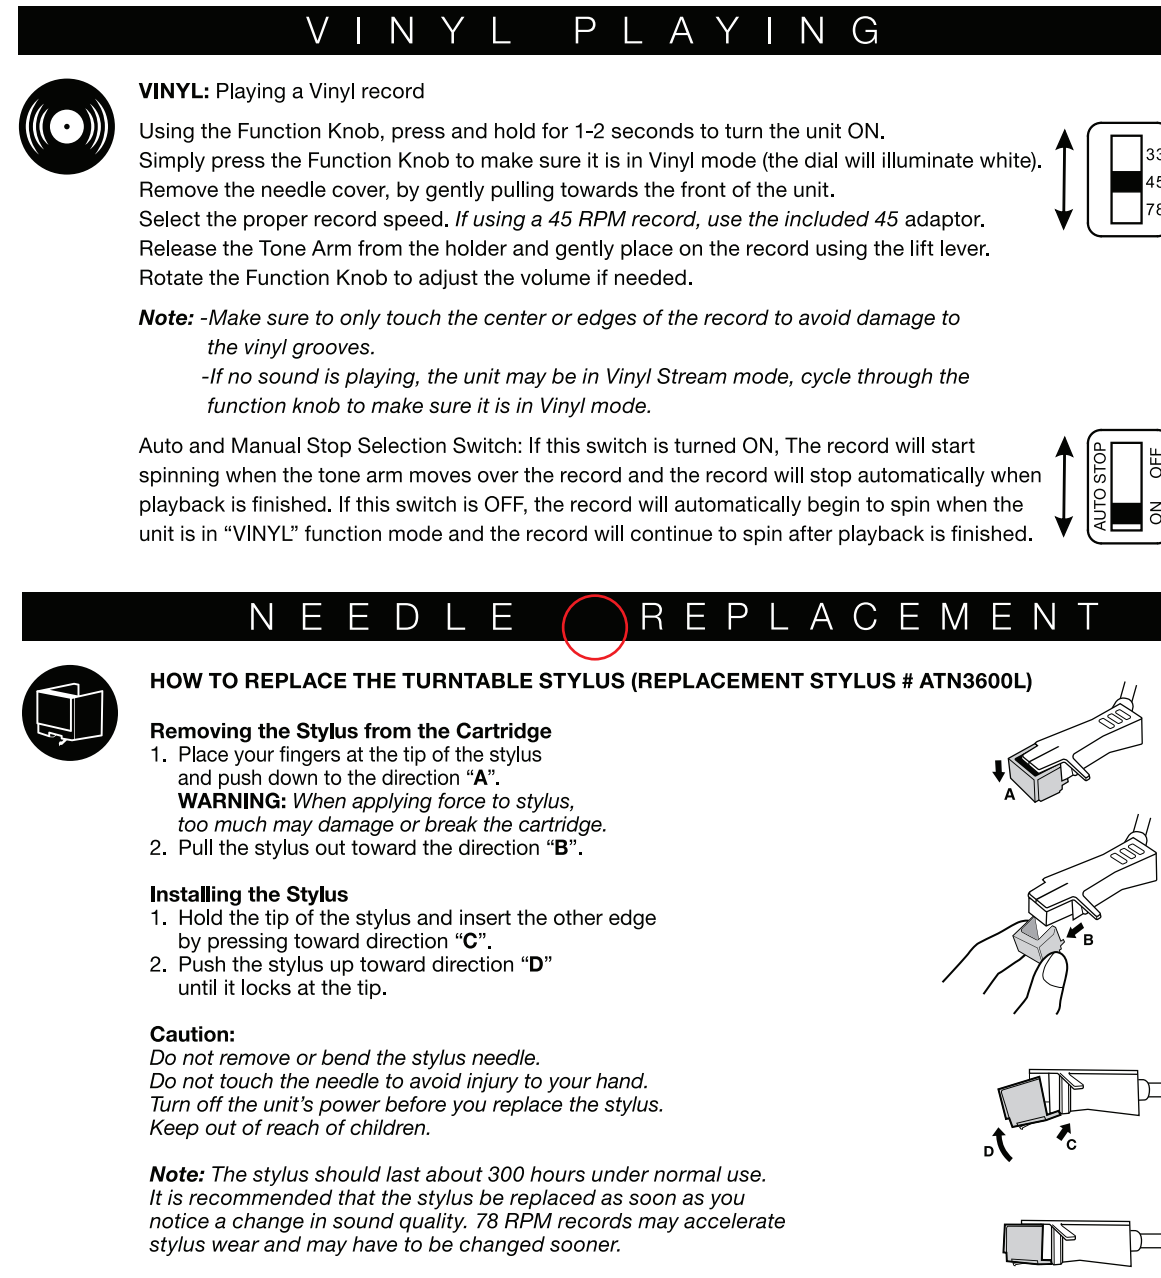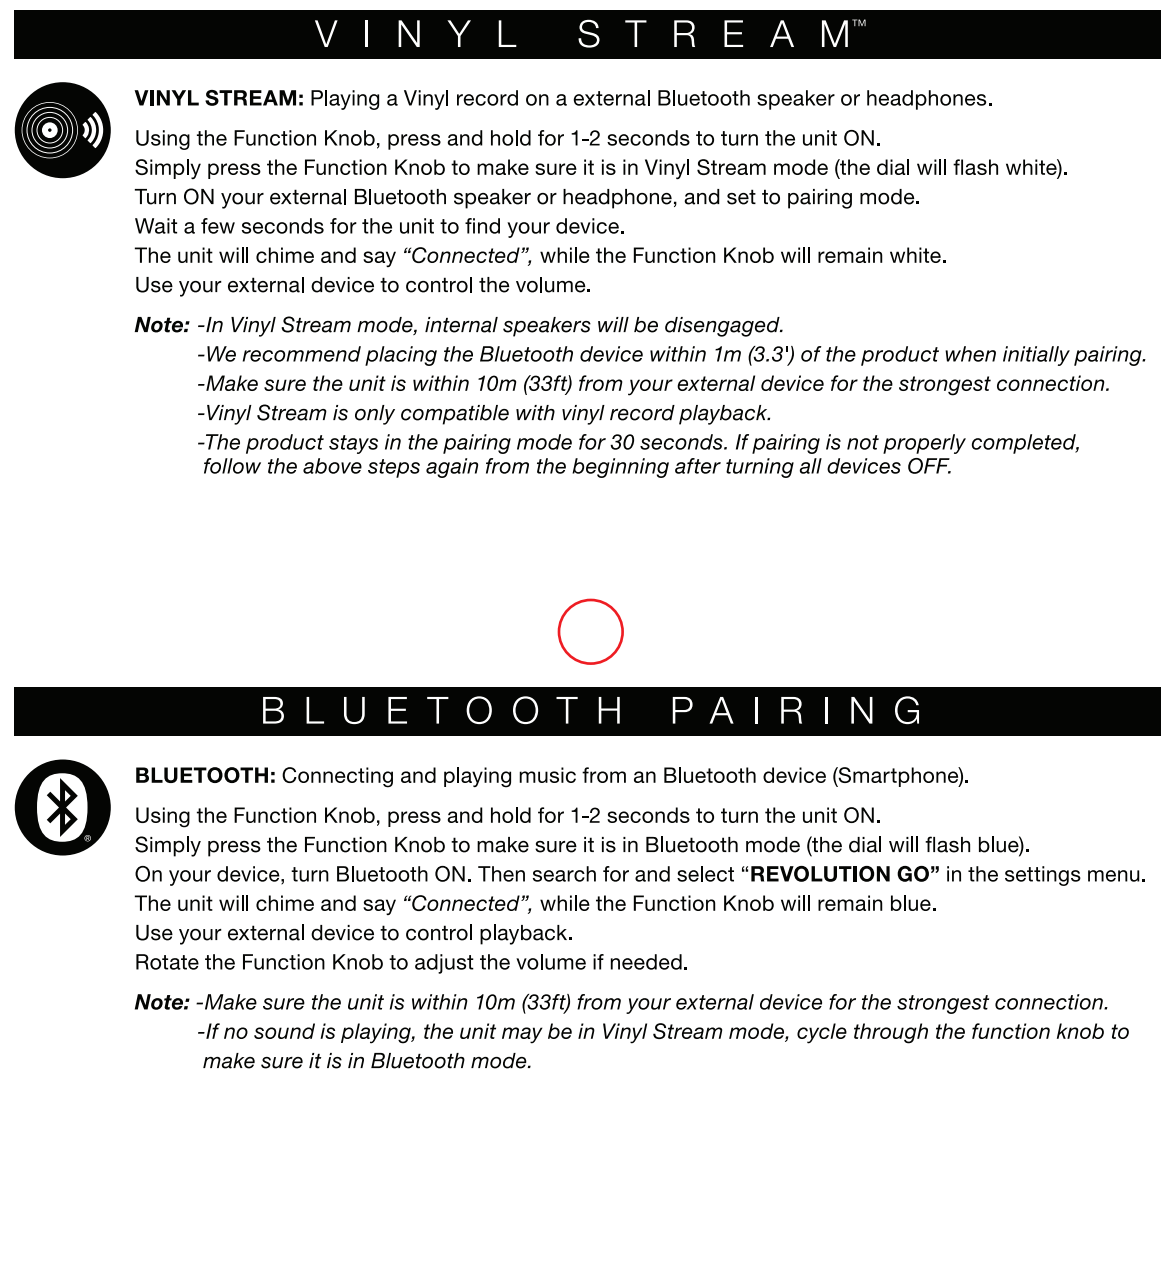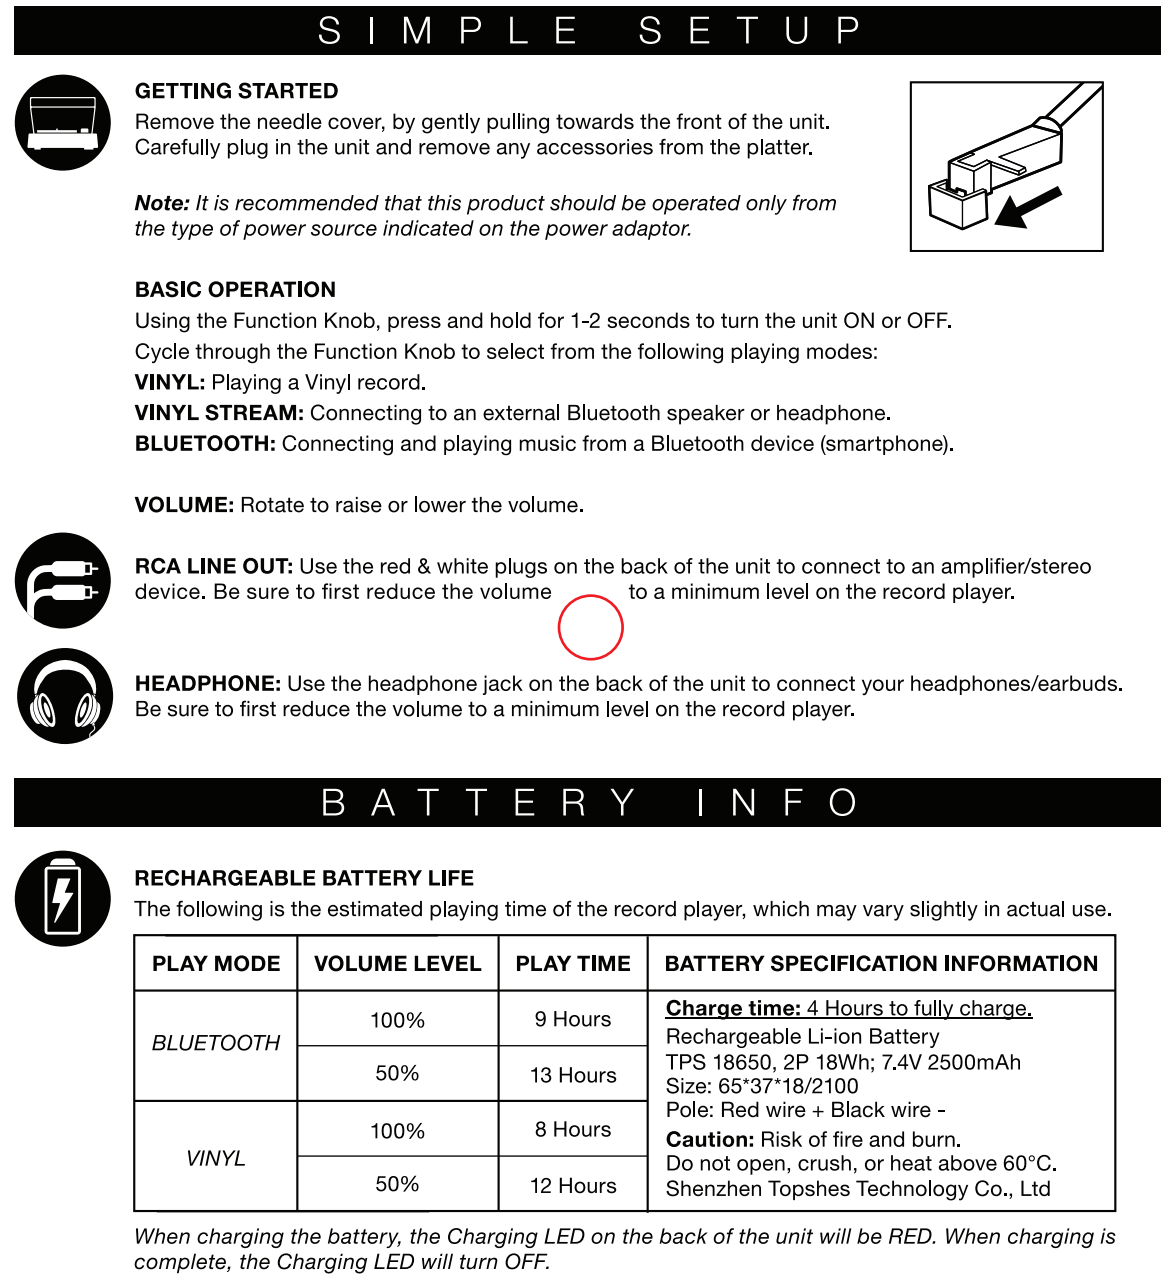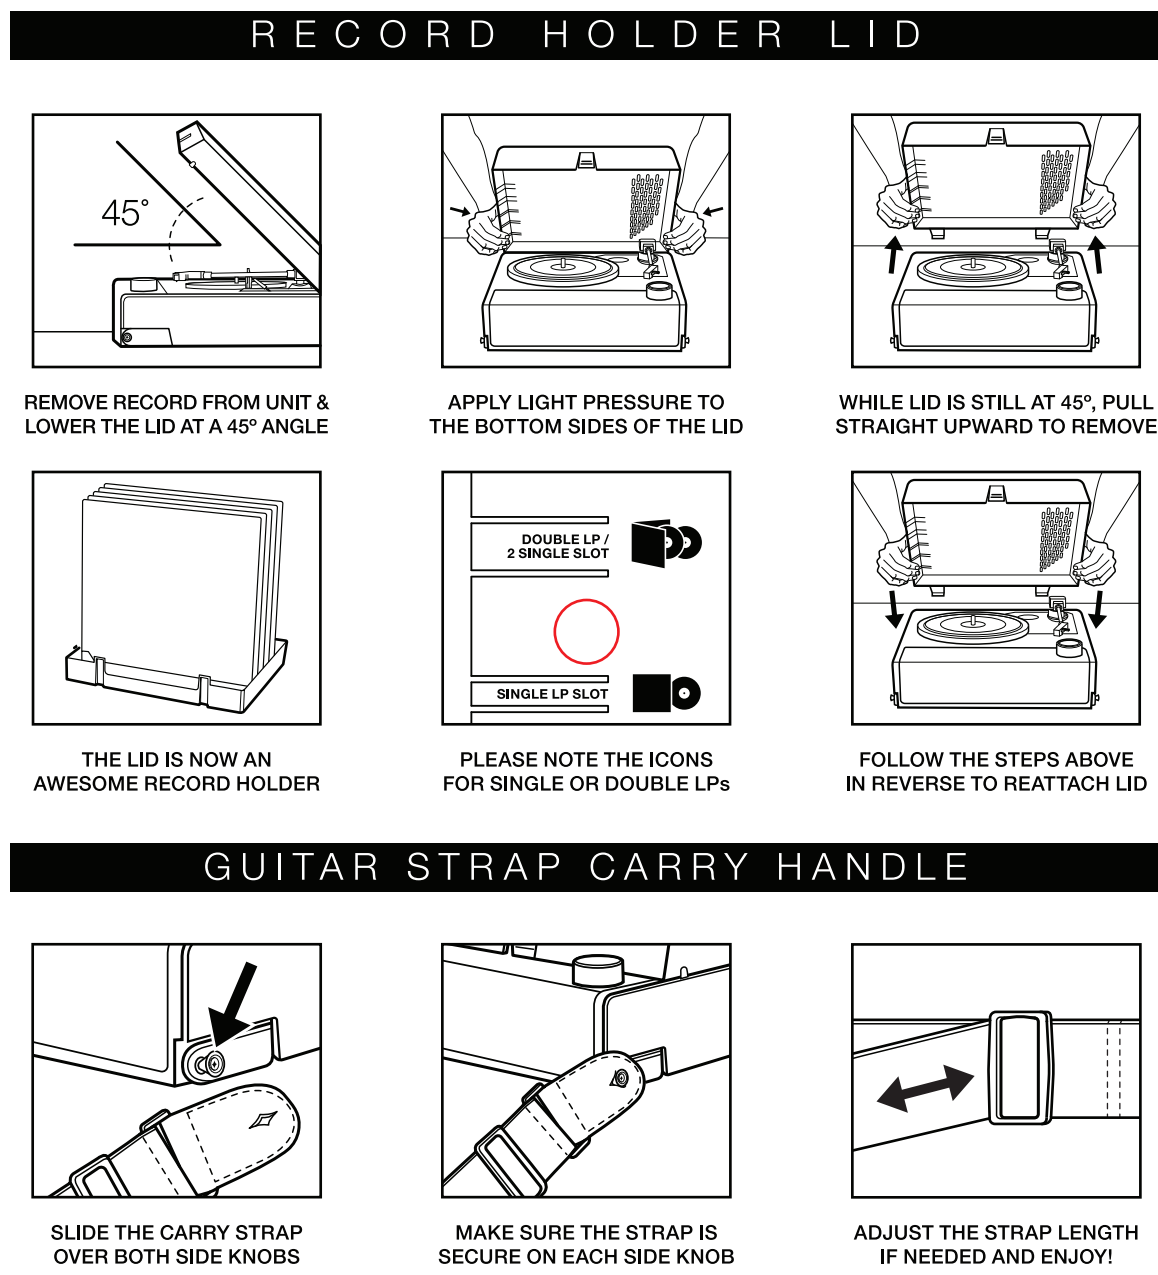    

Thank you for buying a Victrola.

