

A

B

C

D

E

EN

Let's get started.

Need help? Scan the QR code for video tutorials and user guide.

<https://link.gi-net.com/fgb-01-userguide-support>

FGB-01 FingerBot

PACKAGE CONTENTS

SETTING UP

Remove the plastic battery isolation tab.

1. Remove the cover from the notch on the side of the device.

2. Take out the USB dongle. (FGB-01-g)

4. Insert the USB dongle into the Comet (GL-RM1).

5. The FingerBot can be controlled through the GLKVM app.

INSTALLATION

1. Clean the surface of the device before installation.

2. Peel off the protective sticker from the adhesive on the bottom of the FingerBot.

3. Stick the FingerBot near the control button of the device.

4. Testing pressure levels

The FingerBot features two different pressing levels. You can adjust the level at any time through the GLKVM App.
1. **Light Press Mode:** Use for shorter key.
2. **Hard Press Mode:** Use for longer key.

5. Operation mode

The FingerBot features two different operation modes. You can adjust the modes at any time through the GLKVM App.
Press Mode: Pressing buttons or controlling on-way switches. Ideal for tasks like powering on a PC.

6. Installation on the laptop

Note: Only for laptops with edge-mounted power buttons.
1. Secure the bracket in the desired position and tighten it.
2. Attach the FingerBot to the bracket and test its alignment.

7. Test button

Use the test button to find your preferred pressing level.
1. **First press** - FingerBot extends to Light Press.
2. **Second press** - FingerBot extends to Hard Press.
3. **Third press** - FingerBot retracts.

The FingerBot will press down once.

REPLACE BATTERY

How to replace your battery:

1. Prepare a CR2 battery.
2. Remove the cover from the notch on the side of the device.
3. Replace the battery.
4. Put the cover back on the device.

SUPPORT

Setup video and FAQs

For more detailed and updated instructions, please visit our website <https://link.gi-net.com/fgb-01-userguide-support>

For further questions, contact us via these methods:
- Email: support@gi-net.com
- Discord: link.gi-net.com/website-discord-support
- Reddit: link.gi-net.com/website-reddit-support
- Forum: forum.gi-net.com

WARRANTY

• We provide two-year limited warranty for product and 3-month limited warranty for accessories.
• Extra warranty may apply according to the local law in which the product purchase took place.
• Any damage to the product caused by not following the instructions will render this warranty null and void.
• Any damage to the product caused by modifying the PCB, components or cases will render this warranty null and void.
• Issues caused by the use of third-party firmware may not get official support from us.
• Any damage to the product caused by inappropriate use, e.g. inappropriate voltage input, high temperature, dropping in the water or on the ground will render this warranty null and void.
• Pictures on the instructions are only for reference. We reserve the right to change or modify these materials without further notice.

Hong Kong Office

GL Technology (Hong Kong) Limited
Unit 602, Building 281, Hong Kong Science Park,
Sha Tin, N.T., Hong Kong

Shenzhen Office

Shenzhen Guanglian Zhongtong Tech Co., Ltd.
Room 202, 10A, Shennan 1st Road Building, Shennan Street,
Futian District, Shenzhen, China, 518001
+86 755 83688810

ver. 20250110

CCC Warning

This device contains components, and changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

• Do not tamper.
This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used properly, it may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

• Do not use flammable liquids.
This equipment complies with IEC 60529 pollution degree level 2 for uncontaminated environment. This equipment should be installed and operated only in uncontaminated degree level 2 environments. Do not immerse the robot and parts into liquids.
(2) Declaration of Conformity
Product: GL Technology (Hong Kong) Limited declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and 2014/52/EU. A copy of the CE Declaration of Conformity (DoC) is available online at <https://www.gi-net.com/products/declaration>.

Caution:
Risk of fire or explosion if the battery is replaced by an incorrect type.
Dispose of batteries with an environmental label or container that will allow recycling of the materials, in the case of some lithium battery types.
Caution:
• Do not use the robot for a long time, or mechanically touching or rubbing of a battery, that can result in an explosion.
• Do not use the robot in extremely high temperature surrounding environment that can result in an explosion or in the storage of flammable liquid or gas, and
• Do not attempt to externally fire or pressure that may result in an explosion or the leakage of flammable liquid or gas.

A

B

C

D

E

ES

Empecemos

¿Necesitas ayuda? Escanee el código QR para ver tutoriales en video y la guía del usuario.

<https://link.gi-net.com/fgb-01-userguide-support>

FGB-01 FingerBot

CONTENIDO DEL PAQUETE

CONFIGURACIÓN INICIAL

Retira la pantalla plástica de aislamiento de la batería.

2. Quita la tapa desde la ranura lateral del dispositivo.

3. Saca el dongle USB. (FGB-01-g)

4. Inserta el dongle USB en el Comet (GL-RM1).

5. El FingerBot puede controlarse a través de la aplicación GLKVM.

INSTALACIÓN

1. Limpia la superficie del dispositivo antes de la instalación.

2. Retira la etiqueta protectora del adhesivo en la parte interior del FingerBot.

3. Pega el FingerBot cerca del botón de control del dispositivo.

4. Prueba el nivel adecuado

El FingerBot cuenta con dos modos de presión diferentes. Puedes ajustar el nivel en cualquier momento desde la aplicación GLKVM.
1. **Modo de presión ligera:** Usado para teclas más cortas.
2. **Modo de presión fuerte:** Usado para teclas más largas.

5. Modo de funcionamiento

El FingerBot cuenta con dos modos de funcionamiento diferentes. Puedes ajustar los modos en cualquier momento desde la aplicación GLKVM.
Modo de presión: Para presionar botones o controlar interruptores de una sola dirección. Ideal para tareas como encender una PC.

6. Instalación en laptop

Nota: Solo usable en laptops que tengan el botón de encendido en el borde.
1. Asegura el soporte en la posición deseada y ajustado.
2. Coloca el FingerBot en el soporte y prueba su alineación.

7. Botón de prueba

Usa el botón de prueba para encontrar tu nivel de presión preferido.
1. **Primera pulsación** - El FingerBot se extiende en Modo de Presión Ligera.
2. **Segunda pulsación** - El FingerBot se extiende en Modo de Presión Fuerte.
3. **Tercera pulsación** - El FingerBot se retracts.

El FingerBot presionará una vez.

CAMBIAR LA PILA

Cómo reemplazar la batería:

1. Prepara una batería CR2.
2. Quita la tapa desde la ranura lateral del dispositivo.
3. Reemplaza la batería.
4. Vuelve a colocar la tapa en el dispositivo.

APOYO

Vídeo de instalación y preguntas frecuentes

Para obtener instrucciones más detalladas y actualizadas, visite nuestro sitio web <https://link.gi-net.com/fgb-01-userguide-support>

Si tiene más preguntas, póngase en contacto con nosotros por los siguientes medios:
- Correo electrónico: support@gi-net.com
- Discord: link.gi-net.com/website-discord-support
- Reddit: link.gi-net.com/website-reddit-support
- Foro: forum.gi-net.com

GARANTÍA

• Ofrecemos una garantía limitada de dos años para el producto y una garantía limitada de tres meses para los accesorios.
• Puede aplicarse una garantía adicional conforme a las leyes locales del país donde se realizó la compra.
• Cualquier daño al producto causado por no seguir las instrucciones anulará esta garantía.
• Cualquier daño al producto causado por modificar la PCB, los componentes o la carcasa anulará esta garantía.
• Los problemas causados por el uso de firmware de terceros pueden no recibir soporte oficial por nuestra parte.
• Cualquier daño al producto causado por un uso inadecuado, como entrada de voltaje incorrecto, alta temperatura, caída al agua o al suelo, anulará esta garantía.
• Las imágenes en las instrucciones son solo de referencia. Nos reservamos el derecho de cambiar o modificar estos materiales sin previo aviso.

Hong Kong Office

GL Technology (Hong Kong) Limited
Unit 602, Building 281, Hong Kong Science Park,
Sha Tin, N.T., Hong Kong

Shenzhen Office

Shenzhen Guanglian Zhongtong Tech Co., Ltd.
Room 202, 10A, Shennan 1st Road Building, Shennan Street,
Futian District, Shenzhen, China, 518001
+86 755 83688810

ver. 20250110

GL·iNet 深圳市广联智通科技有限公司		产品名称	英西双语说明书
		物料编码	505-0384
设计	朱志豪	单位/比例	mm/1:1
审核	朱哲宇/何丰	尺寸	单页78*95mm 整体390*190mm±1mm
标准化	叶彩霞	材质	128g铜版纸/双面单色印刷/用于手指机器人FGB-01
批准	邓珊珊	日期	ver.2025/06/10

1234567