

- If you haven't changed the Wi-Fi password, you can find the password on the product label located on the bottom of the router.
- If you have changed the Wi-Fi password before, connect your device to the router's web admin panel via an Ethernet cable, then view or modify your Wi-Fi password in the Admin Panel.