

 
Let's get started.

GL·iNet
Puli AX
5G NR Wi-Fi 6 Router (GL-XE3000NR)

SETTING UP

- 1 Insert Cards & Power On**
When powered up, your router will broadcast both 2.4G and 5G Wi-Fi signal with the SSID: **GL-XE3000-xxx** and **GL-XE3000-xxx-5G**.


① Hot plug for TF card is not supported for this router.

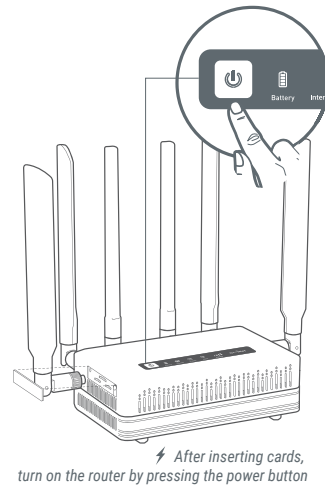

- 2 Connect via Wi-Fi**
Connect to the Wi-Fi called **GL-XE3000-xxx** or **GL-XE3000-xxx-5G**, and then input the default Wi-Fi password which is printed on the bottom label of the router.

Wi-Fi	☐
✓ GL-XE3000-xxx	☒
Search the SSID and connect to it	
Password	••••••••

 
Connect via LAN

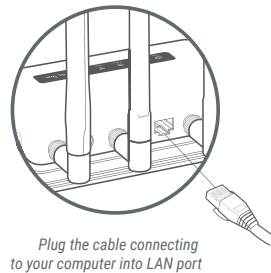

- 3 Set Up Router**
Visit <https://192.168.8.1> in your browser to set up your router; start by choosing your preferred language.

https://192.168.8.1
--

 SUPPORT

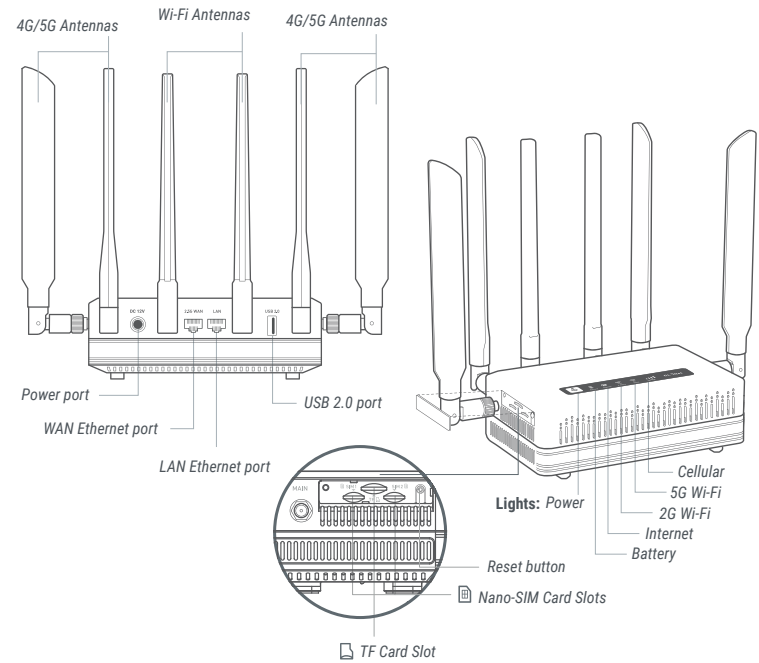

Repair / Reset

If you cannot access the web-based setup page or cannot connect to the router, you can press the **Reset** button:

- Press and hold for **3 seconds**, and then release to repair your network.
- Press and hold for **10 seconds**, and then release to reset the router to factory settings. All user data will be cleared.



<https://docs.gl-inet.com/en/4/>

Technical Supports

- For more detailed and updated instructions, please visit our website docs.gl-inet.com
- For further questions, you can get help from the following ways:
 - Email to support@gl-inet.com
 - Message us on our Facebook: [facebook.com/gl.inet.wifi/](https://www.facebook.com/gl.inet.wifi/)
 - Post questions in our forum: [forum.gl-inet.com](https://www.forum.gl-inet.com)
 - Ask professionals in other forums e.g. OpenWrt, LEDE or other professional websites

WARRANTY

- We provide **one year limited warranty** for routers and **3-month limited warranty** for accessories. Extra warranty may apply according to the local law in which the product purchase took place.
 - Highly recommend using the included **12V/2.5A** power adapter.
 - Any damage to the router caused by not following the instructions will render this warranty null and void.
 - Any damage to the router caused by modifying the PCBA, components or case will render this warranty null and void.
 - Issues caused by the use of third-party firmware may not get official support from us.
 - Any damage to the router caused by inappropriate use, e.g. inappropriate voltage input, high temperature, dropping in the water or on the ground will render this warranty null and void.
 - Pictures on the instructions are only for reference. We reserve the right to change or modify these materials without further notice.
 - Operation temperature: 0 ~ 40°C | Storage Temperature: -20 ~ 45°C | Humidity: 5%~95%, non-condensing | Storage Humidity: 5%~95%, non-condensing
- Please follow the below guidelines for daily use:**
- To avoid battery or device failure, do not remove or replace the non-removable battery.
 - Disposal of the device with battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Please don't charge the battery if the environment exceed the device operation temperature. Leaving the device in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
 - A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
 - If the device with the battery is stored for more than 3 months, the battery needs to be charged to ensure the battery life.
 - If the device is accidentally dropped on the ground, causing problems such as damage to the casing, it may also cause damage to the battery, please contact the device seller for repair or replacement in time.
 - If the device is off, press the power button before charging. If the battery indicator flashes, it is safe to charge. If not, avoid charging as this may indicate a damaged battery and could pose safety risks. Should you encounter this issue, please reach out to the device's seller for support.

FCC ID: 2AFIW-XE3000NR

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
3. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.
- Cet appareil/émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
(1) L'appareil ne doit pas produire de brouillage.
(2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
- This equipment complies with FCC / IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.
Cet équipement est conforme aux limites d'exposition aux rayonnements FCC / IC CNR-102 établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.
- I. for devices with detachable antenna(s), the maximum antenna gain permitted for devices in the bands 5250-5350 MHz and 5470-5725 MHz shall be such that the equipment still complies with the e.i.p. limit.
II. for devices with detachable antenna(s), the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.p. limits as appropriate.
- I. pour les dispositifs à antenne (s) détachable (s), le gain d'antenne maximal autorisé pour les dispositifs dans les bandes 5250-5350 MHz et 5470-5725 MHz doit être tel que l'équipement soit toujours conforme à la norme e.i.p. limite.
II. pour les dispositifs à antenne (s) détachable (s), le gain d'antenne maximal autorisé pour les dispositifs de la bande 5725-5850 MHz doit être tel que l'équipement soit toujours conforme à la norme e.i.p. les limites, le cas échéant.
- The user manual for LEAN devices shall contain instructions related to the restrictions mentioned in the above sections, namely that:
I. the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
II. le dispositif utilisé dans la bande 5150-5250 MHz est réservé à une utilisation en intérieur afin de réduire le risque de brouillage préjudiciable aux systèmes mobiles par satellite dans le même cas.
- The functions of Wireless Access Systems including Radio Local Area Networks(WAS/RLANs) within the band 5150-5350 MHz for this device are restricted to indoor use only within all European Union countries.


AT	BE	BG	HR	CY	CZ	DK	EE	FI	FR	DE	EL	HU	IS	IE	IT	
LV	LI	LT	LU	MT	NO	PL	PT	RO	SK	SI	ES	SE	CH	NL	UK(N)	UK

Hereby, GL TECHNOLOGIES (HONG KONG) LIMITED declares that the radio equipment type [5G NR Wi-Fi 6 Router, GL-XE3000NR] is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.gl-inet.com/products/certificate>


INSTALLATION

Adhesive Mount

 
- 1** Peel off the **matte white** film and then attach the adhesive pad to the wall mount permanently.

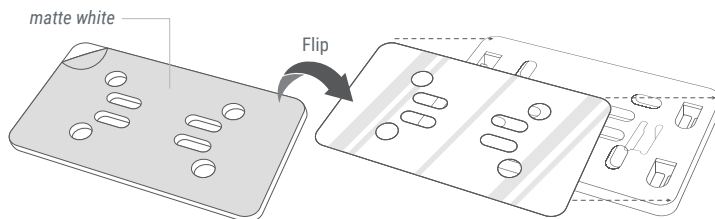

 - 2** Peel off the **glossy transparent** film and then stick the adhesive pad onto a clean and dry glass surface.

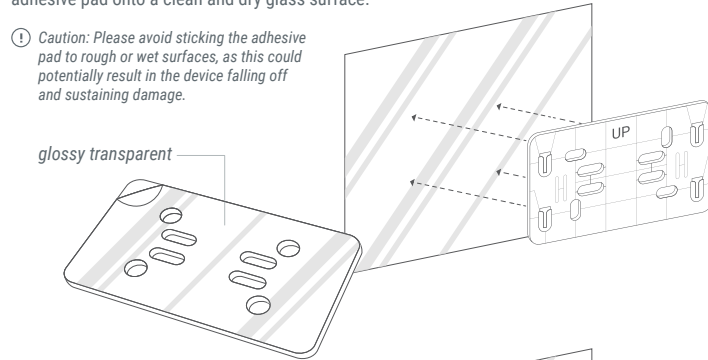


 - 3** Attach the router to the wall mount.

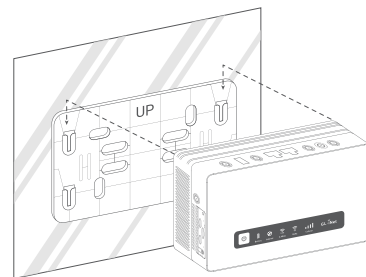


Screw Fixed Mount

 - 1** Align the wall mount to the wall. Secure 4 screws through the wall mount holes into the wall.

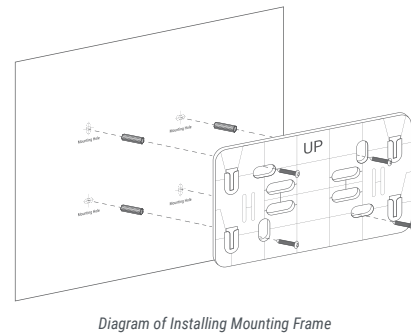

 - 2** Attach the router to the wall mount.

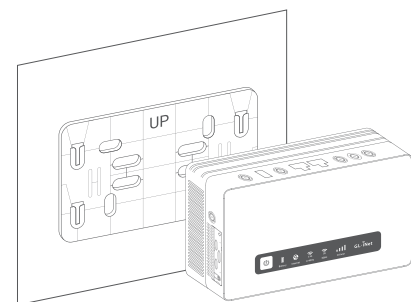

⚠ Please maintain a minimum distance of 20cm from the human body when using the product.

Hong Kong Office
GL Technologies (Hong Kong) Limited
Unit 601, Building 5W, Hong Kong Science
Park, Shatin, N.T., Hong Kong

Shenzhen Office
Shenzhen Guanglianchitong Tech Co., Ltd.
Room 305 - 306, Skyworth Digital Building, Shiyuan Street,
Baoan District, Shenzhen, China, 518000
(+86-0755-86466172)



Ver. 20230928