

说明书尺寸：50x100mm (折页) 材料：70双胶(双面印刷) 折叠线不要印刷

MPD668 USER MANUAL	Pairing With BT Devices When you power on the speaker, it is already on the BT mode. Once the speaker is turned on please go to your smart device/cell phone and search to connect to BT. You should see the option to connect to "MPD668" Please select it and you should be connected. Once the speaker is switched on, it will automatically connect with the last paired BT device within the range. Accessories included: A charge cable, a Aux 3.5mm cable	Product specifications ●BT: 5.3 ●Working distance: 10M ●SNR: ≥95db ●Battery:3.7V 1500mAh ●Normal volume playing time: 2H ●Speaker driver: Ø 52 mm*2 ●Power: 4Ω/8W *2 ●Frequency response: 120Hz-18KHz ●Unit size: 235mm*99mm*110mm ●Unit weight: 835g ●Charging: 5V/1000mA Product Feature 1.International advanced BT chip and circuit design techniques, support all BT device ; 2.Built-in Low-freq radiators, Super dynamic low-frequency sound pressure gain, listening transparent and flexible. 3.Can play music after pairing with BT device .for example mobile/ MID/ TV, the working distance is more than 10M. 4.Support AUX IN audio input
5.Built-in MP3 decoding, can directly play TF card, U disk 6.Build-in the FM radio module, convenient to auto scan and save radio channels. 7.With Mic for hands-free phone call function. 8.Support TWS key & slot function:	1.TF slot: it can decode and play MP3/WAV format audio when put TF card into the slot 2.DC 5V charging slot:use the standard TYPE-C charging cable for power charging. 3.AUX : it can play audio via 3.5mm AUX cable to audio device 4.USB slot: it can decode and play MP3/WAV format audio when put USB card into the slot 5.When play music,press short for option of the LED flashing light, press long to open/close. 6.Power switch: Press long for power on /power off;press short to swith model(USB card/TF card/BT/ FM)switch to "line in" if via AUX cable to audio device. 7.When play music,(USB card/ TF card/LINE IN/BT), short press for "play/pause". Under BT mode with mobile paired,when call coming,press short to answer a call hands-free,press again to hand up, press twice to ring up a call.	8.When play music , press short for next song/next FM station, press long to turn up the volume. 9.When play music, press short for last song/last FM station, press long to turn down the volume. How to use the Radio Press short "FM" to enter FM mode, and press short "▶" to search station automatically. Press it again to stop searching and save the channels. Press short "+/-" to navigate up/ down though saved channels. You may inset the aux cable which will help to get stronger radio signal. How to connect two speakers using the TWS function Keep the two speaker under Wireless mode without pairing, press the "M" key for 4 seconds either of the speaker until hear a hint, now it is TWS mode . Press the "M" key for 4 seconds either of the speaker to stop TWS after disconnect wireless.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.