

INSTRUCTION

PARAMETERS

- HELICOPTER SIZE: 300X300X60 mm
- HELICOPTER WEIGHT: ~110g
- HELICOPTER BATTERY: 3.7V 500mA
- REMOTE BATTERIES: 4x1.5VAA (NOT INCLUDED)

4x8520 ENGINE

2.4GHZ RANGE

REMOTE CONTROL

Labels for the 3D Remote:

- 3D Remote
- Power
- 3D Remote 2
- Left stick
- Right stick
- High speed
- Video
- Forward/backward mode adjust
- Low speed
- Photo
- Mode switch
- Left/right/forward/backward micro adjust

REMOTE WITH LED SCREEN (NOT INCLUDED, PURCHASED SEPARATELY)

Labels for the Remote with LED Screen:

- LED SCREEN
- ONLY DISPLAYS STATISTICS

NOTE: VIDEO RECORDING BUTTON ONLY WORKS WHEN ADDITIONAL CAMERA IS ATTACHED

NOTE: VIDEO RECORDING BUTTON ONLY WORKS WHEN ADDITIONAL CAMERA IS ATTACHED

PLEASE READ THE INSTRUCTION THOROUGHLY BEFORE USING: keep this instructions for future reference.

- Rollback measures:
 - Reorient or relocate the receiving antenna
 - Increase the separation between the equipment and receiver
 - Connect the equipment into a circuit different from that to which the receiver is connected
 - Consult the dealer or an experienced radio/TV technician for help