

 
Model HX-EP240

HMDX

QUICK START GUIDE

CONTENTS


CONTENIDO / CONTENU

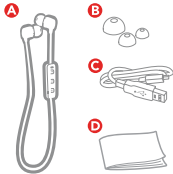

- A - Earbuds**
Écouteurs
Audífonos
- B - Ear tips**
Embouts auriculaires
Puntas de goma para el oído
- C - Charging cord**
Câble de recharge
Cable de recarga

CHARGING

 RECARGA DE BATERÍAS / CHARGE

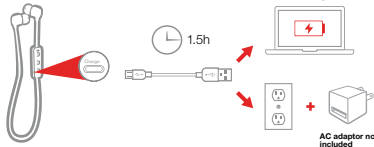

AC adaptor not included

El adaptador de CA no está incluido
Adaptateur c.a. non inclus.

EN Charge 1.5 hours for up to 3 hours of play time.

ES Una recarga de 1.5 horas rinde hasta 3 horas de operación.

FR Une charge de 1.5 heures donne jusqu'à 3 heures d'autonomie de la batterie.

CONTROLS

COMMANDES / CONTROLES



- A – Volume up / next track (⏸ 3s)**
Augmentation du volume /
piste suivante (⏸ 3s)
Subir el volume /
pista siguiente (⏸ 3s)

 


- B – Play/pause**
Lecture/pause
Reproducir/pausa



- C – Volume down / previous track (⏸ 3s)**
Diminution du volume /
piste précédente (⏸ 3s)
Bajar el volume /
pista anterior (⏸ 3s)

- D – Status light**
Indicateur de l'état
Luz de estado



BLUETOOTH® CONNECTION

 
CONECCIÓN BLUETOOTH® / CONNEXION BLUETOOTH



- EN** Press and hold the power button for 5 seconds to power on. Enable *Bluetooth* on your device and choose **HMDX Bold** from the list. If prompted, enter code "0000."
- ES** Para encender, deprima y mantenga el botón de poder deprimido por 3 segundos. Habilite la función *Bluetooth* en su dispositivo y elija **HMDX Bold** de la lista. Si se requiere, meta el código "0000".
- FR** Tenez le bouton de mise en marche enfoncé pendant 3 secondes pour allumer l'appareil. Activez la fonction *Bluetooth* de votre appareil et choisissez **HMDX Bold** dans la liste des signaux détectés. Si l'appareil vous le demande, inscrivez le code « 0000 ».

SPEAKERPHONE CONTROLS

CONTROLES PARA EL PARLANTE DEL TELÉFONO /
SCOMMANDES DU TÉLÉPHONE À HAUT-PARLEUR



EN Press play/pause to answer and end a call. See the full user guide for complete details.

FR Appuyez sur le bouton lecture pause pour répondre ou raccrocher. Consultez le guide complet de l'utilisateur pour obtenir de plus amples directives.

ES Presionar el botón reproducir/pausa para recibir y finalizar la llamada. Revise la guía de uso para los detalles de uso completos.

Battery:

Rated Voltage: 3.7V

Capacity: 60mAh

Feature:

Support BT 4.2+EDR

Operation Frequency: 2402-2480 MHz

Type of Modulation: FHSS

Antenna Type: PCB Antenna

Antenna Gain: 0 dBi

NEED MORE

BESOIN D'AIDE? /
¿NECESITA MÁS AYUDA?

EN For complete user guide and to register your product, visit us online.

FR Pour consulter un guide complet de l'utilisateur et enregistrer votre appareil, visitez notre site Web.

ES Para la Guía de Uso completa, y para registrar su producto con nosotros, por favor visítenos en nuestro sitio web.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.